

CIRCUIT DRAWN WITH
POWER SUPPLY OFF

FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
No RWS


TRANSFORMER TAPPING OPTIONS

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 -
FUSE FS3 - 20A ATO FAST ACTING

TYPE 5 24VDC

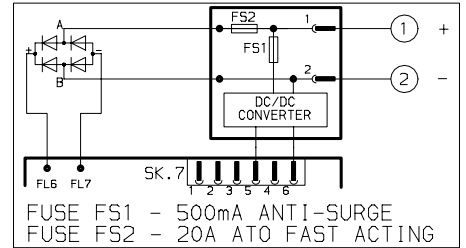

ALL TRANSFORMER TYPES -
PS1 SELF RESETTING FUSE

NOTE

REFER TO PUBLICATION E175E FOR
APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS
4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES
TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION
TO BE 100mS.


CURRENT DRAWN FROM EACH REMOTE
CONTROL SIGNAL IS 5mA ON 24V DC
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END
BY TERMINAL No. OR TAG No.

PAKSCAN ONLY

CARE SHOULD BE TAKEN TO ENSURE
THAT CIRCUITS CONNECTED TO
TERMINALS 4 OR 5 ARE NOT CONNECTED
DIRECTLY OR INDIRECTLY TO GROUND.

INDICATION CONTACTS S1-S4 AND EXTRA
INDICATION CONTACTS S5-S8 ARE SHOWN
IN THEIR DEFAULT CONFIGURATION.
CONTACTS MAY BE CONFIGURED FOR ANY
OF THE FUNCTIONS DESCRIBED IN E175E

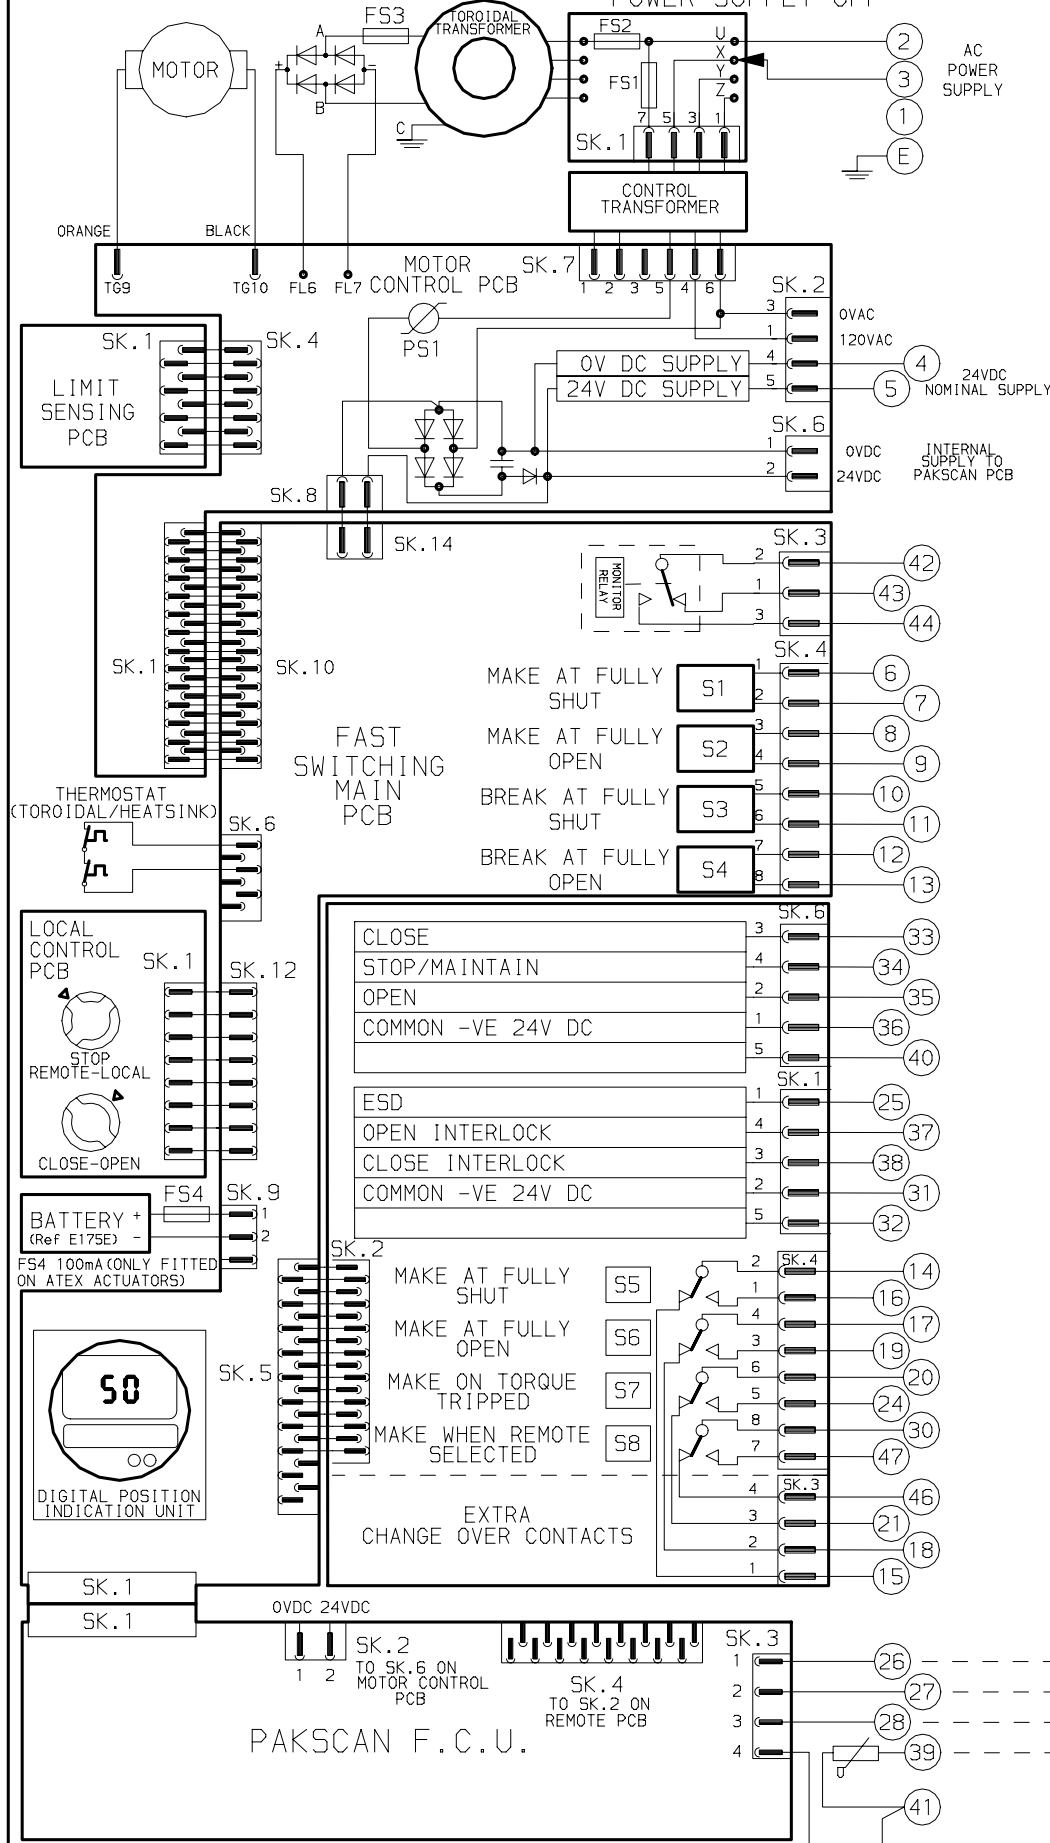

THE INFRA-RED SETTING TOOL ENABLES THE ACTUATOR TO BE
CONFIGURED FOR VARIOUS FORMS OF HARDWIRED REMOTE
CONTROL CIRCUITS.
THE SETTING TOOL ALSO ENABLES THE PAKSCAN F.C.U. BAUD RATE AND ADDRESS TO BE CONFIGURED.

No	DATE	REVISION DETAILS	www.rotork.com		CONFIG BY PJW	IQTM + PAKSCAN & INDICATION RELAYS.
01	-	First Issue	ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel: 01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel: 585-247-2304	DATE 030511 CHECKED JC1 BASE WD 7100A200 JOB No - M.I.No -	

CIRCUIT DIAGRAM No -REV
7100A200-01
B1 C1 B2 C2 B1 C1 M1 V1