


CIRCUIT DRAWN WITH
POWER SUPPLY OFF

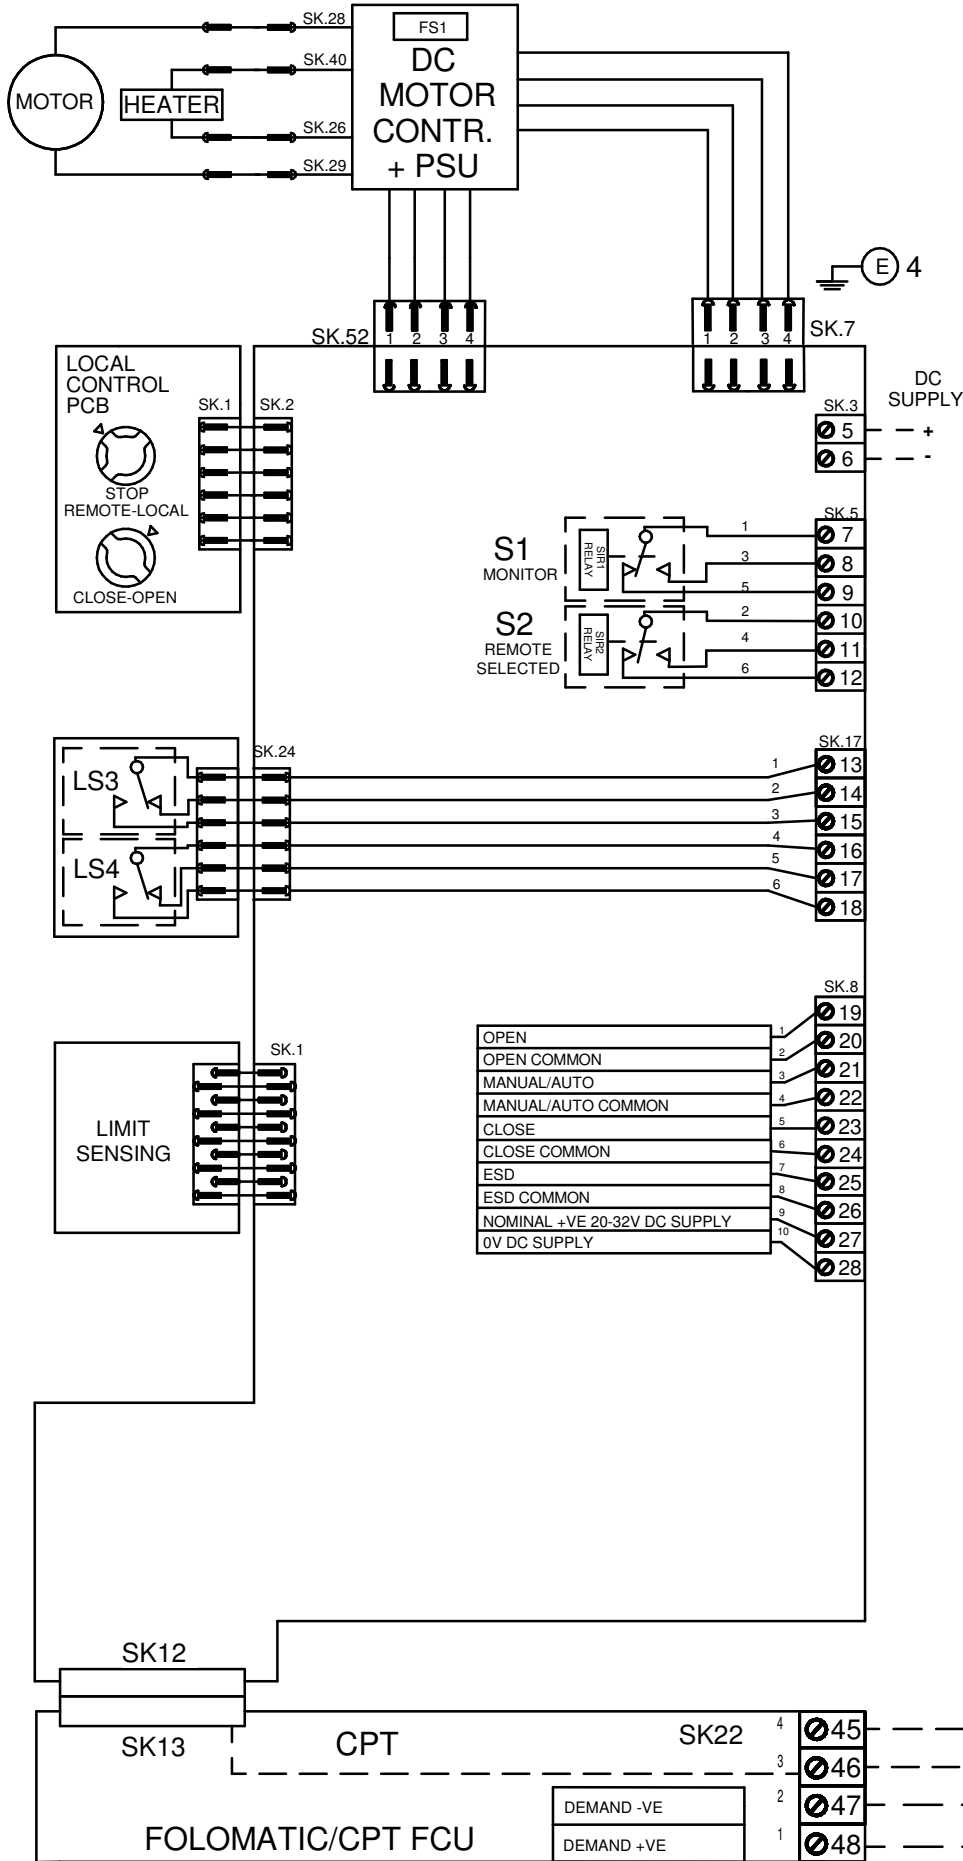

FS1 - See ROMPAK PUB008-006 Installation and Maintenance Manual

NOTE

FOR TYPICAL REMOTE CONTROL INDICATING, MONITORING AND ALARM CIRCUITS SEE PUBLICATION DOC862

MAX EXTERNAL LOAD ON S1/S2 RELAYS TO BE 5A. MAX VOLTAGE 120V AC/DC

CONTROL SIGNAL THRESHOLD VOLTAGES:
MAX 60V DC
TO BE MINIMUM 'ON' 14V DC AT 1mA
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC

LS3 / LS4
MAXIMUM CURRENT 3A MAXIMUM VOLTAGE 120V AC/DC


ACTUATOR CONFIGURATION VIA DIL SWITCH SW2

REFER TO INSTALLATION INSTRUCTIONS FOR DIL SWITCH SELECTION

FOLOMATIC DEFAULTS TO 4-20 mA
0-20 mA CONTROL

CPT 4-20 mA
4 mA = CLOSED
20 mA = OPEN

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB008-006

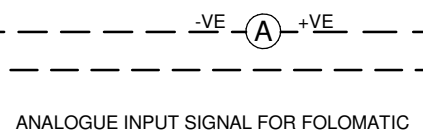

Iss	Date	Chkd	Revision Details
3	160414	JJ	Drawing layout and text change
4	290719	JJ	Delete SK.10

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-247-2304

ROMPAK DC - NO TORQUE SWITCHES+FOLO/CPT

Drawn by: VYA
Date : 16-Apr-14
Base WD: R202-100
Job No : - -
MI No : - -

Circuit Diagram No	Issue No
R202-100	4