


FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT RWS100

TRANSFORMER TAPPING OPTIONS					
Тар	Nominal 50/60Hz				
TYPE 1					
W	220/230				
Х	380/400				
Y	400/415/420				
Z	440/460				
FUSE FS1=250mA ANTI-SURGE					
TYPE 2					
W	346/380				
Х	480/500				
Y	240/240				
Z	550/575				
FUSE FS1=250mA ANTI-SURGE					

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY. SUGGESTED FUSES :-IQ10-20:10 Amp FERRAZ G330010 IQ25-35:20 Amp FERRAZ K330013 ALTERNATIVES = IQ10-20:10 Amp SIBA 50-179-06/10A IQ25-35:20 Amp SIBA 50-179-06/20A OR EQUIVALENT PROTECTIVE DEVICE.

	<u>Date</u> 031012 100113	PJW	<u>Revision Details</u> NOTE 2 UPDATED. Re-track of the 24V DC pin	www. rot	OrK .com	IQM + HART			
4 5	121113 120614 080616	JC1 JBA	of SK14 to behind the diode. Hart demand idents added. Slot A PUB Ref. changed to 003 Updated notes on page 2.	BATH, BA1 3JQ	ROCHESTER	Date : 190912 Base WD: 200H2000 Job No :	Circuit Diagram Number 200H2000 B1 C1 B2 C2	° No	Sheet 1 Of 2

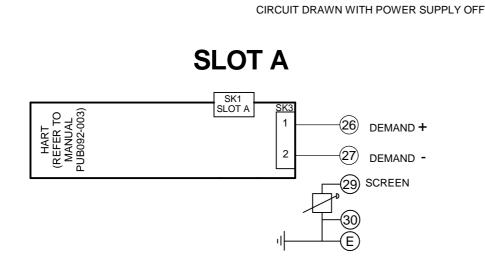

NOTES

1.FUSES:

-PS1 is a self-resetting fuse.

-Refer to publication PUB002-039 for approved fuses FS1 and FS2. -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not gauaranteed. **2.REMOTE CONTROL:**

-For typical remote control circuits refer to:

-RWS indicated or PUB002-041.

- -For DC and AC control, connect –ve/0V to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:

-DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.

-Control signal duration to be 100ms minimum.

-Maximum current drawn from remote control signals is: -8mA at 24Vdc.

-Supply provided on terminals 4 & 5:

-Intended for remote control.

-Max external load 5W at 24Vdc

3.INDICATION:

-For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting.

-Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions.

-Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.

Circuit Diagram Number 200H2000 6 200

See Sheet 1 for all Revision details/information

IQ3