

Drawn by: PJW Circuit Diagram Number correct termination SW1 ROTORK CONTROLS LTD ROTORK CONTROLS INC Issue No Sheet Date : 210113 PROFIBUS PUB SHT2 UPDATED WAS PUB008-005 'TERMINATION' removed from 250718 BATH, BA1 3JQ ROCHESTER 5 Base WD: 201P2004 1 **ENGLAND** NY 14624, USA 6 6 260918 DH Job No : - of 2 SW1 on Sht 2. B1 C1 B2 C2 Tel:01225-733200 Tel:585-247-2304 MI No

IQM + SINGLE CHANNEL PROFIBUS MODULE +

PROFIBUS DISCONNECT & CPT

www.**rotork**.com

Date

020916

3 130616

Chkd


PW

PW


Revision Details

Updated page 2 to show

Updated notes on page 2.

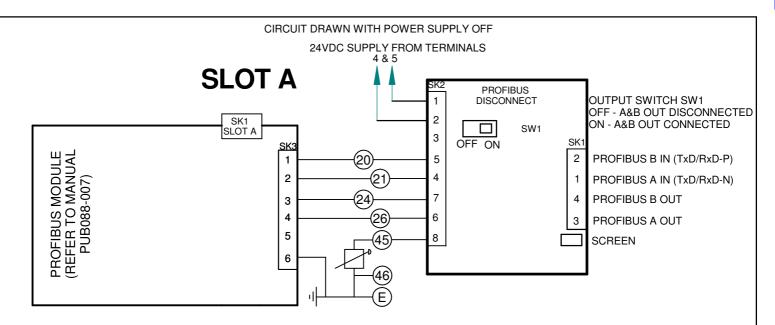

THE SETTING TOOL ENABLES THE PROFIBUS ADDRESS TO BE CONFIGURED.

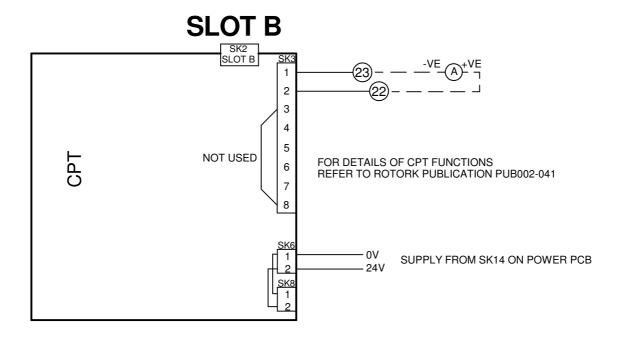

NOTES

- -PS1 is a self-resetting fuse.
- -Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- -For typical remote control circuits refer to: -RWS indicated or PUB002-041.
- -For DC control connect -ve to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:
- -DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
- -Control signal duration to be 100ms minimum.
- -Maximum current drawn from remote control signals is:
- -8mA at 24Vdc
- -Supply provided on terminals 4 & 5:
- -Intended for remote control.
- -Max external load 5W at 24Vdc.

3.INDICATION:

- -For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting.
- -Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown
- "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions
- -Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

- -Battery maintains local and remote "S" contact indication only.
- -Refer to installation manual for approved replacement battery types.

Circuit Diagram Number 2 201P2004 6 of 2