

FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT **RWS101**

TRANSFORMER TAPPING OPTIONS	
Tap	Nominal 50/60Hz
VOLTAGE	50HZ/60HZ
LOW	115
HIGH	230
FUSE FS1=250mA ANTI-SURGE	
CAPACITOR START/RUN (CS/CS2 AND CR/CR2) COMBINATIONS & VALUES VARY WITH SUPPLY VOLTAGE & ACTUATOR SIZE.	



REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

TORQUE SENSOR

POSITION SENSOR 10 WAY

BATTERY - +

FS2 (IF FITTED) 100mA

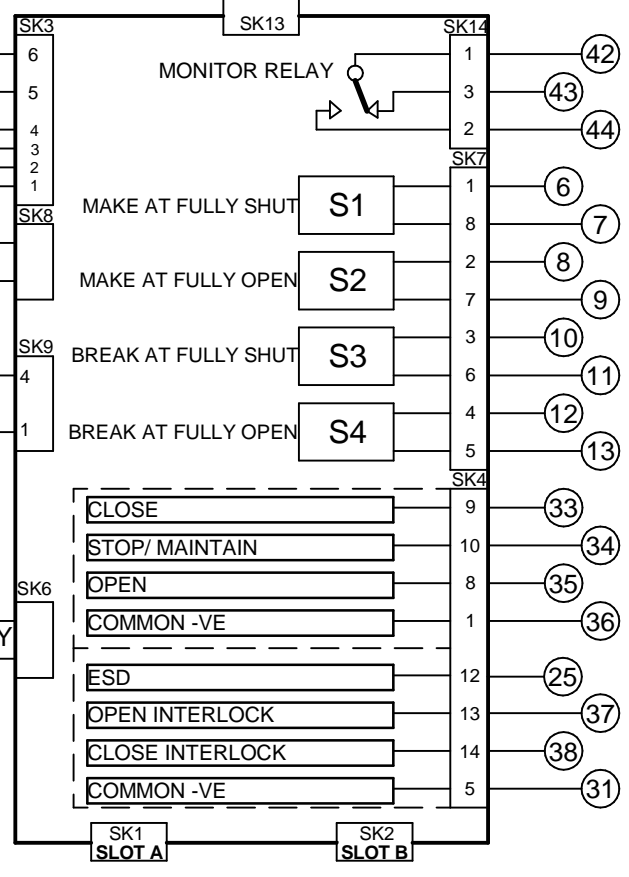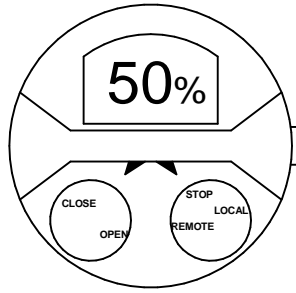

Iss	Date	Chkd	Revision Details
1	110613	PJW	FIRST ISSUE
2	240614	MR	SHEET 2, NOTE 1 UPDATED
3	210415	JJB	PAKSCAN WAS STD NOW ISOLATED.

www.rotork.com


ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-247-2304

IQ SINGLE PHASE + 120VAC REMOTE CONTROL SUPPLY

Drawn by: JC1
Date : 110613
Base WD: 130K2000
Job No : --
MI No : --

Circuit Diagram Number		Issue No	Sheet
130K2000		3	1
B1	C1	B2	C2

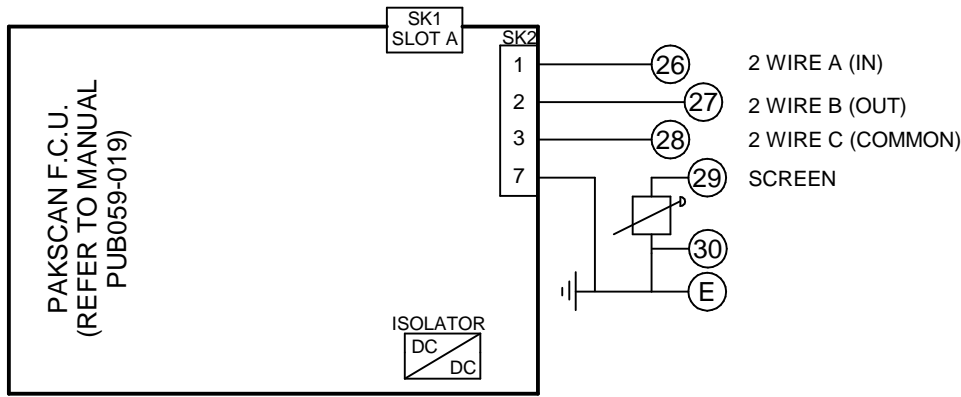

CARE SHOULD BE TAKEN TO ENSURE THAT CIRCUITS CONNECTED TO TERMINALS 4 OR 5 ARE NOT DIRECTLY OR INDIRECTLY CONNECTED TO GROUND.

THE SETTING TOOL ENABLES THE PAKSCAN F.C.U BAUD RATE AND ADDRESS TO BE CONFIGURED

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" $\geq 16Vdc$ / "off" $\leq 8Vdc$, max 60Vdc.
 - AC: "on" $\geq 60Vac$ / "off" $\leq 40Vac$, max 120Vac.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc or 12mA at 120Vac.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc / 5VA at 120Vac

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- “S” contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown “unavailable”). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote “S” contact indication only.
- Refer to installation manual for approved replacement battery types.