


FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT RWS102

TR ANSFOR M	TRANSFORMER TAPPING OPTIONS					
Тар	Nominal 50/60Hz					
TYPE 1						
W	220/230					
Х	380/400 400,415/420					
Y						
Z	440/460					
FUSE FS1=250mA ANTI-SURGE TYPE 2						
						W
Х	480/500					
Y	240/240					
Z	550/575					


REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY. SUGGESTED FUSES :-IQ10-20:10 Amp FERRAZ G330010 IQ25-35:20 Amp FERRAZ K330013 ALTERNATIVES = IQ10-20:10 Amp SIBA 50-179-06/10A IQ25-35:20 Amp SIBA 50-179-06/20A OR EQUIVALENT PROTECTIVE DEVICE.

L									
1	ss Da	te Chł	d Revision Details	www. rot	ork.	IQM + FOLOMA	ATIC + EXT PWR CPT + INDIC	CATION	
	1 010	713 JC ⁻			UL K.com	RELAYS			
	2 230	614 M	400v added to type 1 tapping Y. Note added to	ROTORK CONTROLS LTD	RUTURE CONTROLS INC	Drawn by: PJW Date : 010713	Circuit Diagram Number	Issue Sheet	
	3 130	516 PV	sheet 2 note 1. Updated notes on page 2.	BATH, BA1 3JQ ENGLAND	ROCHESTER NY 14624, USA	Base WD: 207B0010	207B0010	2 1	
				Tel:01225-733200	Tel:585-247-2304	Job No : MI No :	B1C1B2C2B1C1M1V1	J of 2	

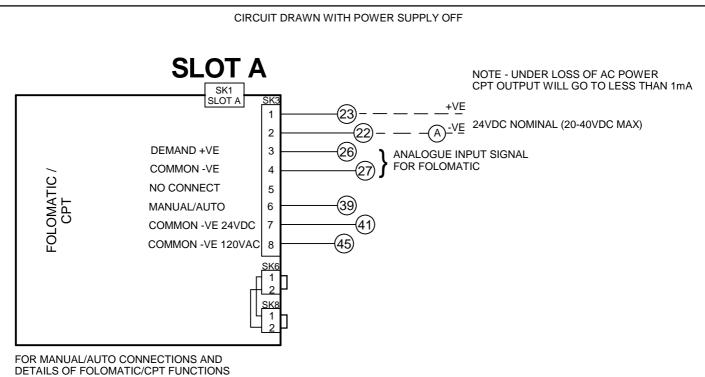

REFER TO ROTORK PUBLICATION PUB002-041

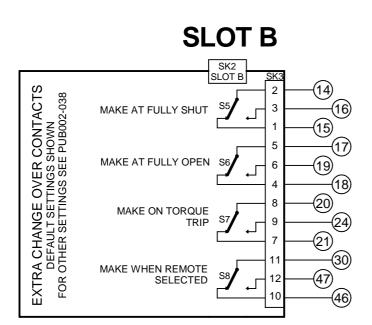

NOTES 1.FUSES:

-PS1 is a self-resetting fuse.

-Refer to publication PUB002-039 for approved fuses FS1 and FS2. -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed. 2.REMOTE CONTROL:

-For typical remote control circuits refer to: -RWS indicated or PUB002-041.

- -For DC and AC control, connect -ve/0V to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:

-DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.

-Control signal duration to be 100ms minimum.

-Maximum current drawn from remote control signals is: -8mA at 24Vdc

-Supply provided on terminals 4 & 5:

-Intended for remote control.

-Max external load 5W at 24Vdc

3.INDICATION:

-For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting.

-Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions.

-Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.

> Circuit Diagram Number 2 207B0010 3 of 2

See Sheet 1 for all Revision details/information