

FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT RWS100


TRANSFORMER TAPPING OPTIONS					
Тар	Nominal 50/60Hz				
TYPE 1					
W	220/230				
Х	380/400				
Y	400,415/420				
Z	440/460				
FUSE FS 1=250mA ANTI-S URGE TYPE 2					
Х	480/500				
Y	240/240				
Z	550/575				
FUSE FS1=250mA ANTI-SURGE					

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY. SUGGESTED FUESES :-IQ10-20:10 Amp FERRAZ G330010 IQ25-35:20 Amp FERRAZ K330013 ALTERNATIVES = IQ10-20:10 Amp SIBA 50-179-06/10A IQ25-35:20 Amp SIBA 50-179-06/20A OR EQUIVALENT PROTECTIVE DEVICE.

		VGB	Revision Details PUB091-004 was PUB091-003 and knob		O rk .com	IQM + CPT + SINGLE CHANEL MODBUS MODULE + INTERRUPTER TIMER			
- 1	270116 130616	тн	position changed. Updated modbus note Updated notes on page 2.	ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304	Drawn by: JC1 Date : 030114 Base WD: 201M2001 Job No : MI No :	Circuit Diagram Number 201 M2001 B1 C1 B2 C2	5 No	Sheet 1 of 2

IQ3

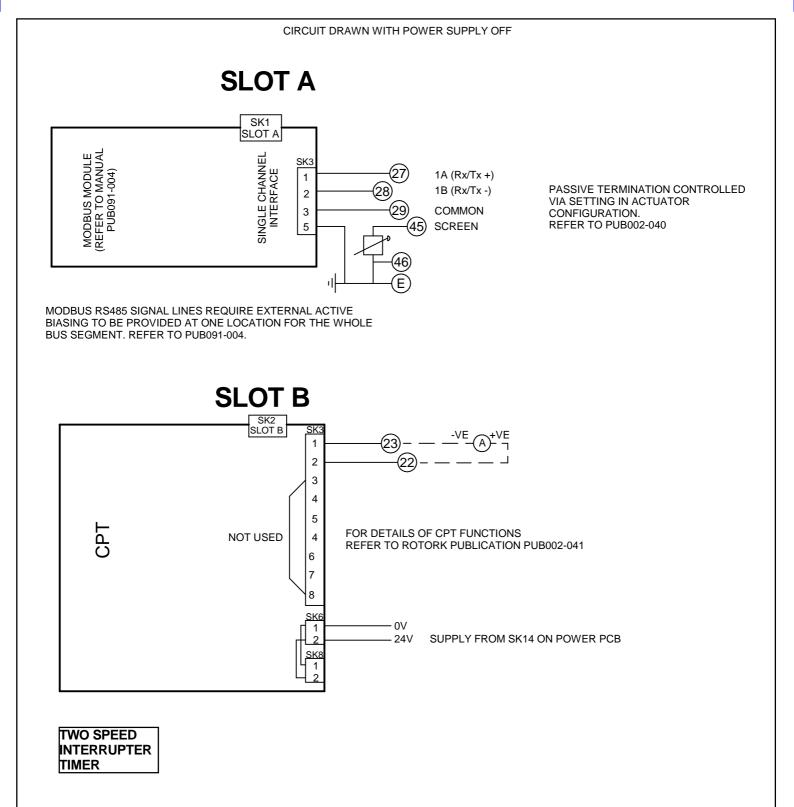

NOTES 1.FUSES:

- -PS1 is a self-resetting fuse.
- -Refer to publication PUB002-039 for approved fuses FS1 and FS2. -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- -For typical remote control circuits refer to: -RWS indicated or PUB002-041.
- -For DC and AC control, connect -ve/0V to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:
- -DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
- -Control signal duration to be 100ms minimum.
- -Maximum current drawn from remote control signals is: -8mA at 24Vdc
- -Supply provided on terminals 4 & 5:
- -Intended for remote control.
- -Max external load 5W at 24Vdc

3.INDICATION:

-For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting.

-Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions.

-Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.



See Sheet 1 for all Revision details/information