

FOR TYPICAL REMOTE CONTROL **DETAILS, SEE DOCUMENT**


TRANSFORMER TAPPING OPTIONS					
Тар	Nominal 50/60Hz				
TYPE 1					
W	220/230 380/400 400,415/420 440/460				
Х					
Υ					
Z					
FUSE FS 1=250mA ANTI-SURGE					
TYPE 2					
W	346/380				
Х	480 <i>/</i> 500				
Υ	240/240				
Z	550 <i>/</i> 575				
FUSE FS 1=250mA ANTI-SURGE					

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY. SUGGESTED FUESES:-IQ10-20:10 Amp FERRAZ G330010 IQ25-35:20 Amp FERRAZ K330013 ALTERNATIVES =


IQ10-20:10 Amp SIBA 50-179-06/10A IQ25-35:20 Amp SIBA 50-179-06/20A OR EQUIVALENT PROTECTIVE

	<u>Date</u> 310314	Revision Details First Issue.	www. rotork .com		IQM + FOLOMA TIMER	OMATIC + CPT + EXTRA RELAYS S5-S8 +			
	230614 130616	 400v added to type 1 tapping Y. Note added to sheet 2 note 1. Updated notes on page 2.	ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304	Drawn by: PMJ Date : 310314 Base WD: 203B0011 Job No : MI No :	Circuit Diagram Number 203B0011 B1 C1 B2 C2 B1 C1 M1 V1	No 2	Sheet 1 of 2	

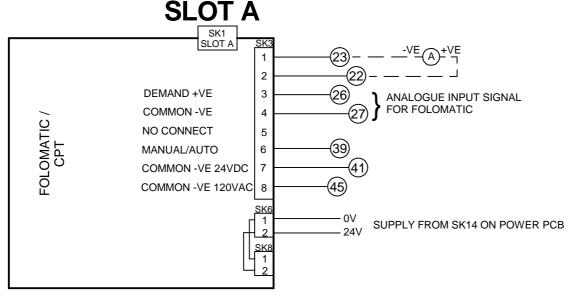

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB002-041

SLOT B

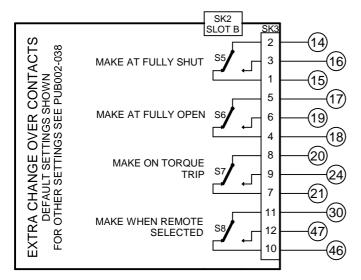

TWO SPEED INTERRUPTER TIMER

NOTES

1.FUSES:

- -PS1 is a self-resetting fuse.
- -Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- -For typical remote control circuits refer to:
- -RWS indicated or PUB002-041.
- -For DC and AC control, connect -ve/0V to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:
- -DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
- -Control signal duration to be 100ms minimum.
- -Maximum current drawn from remote control signals is:
- -8mA at 24Vdc
- -Supply provided on terminals 4 & 5:
- -Intended for remote control.
- -Max external load 5W at 24Vdc

3.INDICATION:

- -For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default
- -Refer to PUB002-040 for functions and configuration instructions.
 -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection.
- -Refer to PUB002-040 for monitored functions and configuration instructions.
- -Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY

- -Battery maintains local and remote "S" contact indication only.
- -Refer to installation manual for approved replacement battery types.

Circuit Diagram Number $\begin{bmatrix} \text{Ssue} \\ \text{No} \end{bmatrix}$ Sheet $\begin{bmatrix} 2 \\ \text{of } 2 \end{bmatrix}$