

FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT **RWS102**

TRANSFORMER TAPPING OPTIONS		
Tap	Nominal 50/60Hz	FUSE FS1
VOLTAGE	50HZ/60HZ	
LOW	115	500mA
HIGH	230	250mA
FUSE FS1 TO BE ANTI SURGE		
CAPACITOR START/RUN (CS/CS2 AND CR/CR2) COMBINATIONS & VALUES		
VARY WITH SUPPLY VOLTAGE & ACTUATOR SIZE.		



REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

TORQUE SENSOR

POSITION SENSOR 10 WAY

BATTERY -

FS2 (IF FITTED) 100mA +

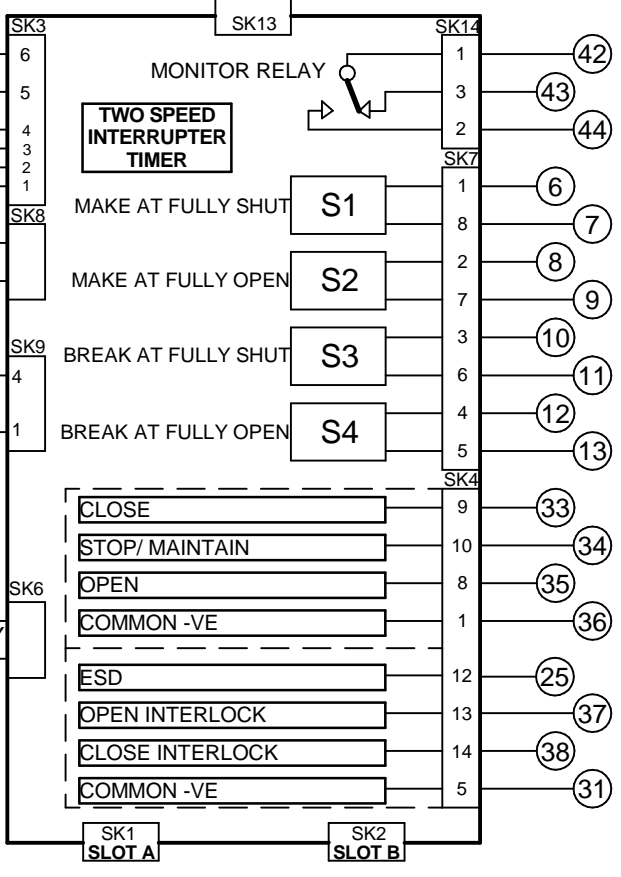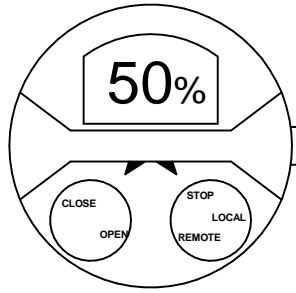

Iss	Date	Chkd	Revision Details
1	240614	PJW	First Issue.
2	270116	TH	Updated modbus note

**www.rotork.com**

ROTORK CONTROLS LTD  
BATH, BA1 3JQ  
ENGLAND  
Tel:01225-733200

ROTORK CONTROLS INC  
ROCHESTER  
NY 14624, USA  
Tel:585-247-2304

**IQ SINGLE PHASE + FOLOMATIC / CPT + MODBUS + TIMER**

Drawn by: JC1  
Date : 240614  
Base WD: 123M2000  
Job No : --  
MI No : --

Circuit Diagram Number		Issue No	Sheet
<b>123M2001</b>		<b>2</b>	<b>1</b>
B1	C1	B2	C2

