



FOR TYPICAL REMOTE CONTROL
DETAILS, SEE DOCUMENT
RWS102

| TRANSFORMER TAPPING OPTIONS | | |
|---|-----------------|----------|
| Tap | Nominal 50/60Hz | FUSE FS1 |
| VOLTAGE | 50HZ/60HZ | |
| LOW | 115 | 500mA |
| HIGH | 230 | 250mA |
| FUSE FS1 TO BE ANTI SURGE | | |
| CAPACITOR START/RUN (CS/CS2 AND CR/CR2) COMBINATIONS & VALUES VARY WITH SUPPLY VOLTAGE & ACTUATOR SIZE. | | |

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED



FS2 (IF FITTED) 100mA

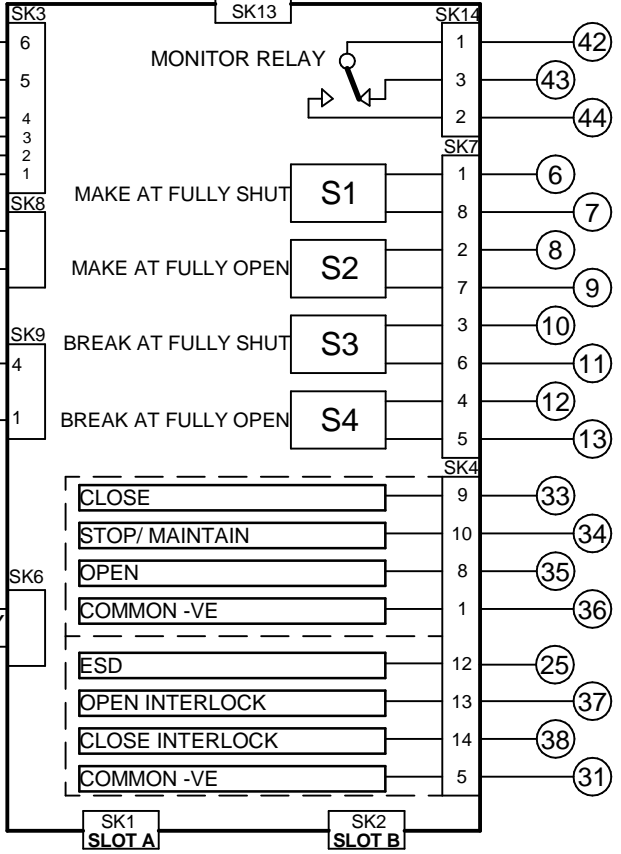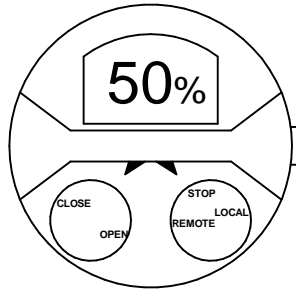

| Iss | Date | Chkd | Revision Details |
|-----|--------|------|--|
| 1 | 260515 | JC1 | First Issue. |
| 2 | 070717 | JC1 | Loop powered CPT note sht.2 corrected. |

www.rotork.com


| | |
|---|---|
| ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200 | ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304 |
|---|---|

IQ SINGLE PHASE + FOLOMATIC + EXT PWR CPT + AUX POWER

| | | | |
|--|---|----------------------|---------------------------|
| Drawn by: PJW Date : 260515 Base WD: 127B1000 Job No : -- MI No : -- | Circuit Diagram Number 127B1000 | Issue No 2 | Sheet 1 of 2 |
|--|---|----------------------|---------------------------|


| | | | | | | | | | |
|----|----|----|----|--|--|--|--|--|--|
| B1 | C1 | B2 | C2 | | | | | | |
|----|----|----|----|--|--|--|--|--|--|

SLOT A

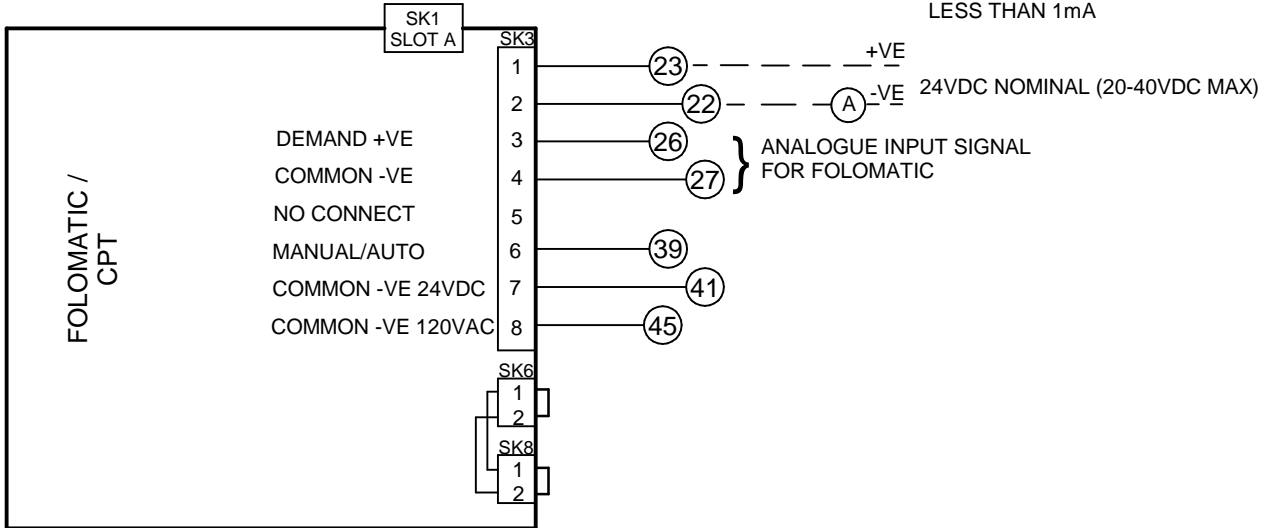

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB002-041

SLOT B

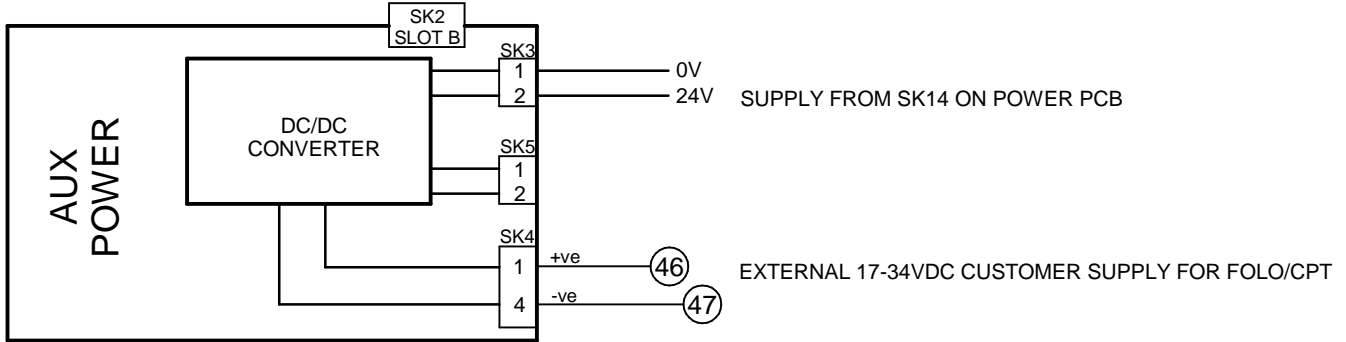

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
 - AC: "on" ≥60Vac / "off" ≤40Vac, max 120Vac.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc or 12mA at 120Vac.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc / 5VA at 120Vac

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- “S” contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown “unavailable”). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote “S” contact indication only.
- Refer to installation manual for approved replacement battery types.

See Sheet 1 for all Revision details/information

| | | |
|------------------------|----------|--------|
| Circuit Diagram Number | Issue No | Sheet |
| 127B1000 | 2 | 2 of 2 |