



PLUG SELECTED VOLTAGE WIRE INTO
TERMINAL "T"
PLACE TWO REMAINING WIRES INTO
POSITIONS "P"
(ORDER NOT IMPORTANT)

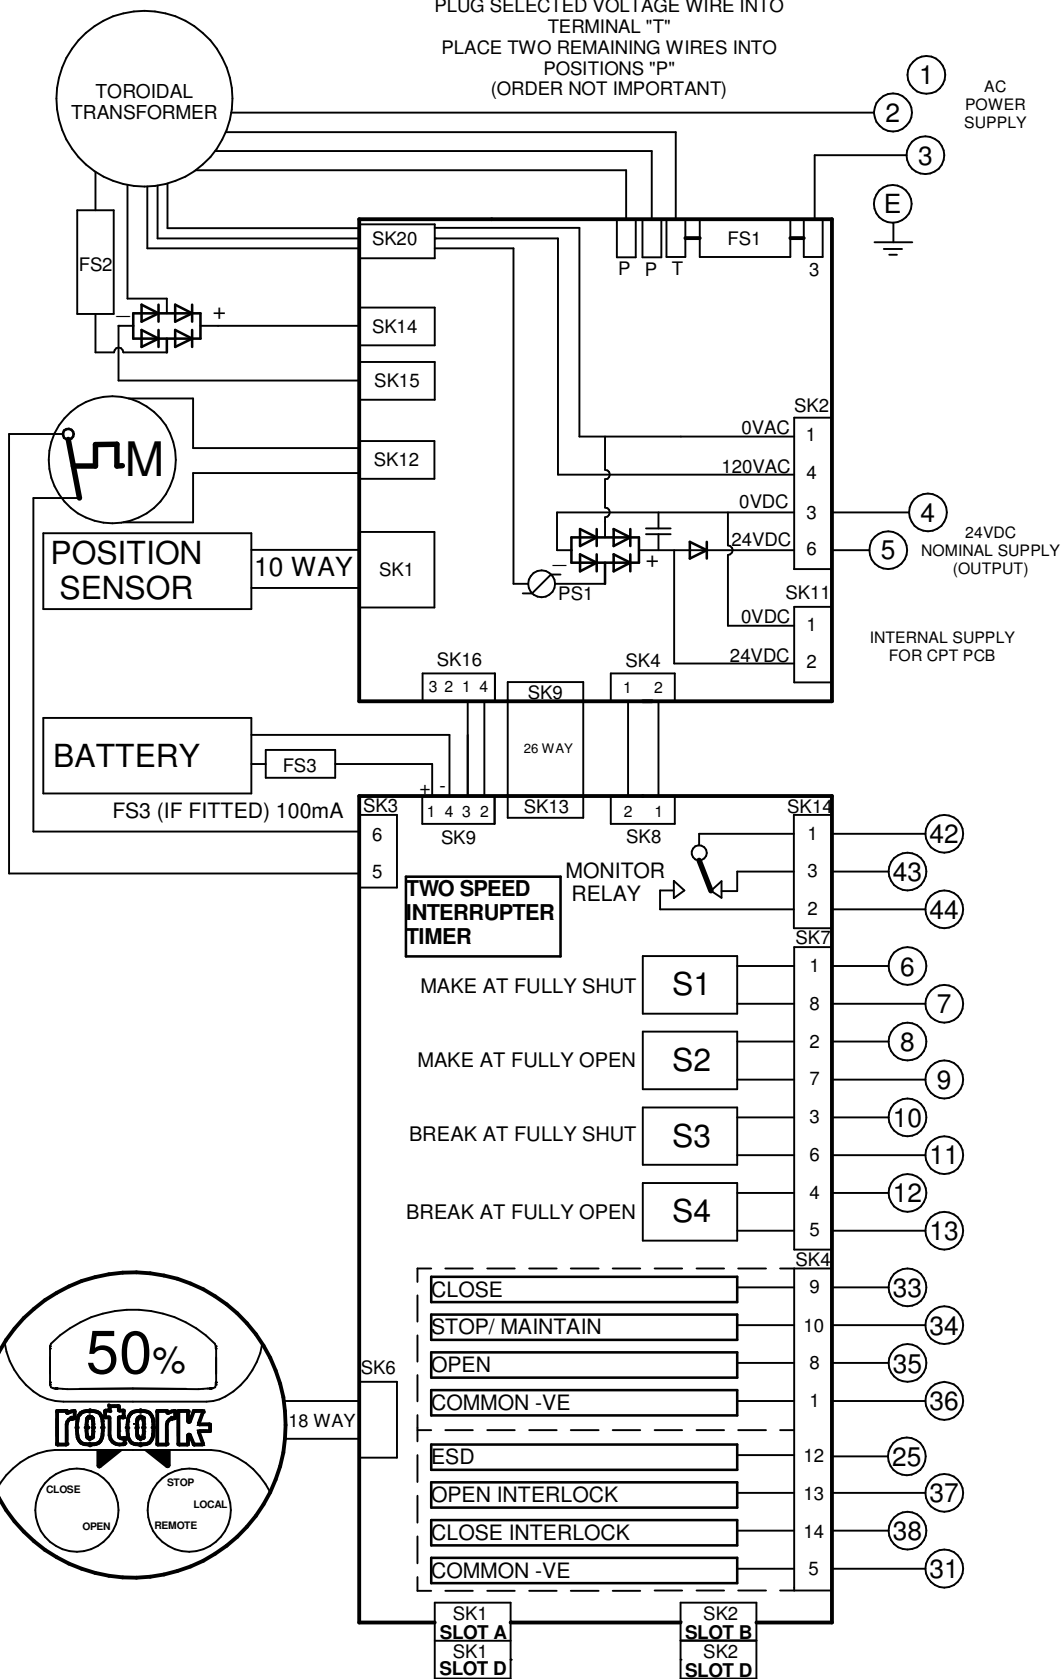


TRANSFORMER VOLTAGE OPTIONS:
CONNECT CORRESPONDING
COLOUR TO "T"

| TYPE 1 | | |
|--------|------|-------------------------|
| GREY | 100V | FS1 - 5A ANTISURGE |
| PURPLE | 110V | |
| BROWN | 120V | |
| TYPE 2 | | |
| GREY | 200V | FS1 - 2.5A ANTISURGE |
| PURPLE | 230V | |
| BROWN | 270V | |
| TYPE 3 | | |
| GREY | 380V | FS1 - 2.0A ANTISURGE |
| PURPLE | 400V | |
| BROWN | 415V | |
| TYPE 4 | | |
| GREY | 480V | FS1 - 2.0A ANTISURGE |
| PURPLE | 575V | |
| BROWN | 690V | |

FS2 - 20A ATO FAST ACTING ALL TYPES

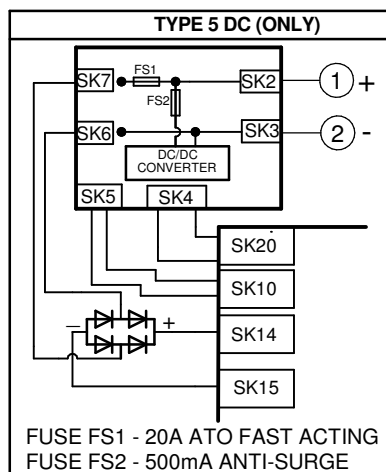

REFER TO SHEET 2 FOR NOTES
& OPTION PCB'S IF FITTED

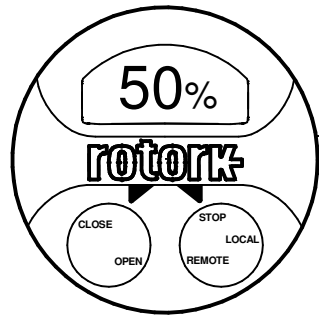

| Iss | Date | Chkd | Revision Details |
|-----|--------|------|---|
| 1 | 140815 | JC1 | First issue |
| 2 | 261115 | PMJ | TYPE 5 DC WIRING UPDATED. |
| 3 | 101117 | WHE | Foundation Fieldbus publication correction. |
| 4 | 190619 | PMJ | PUB002-065 WAS -039 |


www.rotork.com

| | |
|---|---|
| ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200 | ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304 |
|---|---|


IQT + CTT + CPT + FOUNDATION FIELDBUS +
TIMER + RHS

| | | | |
|--|---|----------------------|---------------------------|
| Drawn by: PJW Date : 140815 Base WD: 302F2007 Job No : - - MI No : - - | Circuit Diagram Number 302F2007 | Issue No 4 | Sheet 1 of 2 |
|--|---|----------------------|---------------------------|


SLOT A

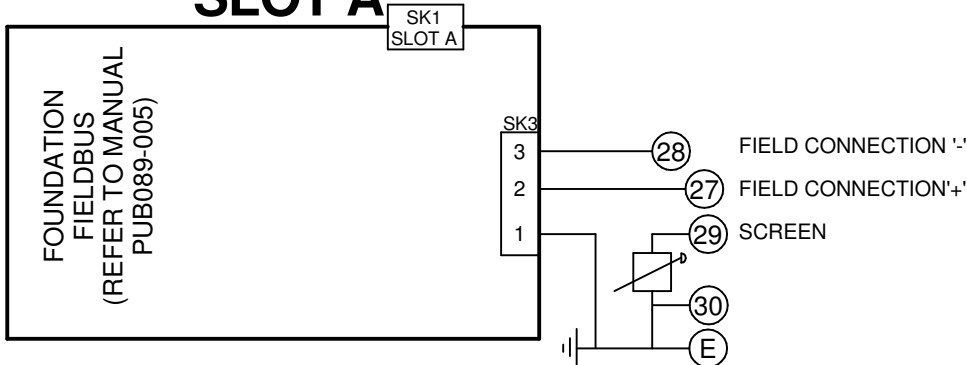


SLOT B

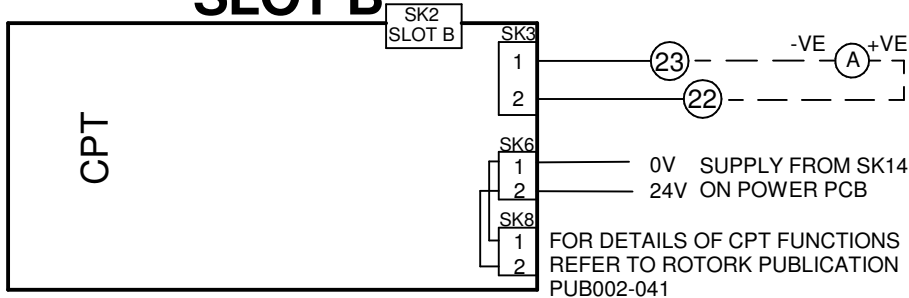

SLOT C

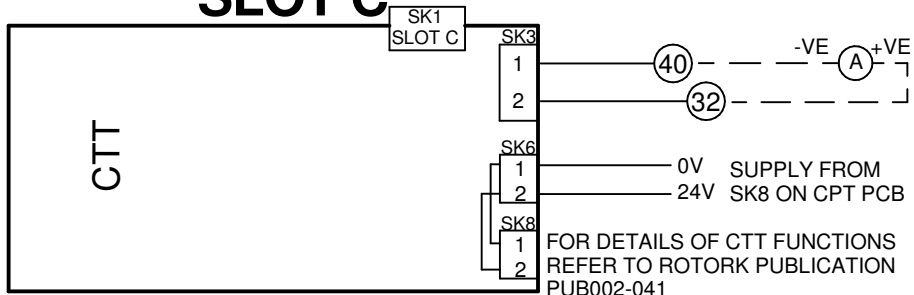

SLOT D

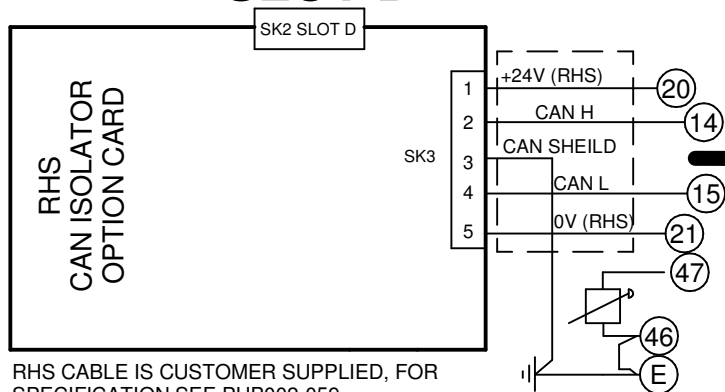

RHS CABLE IS CUSTOMER SUPPLIED, FOR SPECIFICATION SEE PUB002-059, MAXIMUM LENGTH OF CABLE TO BE 100m.

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-065 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:


- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
 - For DC and AC control, connect -ve/0V to terminal 36.
 - (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
 - AC: "on" ≥60Vac / "off" ≤40Vac, max 120Vac.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc or 12mA at 120Vac.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc / 5VA at 120Vac

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- “S” contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown “unavailable”). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote “S” contact indication only.
- Refer to installation manual for approved replacement battery types.

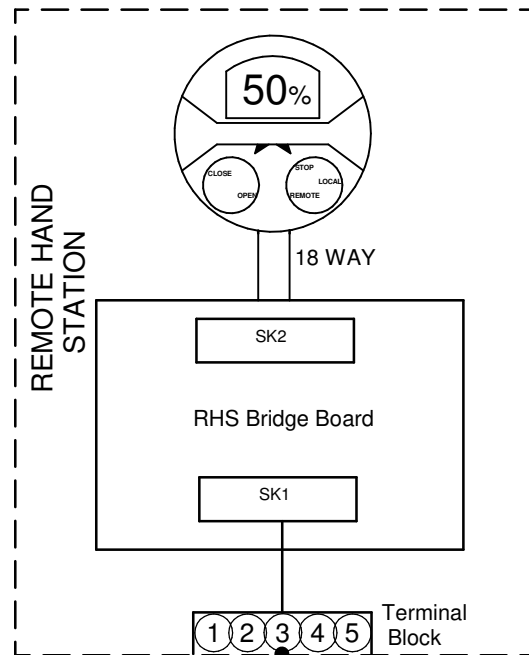

| Actuator Terminal Bung No. | RHS Terminal Block No. | Function |
|----------------------------|------------------------|------------|
| 20 | 1 | +24V (RHS) |
| 21 | 2 | 0V (RHS) |
| 14 | 3 | CAN H |
| 15 | 4 | CAN L |
| 47 | 5 | SHEILD |