Document Title: 125V DC NEGATIVE IQ REMOTE CONTROL CIRCUITRY (24VDC)

THE BLUETOOTH® SETTING TOOL ENABLES ALL CONFIGURABLE ACTUATOR SETTINGS TO BE MADE.

BEFORE PUTTING THE ACTUATOR INTO SERVICE, IT MUST BE INSTALLED AND COMMISSIONED IN ACCORDANCE WITH PUBLICATION PUB002-039 INSTALLATION AND MAINTENANCE INSTRUCTIONS.

UNLESS SPECIFIED WITH ORDER, THE ACTUATOR IS DESPATCHED WITH DEFAULT SETTINGS AS LISTED IN PUBLICATION PUB002-040.

FOR IQ CONTROL AND MONITORING FACILITIES, REFER TO PUBLICATION PUB002-041.

NOTE:

ACTUATOR REMOTE CONTROL SIGNALS MUST BE EXTERNALLY SUPPLIED.

THE INTERNAL 24VDC CAN NOT BE USED TO SUPPLY THE REMOTE CONTROL SIGNALS.

CONNECT CONTROL CONTACTS TO EXTERNAL SUPPLY -VE. CONNECT SUPPLY +VE AS FOLLOWS:-TO TERMINALS 36 & 31 FOR SUPPLIES 50VDC TO 125VDC

