

CIRCUIT DRAWN WITH  
POWER SUPPLY OFF

FOR TYPICAL REMOTE CONTROL  
DETAILS SEE DOCUMENT  
**RWS303**


TRANSFORMER TAPPING OPTIONS

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 -  
FUSE FS3 - 20A ATO FAST ACTING

TYPE 5 24VDC

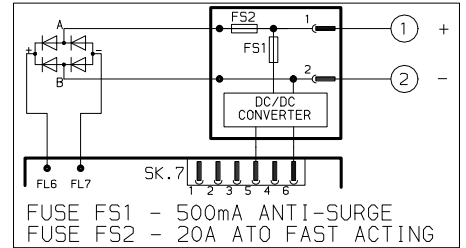

ALL TRANSFORMER TYPES -  
PS1 SELF RESETTING FUSE

NOTE

REFER TO PUBLICATION E175E FOR  
APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS  
4 & 5 TO BE 9VA.

CONTROL SIGNAL THRESHOLD VOLTAGES  
TO BE MINIMUM 'ON' 20V AC/DC  
MAXIMUM 'OFF' = 3V  
MINIMUM CONTROL SIGNAL DURATION  
TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE  
CONTROL SIGNAL IS 5mA ON 24V DC  
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END  
BY TERMINAL No. OR TAG No.


CPT WILL FUNCTION NORMALLY WITH  
3-PH POWER & NO AUX PWR,  
BUT ON LOSS OF 3-PH CPT OUTPUT WILL  
GO TO 0mA UNLESS AUX PWR IS FITTED

ANALOGUE INPUT SIGNAL FOR FOLOMATIC

FOR MANUAL/AUTO CONNECTIONS AND  
DETAILS OF FOLOMATIC/CPT FUNCTIONS  
REFER TO ROTORK PUBLICATION E120E

FOR MANUAL/AUTO CONFIGURATION  
SETTINGS, PLEASE REFER TO E175E

INDICATION CONTACTS S1-S4 ARE SHOWN  
IN THEIR DEFAULT CONFIGURATION.  
CONTACTS MAY BE CONFIGURED FOR ANY  
OF THE FUNCTIONS DESCRIBED IN E175E

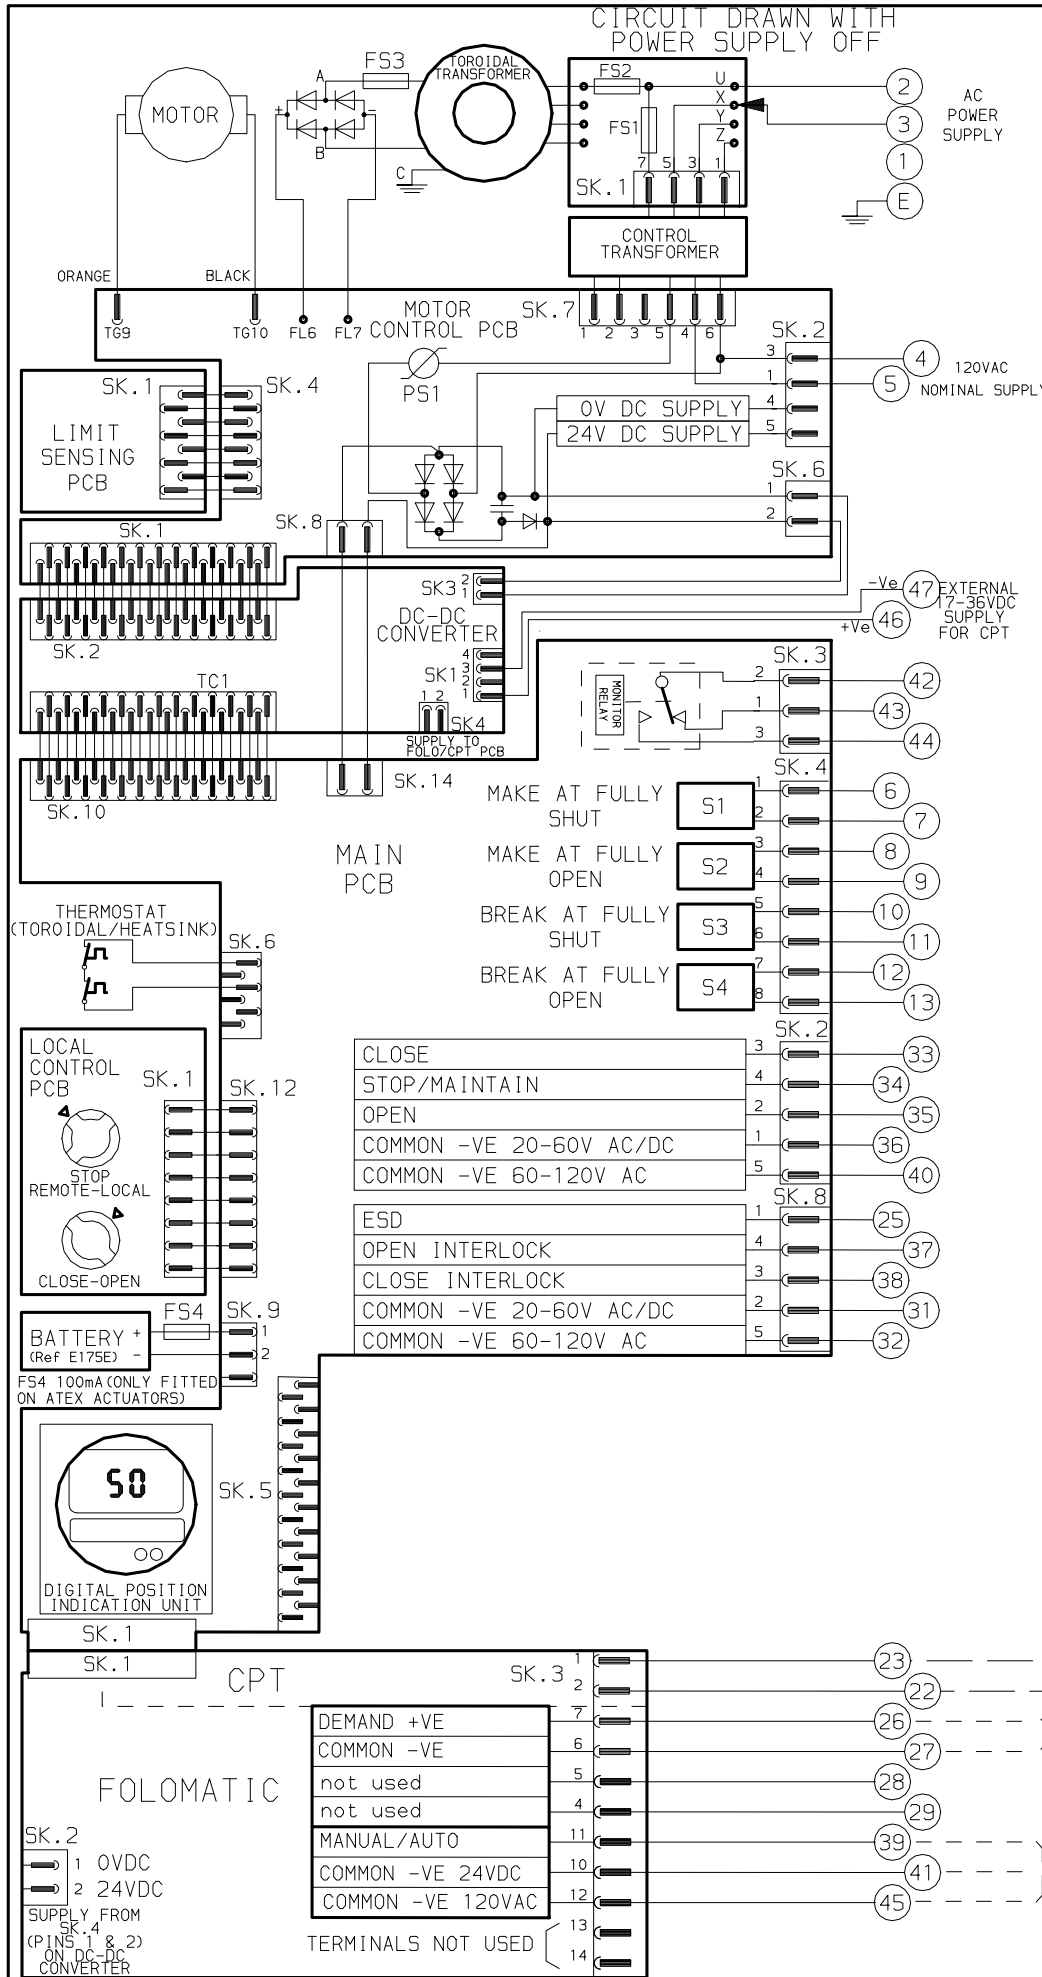

No	DATE	REVISION DETAILS
01	291015	FIRST ISSUE

**www.rotork.com**

ROTORK CONTROLS LTD  
BATH, BA1 3JQ  
ENGLAND  
Tel: 01225-733200

ROTORK CONTROLS INC  
ROCHESTER  
NY 14624, USA  
Tel: 585-247-2304

CONFIG BY JC1  
DATE 291015  
CHECKED PJW  
BASE WD 6040-101  
JOB No -  
M.I.No -

**IQT + FOLOMATIC &  
AUX PWR CPT + 120VAC**

CIRCUIT DIAGRAM No -REV 101  
**6040-101-01**

B1 C1 B2 C2