


CIRCUIT DRAWN WITH POWER SUPPLY OFF

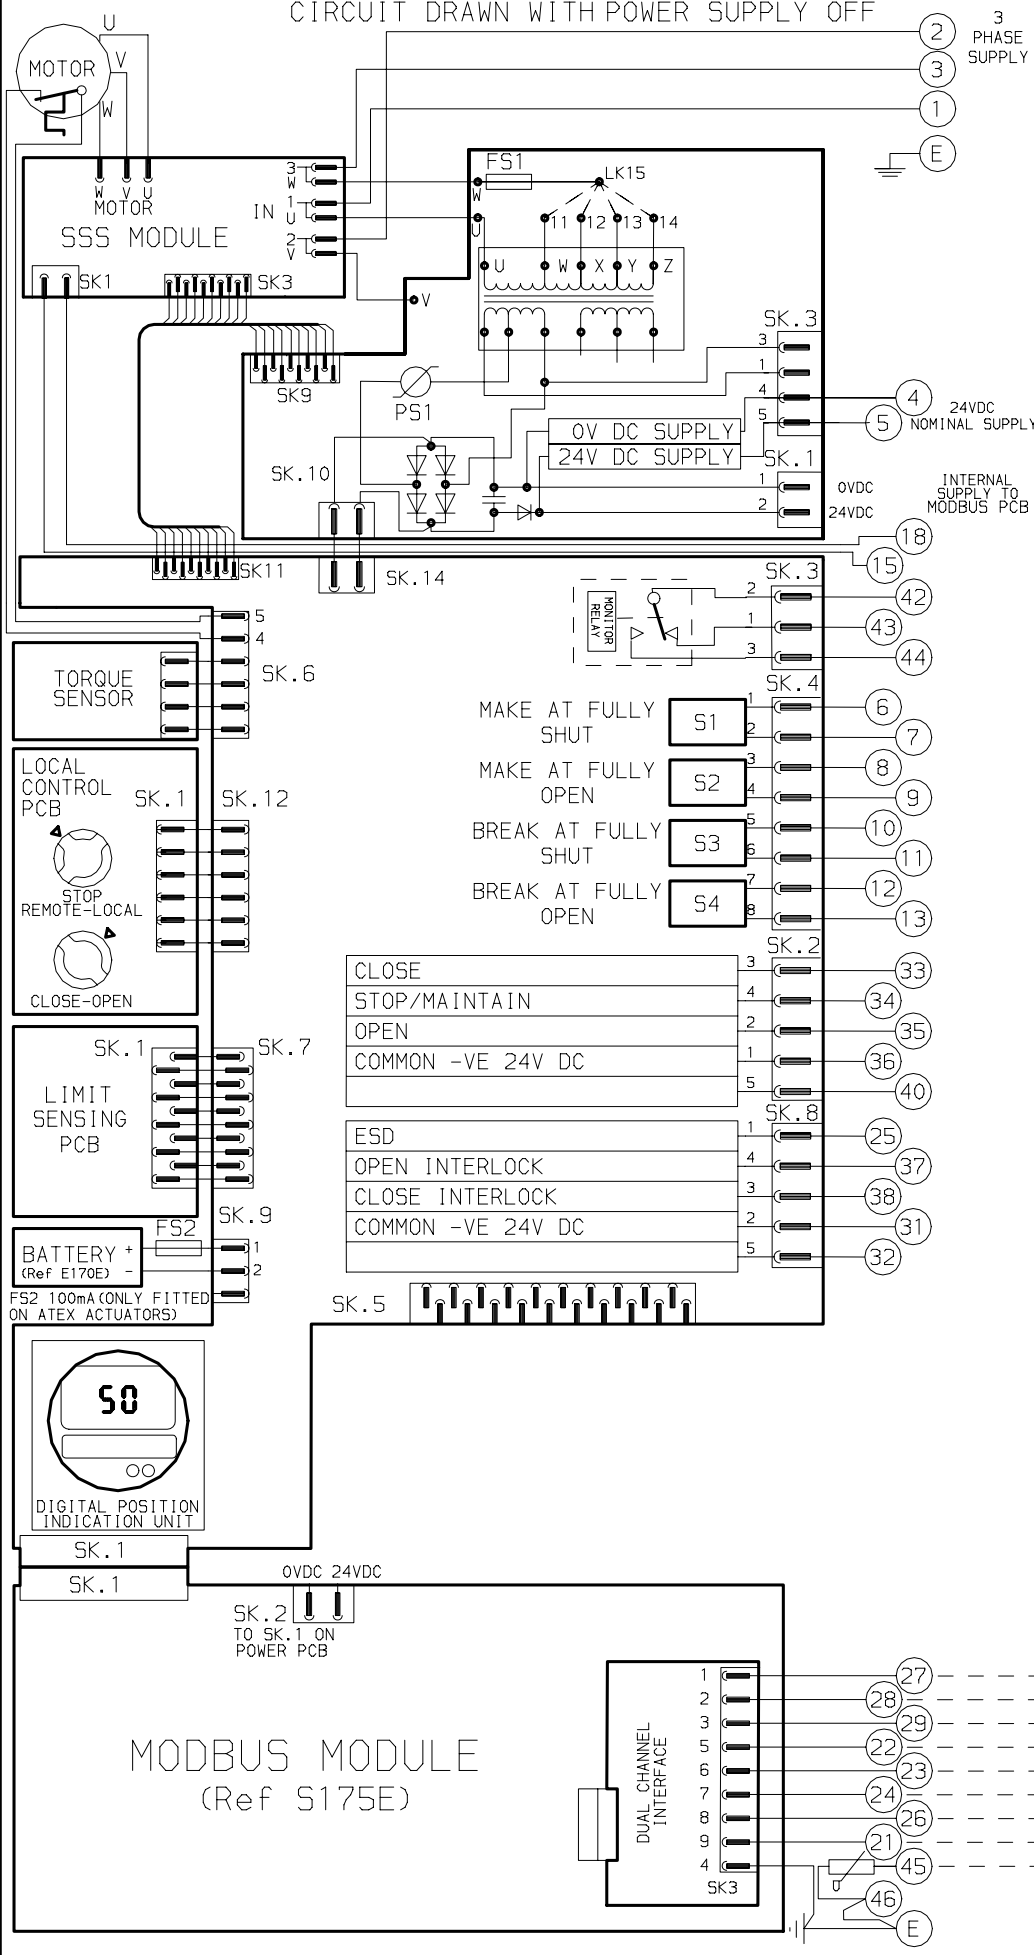

FOR TYPICAL REMOTE CONTROL DETAILS SEE DOCUMENT
No RWS

TRANSFORMER TAPPING OPTIONS

TYPE 1

TAP	NOM 50/60HZ	50HZ	60HZ
W	220/230	176-242	198-259
X	380/400	304-418	342-446
Y	415/420	332-457	374-487
Z	440/460	352-484	396-517

FUSE FS1 - 250mA ANTI-SURGE

TYPE 2

TAP	NOM 50/60HZ	50HZ	60HZ
W	346/380	285-388	321-419
X	480/500	406-552	432-564
Y	240/240	192-261	216-282
Z	550/575	445-605	501-625

FUSE FS1 - 250mA ANTI-SURGE

NOTE
THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY.
SUGGESTED FUSES:-
IQ10-20:10 Amp Ferraz G330010
IQ25-35:20 Amp Ferraz K330013
ALL TRANSFORMER TYPES - PS1 SELF RESETTING FUSE

NOTE
REFER TO PUBLICATION E170E FOR APPROVED FUSES FS1 AND FS2.
MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 5W.
CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION TO BE 100mS.
CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC

WIRES ARE IDENTIFIED AT EACH END BY TERMINAL No. OR TAG No.
BRAKE ENABLE
LINK 4 TO 15 & 5 TO 18 TO ENABLE BRAKE
FOR TYPICAL REMOTE CONTROL INDICATING, MONITORING AND ALARM CIRCUITS SEE PUBLICATION E420E

TO USE THE TERMINATOR CONNECT A LINK BETWEEN TERMINATOR 1 AND 1B TERMINATOR 2 AND 2B BUNG CONNECTIONS. WIRE MODBUS FIELD CONNECTIONS AS NORMAL.
INDICATION CONTACTS S1-S4 ARE SHOWN IN THEIR DEFAULT CONFIGURATION. CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E170E

No	DATE	REVISION DETAILS
05	250210 PJW	SSS UPDATED TO CELDUC. Checked: JC1 EC2660/1

www.rotork.com

ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel: 01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel: 585-328-1550
--	--

CONFIG BY PJW
DATE 231002
CHECKED DA
BASE WD 5000-500
JOB No -
M.I.No -

IQM + MODBUS MK2 MODULE

CIRCUIT DIAGRAM No -REV 102
5000-500-05

B1 C1 B2 C2