



-Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions

-Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.

Circuit Diagram Number No 2 P201 2

-Intended for remote control. -Max external load 5W at 24Vdc / 5VA at 120Vac

-RWS indicated or PUB002-041.

-Control signal threshold voltages:

-8mA at 24Vdc or 12mA at 120Vac.

-Supply provided on terminals 4 & 5:

-For DC and AC control, connect -ve/0V to terminal 36.

-Maximum current drawn from remote control signals is:

-DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc. -AC: "on" ≥60Vac / "off" ≤40Vac, max 120Vac.

-Control signal duration to be 300ms minimum.

-(For negative switch / positive common, refer to RWS indicated).

See Sheet 1 for all Revision details/information

of 2