

CIRCUIT DRAWN WITH
POWER SUPPLY OFF


FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
RWS302

TRANSFORMER TAPPING OPTIONS

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 -
FUSE FS3 - 20A ATO FAST ACTING

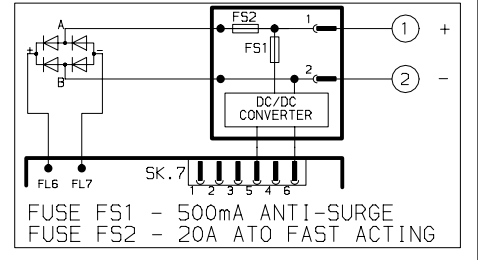

ALL TRANSFORMER TYPES -
PS1 SELF RESETTING FUSE

NOTE
REFER TO PUBLICATION E175E FOR
APPROVED FUSES FS1, FS2 AND FS3.

 

MAX EXTERNAL LOAD ON TERMINALS
4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES
TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION
TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE
CONTROL SIGNAL IS 5mA ON 24V DC
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END
BY TERMINAL No. OR TAG No.

INDICATION CONTACTS S1-S4 AND EXTRA
INDICATION CONTACTS S5-S8 ARE SHOWN
IN THEIR DEFAULT CONFIGURATION.
CONTACTS MAY BE CONFIGURED FOR ANY
OF THE FUNCTIONS DESCRIBED IN E175E

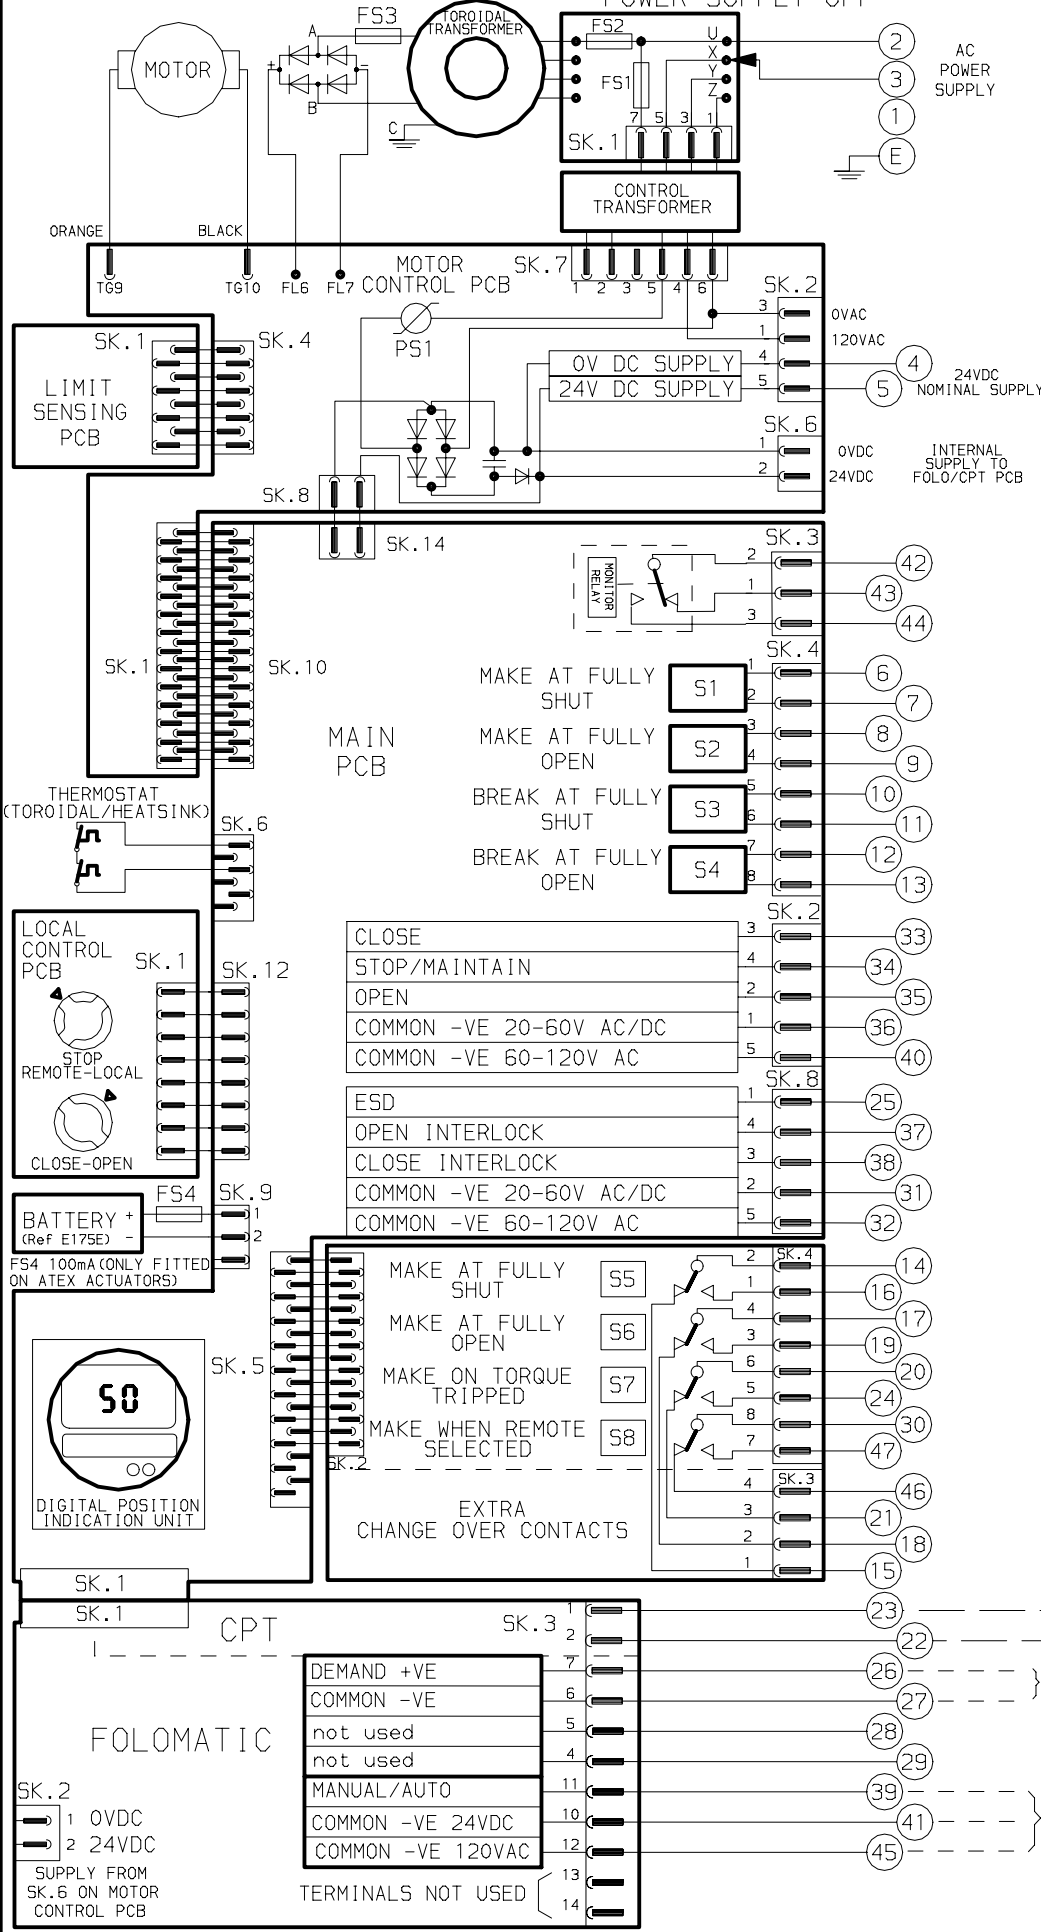

ANALOGUE INPUT SIGNAL FOR FOLOMATIC

FOR MANUAL/AUTO CONNECTIONS AND
DETAILS OF FOLOMATIC/CPT FUNCTIONS
REFER TO ROTORK PUBLICATION E120E

FOR MANUAL/AUTO CONFIGURATION
SETTINGS, PLEASE REFER TO E175E

No 03	DATE 110407	REVISION DETAILS IQ PRO UPDATE. EC2198/1	www.rotork.com		CONFIG BY PJW DATE 010803 CHECKED TH BASE WD 6110-100 JOB No - M.I.No -	IQT + INDICATION RELAYS & FOLO/CPT CIRCUIT DIAGRAM No -REV 107 6110-100-03								
ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200		ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-328-1550		<table border="1"> <tr> <td>B1</td> <td>C1</td> <td>B2</td> <td>C2</td> <td>B1</td> <td>C1</td> <td>M1</td> <td>V1</td> </tr> </table>			B1	C1	B2	C2	B1	C1	M1	V1
B1	C1	B2	C2	B1	C1	M1	V1							