

CIRCUIT DRAWN WITH
POWER SUPPLY OFF

FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
RWS302

TRANSFORMER TAPPING OPTIONS

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 -
FUSE FS3 - 20A ATO FAST ACTING

ALL TRANSFORMER TYPES -
PS1 SELF RESETTING FUSE

NOTE
REFER TO PUBLICATION E175E FOR
APPROVED FUSES FS1, FS2 AND FS3.

 

MAX EXTERNAL LOAD ON TERMINALS
4 & 5 TO BE 9VA.

CONTROL SIGNAL THRESHOLD VOLTAGES
TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION
TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE
CONTROL SIGNAL IS 5mA ON 24V DC
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END
BY TERMINAL No. OR TAG No.

INDICATION CONTACTS S1-S4 AND EXTRA
INDICATION CONTACTS S5-S8 ARE SHOWN
IN THEIR DEFAULT CONFIGURATION.
CONTACTS MAY BE CONFIGURED FOR ANY
OF THE FUNCTIONS DESCRIBED IN E175E

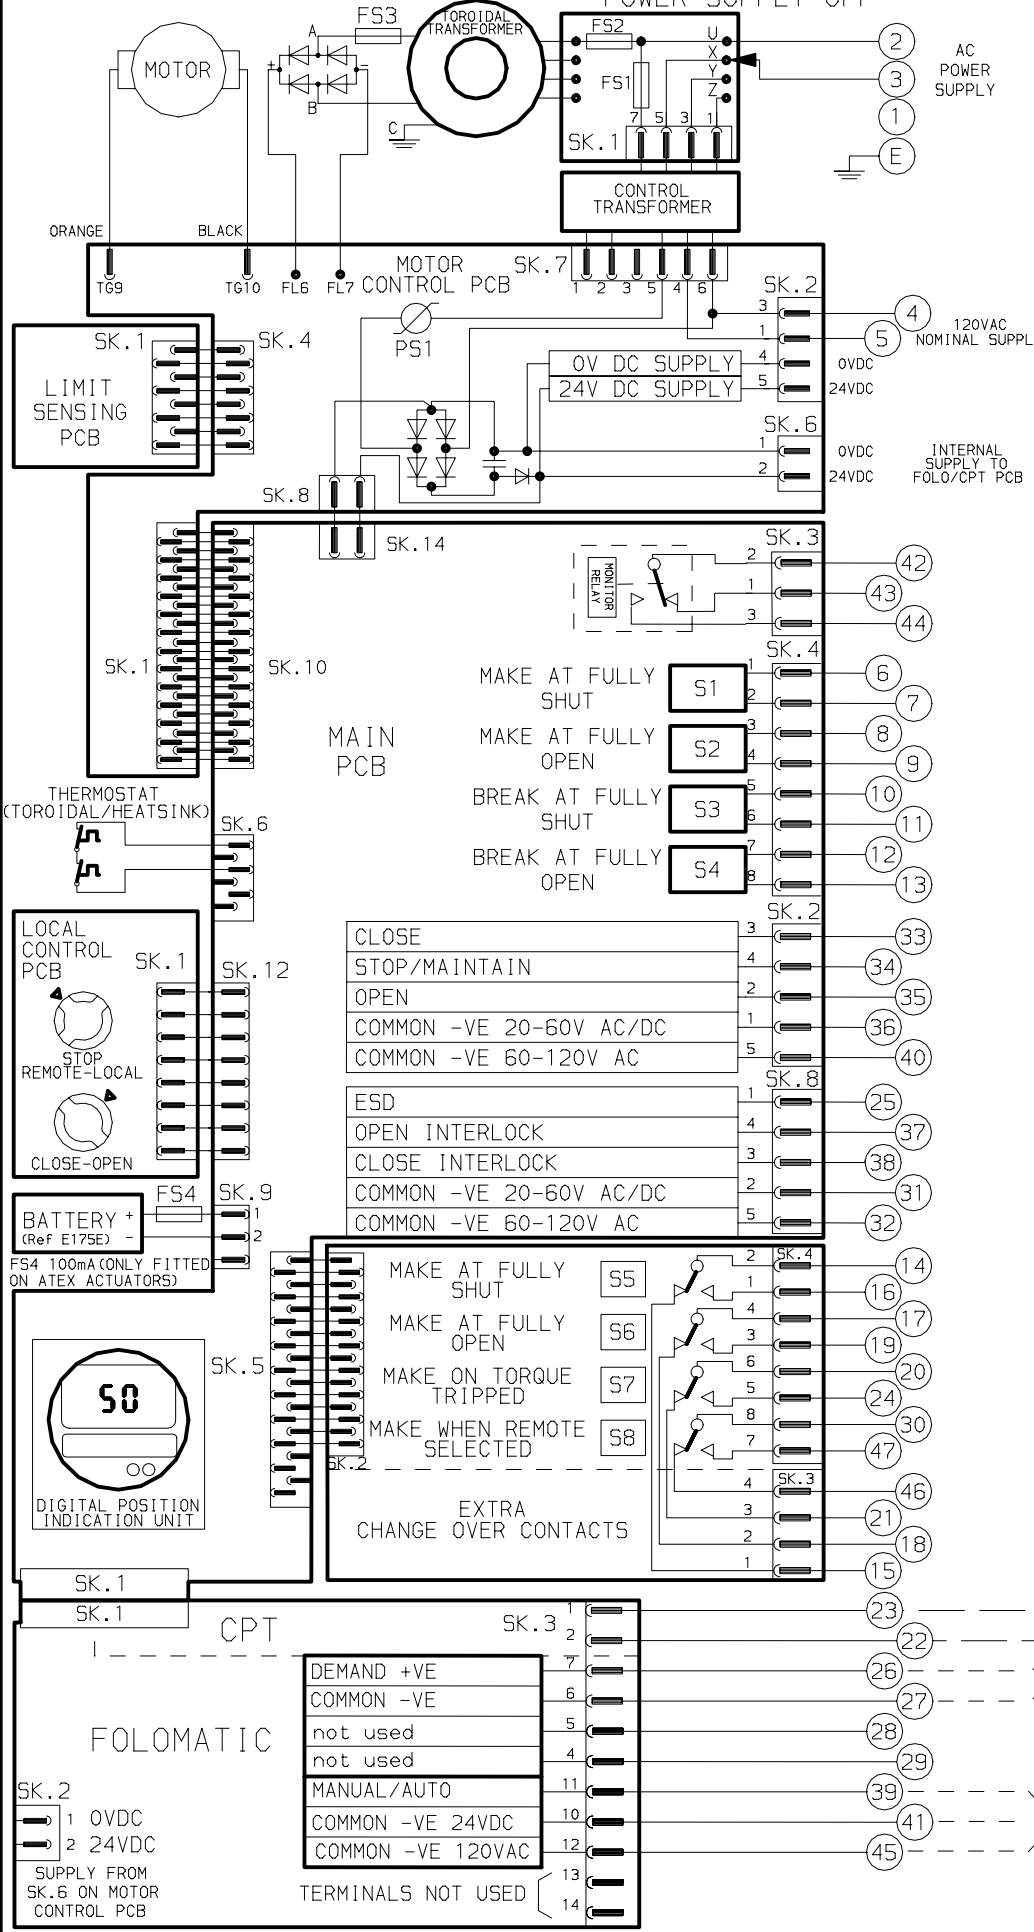

} ANALOGUE INPUT SIGNAL FOR FOLOMATIC

} FOR MANUAL/AUTO CONNECTIONS AND
DETAILS OF FOLOMATIC/CPT FUNCTIONS
REFER TO ROTORK PUBLICATION E120E

} FOR MANUAL/AUTO CONFIGURATION
SETTINGS, PLEASE REFER TO E175E

No	DATE	REVISION DETAILS
03	110407	IQ PRO UPDATE. EC2198/1

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel: 01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel: 585-328-1550

CONFIG BY PJW
DATE 180805
CHECKED DA
BASE WD 6110-101
JOB No -
M.I.No -

IQT+IND RLY + FOLO/CPT
& 120VAC ON 4 & 5.

CIRCUIT DIAGRAM No -REV 107
6110-101-03

B1 C1 B2 C2 B1 C1 M1 V1