

FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT **RWS122**

TRANSFORMER TAPPING OPTIONS		
Tap	Nominal 50/60Hz	FUSE FS1
VOLTAGE	50HZ/60HZ	
LOW	115	500mA
HIGH	230	250mA
FUSE FS1 TO BE ANTI SURGE		
CAPACITOR START/RUN (CS/CS2 AND CR/CR2) COMBINATIONS & VALUES		
VARY WITH SUPPLY VOLTAGE & ACTUATOR SIZE.		



REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

TORQUE SENSOR

POSITION SENSOR 10 WAY

BATTERY -

FS2 (IF FITTED) 100mA +

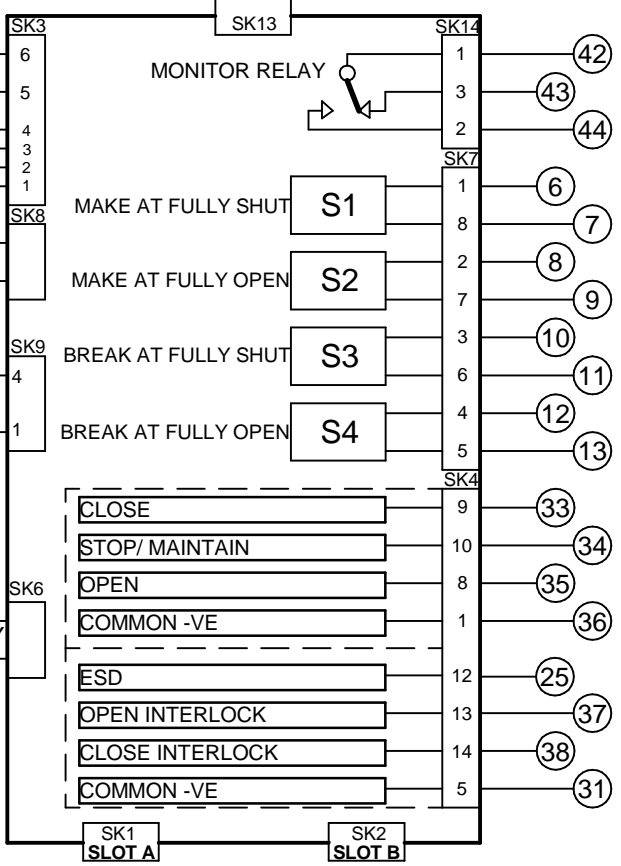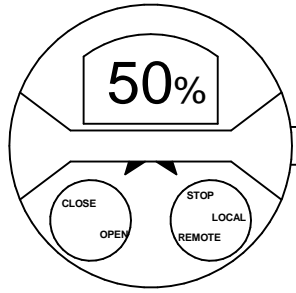

Iss	Date	Chkd	Revision Details
1	210716	JC1	First Issue.
2	091117	WHE	Foundation Fieldbus publication correction.

**www.rotork.com**

ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200

ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304

IQ SINGLE PHASE + FOLOMATIC / CPT + FOUNDATION FIELDBUS		Circuit Diagram Number		Issue No	Sheet
		<b>123F2000</b>		<b>2</b>	<b>1</b>
B1	C1	B2	C2		of 2

Drawn by: PJW  
Date : 210716  
Base WD: 123F2000  
Job No : --  
MI No : --

