



NOTES

1.FUSES:

-PS1 is a self-resetting fuse. -Refer to publication PUB002-065 for approved fuses FS1 and FS2. -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

-For typical remote control circuits refer to:

-RWS indicated or PUB002-041.

-For DC control connect -ve to terminal 36.

-(For negative switch / positive common, refer to RWS indicated).

-Control signal threshold voltages:

-DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.

-Control signal duration to be 100ms minimum.

-Maximum current drawn from remote control signals is: -8mA at 24Vdc.

-Supply provided on terminals 4 & 5:

-Intended for remote control.

-Max external load 5W at 24Vdc

3.INDICATION:

-For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting.

-Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions

-Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.

> lssue No Circuit Diagram Number 2 401M2010 3 of 2

See Sheet 1 for all Revision details/information