


CIRCUIT DRAWN WITH POWER SUPPLY OFF
 PLUG SELECTED VOLTAGE WIRE INTO TERMINAL "T"
 PLACE TWO REMAINING WIRES INTO POSITIONS "P"
 (ORDER NOT IMPORTANT)


FOR TYPICAL REMOTE CONTROL
 DETAILS, SEE DOCUMENT
RWS102

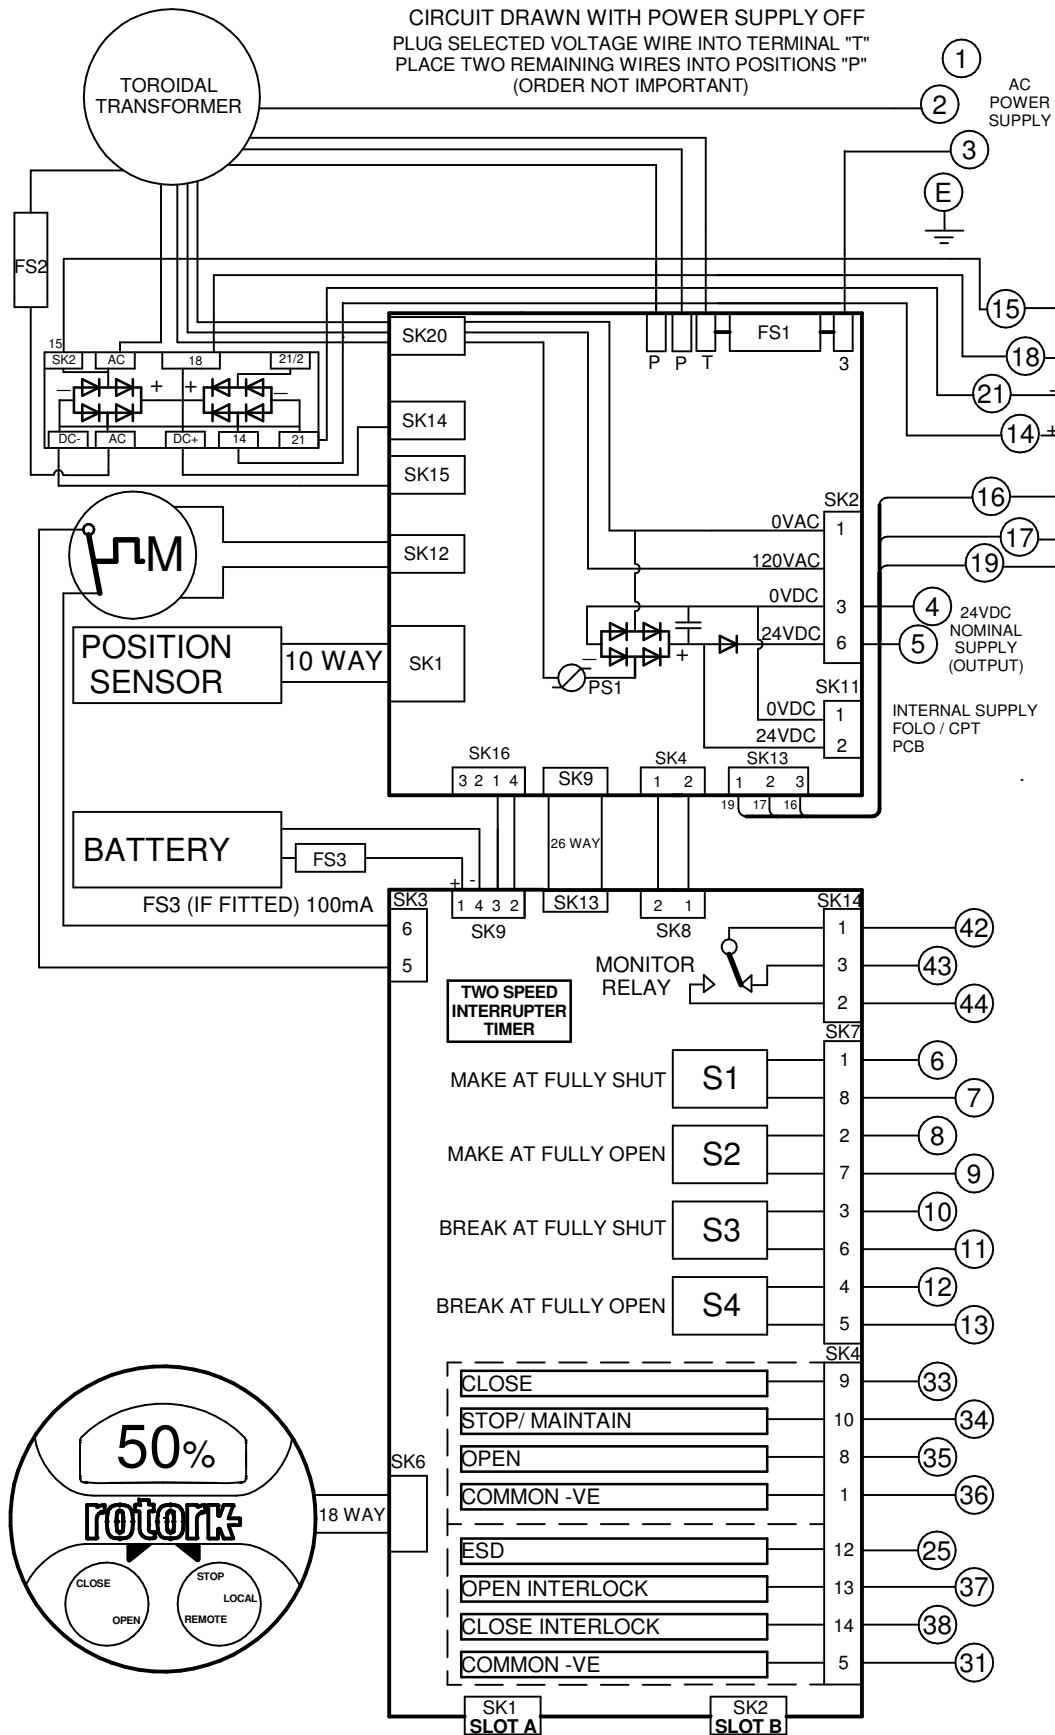

TRANSFORMER VOLTAGE OPTIONS:
 CONNECT CORRESPONDING
 COLOUR TO "T"

TYPE 1		
GREY	100V	FS1 - 5A ANTISURGE
PURPLE	110V	
BROWN	120V	
TYPE 2		
GREY	200V	FS1 - 2.5A ANTISURGE
PURPLE	230V	
BROWN	270V	
TYPE 3		
GREY	380V	FS1 - 2.0A ANTISURGE
PURPLE	400V	
BROWN	415V	
TYPE 4		
GREY	480V	FS1 - 2.0A ANTISURGE
PURPLE	575V	
BROWN	690V	

FS2 - 20A ATO FAST ACTING ALL TYPES

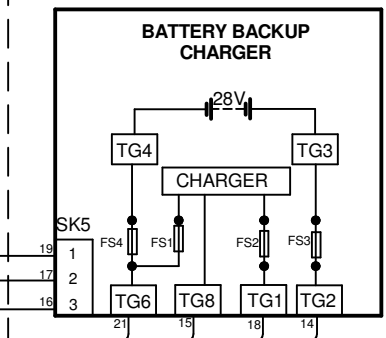

BATTERY PACK
 FOR DETAILS SEE PUBLICATION PUB002-105
 FS3, FS4 - 20A ATO FAST ACTING
 FS1, FS2 - 2A 20mm QUICK BLOW
 FAILSAFE OPERATION, ON LOSS OF 3-PHASE
 CUSTOMER SUPPLY ON 4 & 5 IS ALSO LOST.

REFER TO SHEET 2 FOR NOTES
 & OPTION PCB'S IF FITTED

Iss	Date	Chkd	Revision Details
1	101017	PJW	First Issue.
2	191017	JC1	Battery pack publication updated was E120E.
3	110719	PMJ	PUB002-065 WAS -039

www.rotork.com


ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304
---	---

IQTM FAILSAFE BATTERY BACKUP + FOLOMATIC +
 CPT + RHS + TIMER


Drawn by: JC1
 Date : 101017
 Base WD: 493B0007
 Job No : --
 MI No : --

Circuit Diagram Number	Issue No	Sheet
493B0007	3	1
B1 C1 B2 C2		of 2


SLOT A

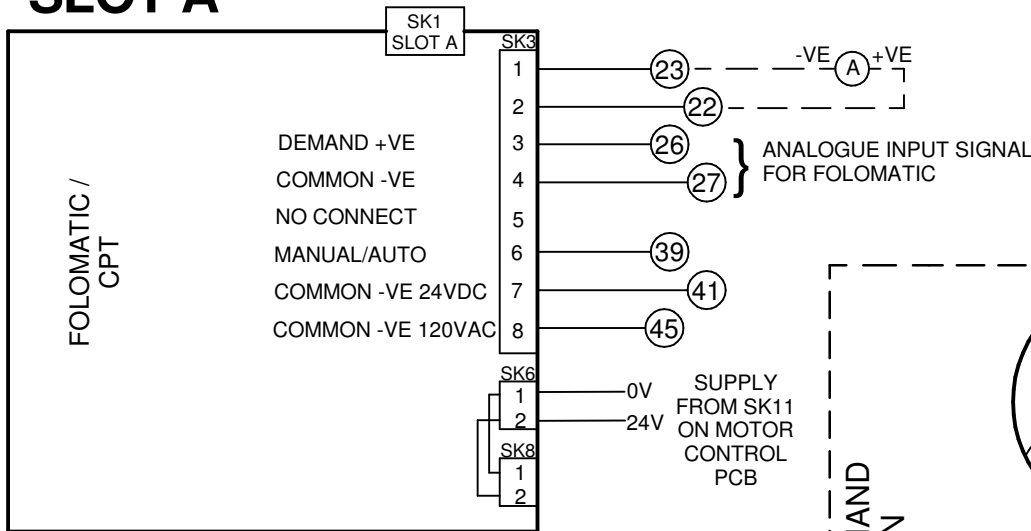

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB002-041

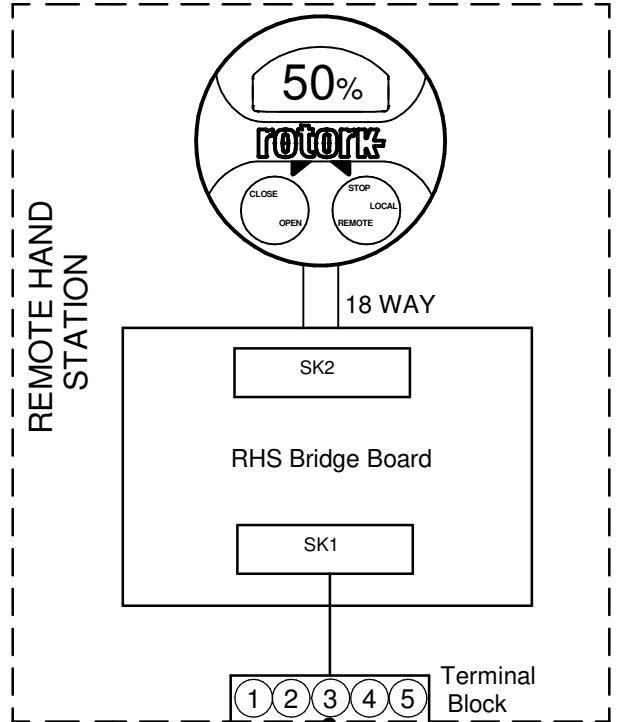

SLOT B

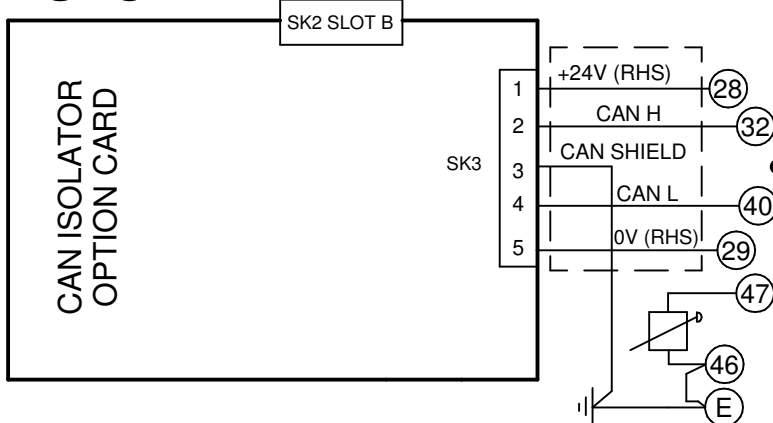

Actuator Terminal Bung No.	RHS Terminal Block No.	Function
28	1	+24V (RHS)
29	2	0V (RHS)
32	3	CAN H
40	4	CAN L
47	5	SHIELD

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-065 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10% applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
- For DC connect -ve to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
 - Control signal duration to be 100ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- "S" contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote "S" contact indication only.
- Refer to installation manual for approved replacement battery types.