



# **SLOT A**

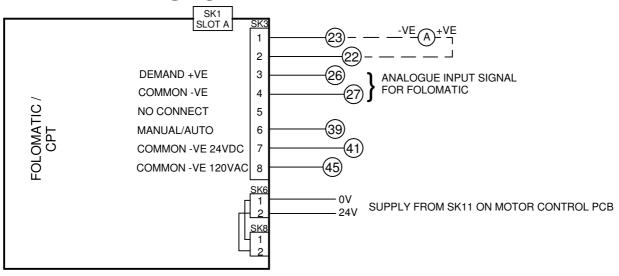

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB002-041

# SLOT B

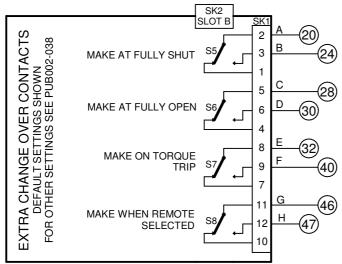

## **NOTES**

#### 1.FUSES

- -PS1 is a self-resetting fuse.
- -Refer to publication PUB002-065 for approved fuses FS1 and FS2.
- -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10% applies for rated torque performance; duty cycle is not guaranteed. **2.REMOTE CONTROL:**
- -For typical remote control circuits refer to:
- -RWS indicated or PUB002-041.
- -For DC control connect –ve to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:
- -DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
- -Control signal duration to be 100ms minimum.
- -Maximum current drawn from remote control signals is:
- -8mA at 24Vdc
- -Supply provided on terminals 4 & 5:
- -Intended for remote control.
- -Max external load 5W at 24Vdc

### 3.INDICATION:

- -For typical position, status and alarm indication see PUB002-041.
- -"S" contacts are user configurable and are shown in their default setting.
- -Refer to PUB002-040 for functions and configuration instructions.
  -Monitor Relay indicates actuator availability for remote control (shown
- "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions.
- -Voltage applied to indication contacts must not exceed 150Vac
  -Individual Switch current must not exceed 3.5A inductive, 5A resistive
  and no more than 8A in total for all 4 contacts.

# 4.BATTERY:

- -Battery maintains local and remote "S" contact indication only.
- -Refer to installation manual for approved replacement battery types.