


A1100020XX

PLUG-AND-SOCKET CONNECTOR LAYOUT

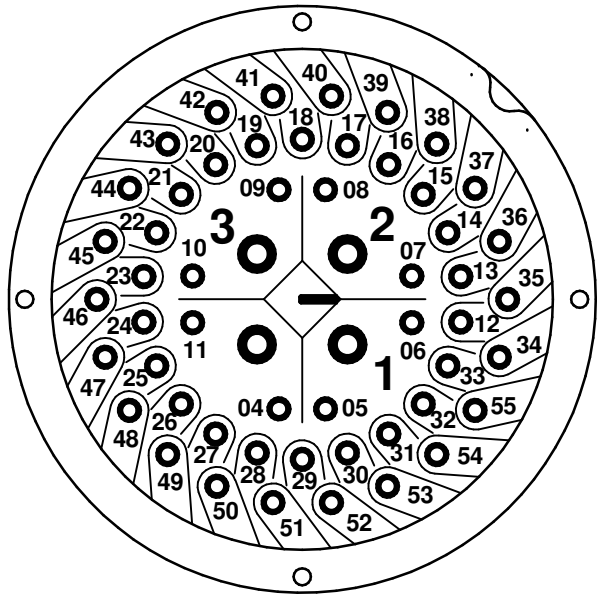

LEGENDS:

- M1** ELECTRIC MOTOR
- RL1** RELAY OUTPUT No1 (SETTABLE)
- RL2** RELAY OUTPUT No2 (SETTABLE)
- RL4** RELAY OUTPUT No4 (SETTABLE)
- RL5** RELAY OUTPUT No5 (SETTABLE)
- RL6** RELAY OUTPUT No6 (SETTABLE)
- RL7** RELAY OUTPUT No7 (SETTABLE)
- CS** CUSTOMER SUPPLY
- POSITIONER** POSITIONER IN/OUT ANALOG SIGNAL
- POSITIONER.LP** POSITIONER IN/OUT ANALOG SIGNAL LOOP POWER
- MONIT.** MONITOR RELAY
- FIELDBUS** FIELDBUS CARD
- REMOTE** REMOTE INPUT CARDS
- ACTS** AUXILIARY CLOSE TORQUE SWITCH
- AOTS** AUXILIARY OPEN TORQUE SWITCH
- ACLS** AUXILIARY CLOSE LIMIT SWITCH
- AOLS** AUXILIARY OPEN LIMIT SWITCH
- IP1** VALVE MIDDLE TRAVEL POSITION SWITCH (No 1)
- IP2** VALVE MIDDLE TRAVEL POSITION SWITCH (No 2)
- IP3** VALVE MIDDLE TRAVEL POSITION SWITCH (No 3)
- IP4** VALVE MIDDLE TRAVEL POSITION SWITCH (No 4)
- CPT** CURRENT POSITION TRANSMITTER
- CTT** CURRENT TORQUE TRANSMITTER
- CPT.LP** CURRENT POSITION TRANSMITTER, LOOP POWER
- CTT.LP** CURRENT TORQUE TRANSMITTER, LOOP POWER
- CTS** CLOSE TORQUE SWITCH
- OTS** OPEN TORQUE SWITCH
- CLS** CLOSE LIMIT SWITCH
- OLS** OPEN LIMIT SWITCH
- TRM** THERMAL PROTECTION DEVICE (MOTOR WIND.)
- HTI** ANTI-CONDENSATION HEATER
- BLK** BLINKER SWITCH
- POT** POTENTIOMETER (VALVE POSITION SIGNAL)


NOTES:

1. THE TERMINAL PLAN SHOWS THE MULTI-TURN ELECTRIC ACTUATOR IN INTERMEDIATE POSITION, ACTUATOR CLOSES VALVE CLOCKWISE.
2. SEE ACTUATOR USER MANUAL AND DATASHEETS FOR TECHNICAL DATA, PARAMETERS AND DESCRIPTION OF THE ACTUATOR ELECTRIC AND ELECTRONIC EQUIPMENT.
3. THE USER MUST FIT A CLASS 10 OVERLOAD RELAY. THE RELAY MUST BE SIZED ACCORDING TO THE OVERCURRENT PROT. DEVICE SETTING VALUE FOR THE MOTOR.
4. REFER TO THE MOTOR DATA SHEET FOR THIS VALUE. THE OVERLOAD RELAY MUST BE SIZED TO ENSURE THAT IT TRIPS WITHIN 10 SECONDS IN A FAULT CONDITION.
5. THE USER MUST COMPLETE A RISK ASSESSMENT AND IMPLEMENT WHATEVER MEASURES ARE REQUIRED TO ENSURE THAT THE RESULTANT SYSTEM COMPLIES WITH ALL APPLICABLE LEGISLATION.

| PARAMETER | VALUE | DESCRIPTION |
|-----------------------------|-------|---|
| TYPE | A | MULTI-TURN ELECTRIC ACTUATOR WITH ATRONIK (MECHANICAL SWITCH MECH.) |
| MAIN POWER SUPPLY | 1 | A.C. SINGLE PHASE |
| EXTRA CARD No 1 | 1 | PROFIBUS-DP |
| EXTRA CARD No2 | 0 | NO (WITHOUT) |
| MOTOR STARTER | 0 | REVERSIBLE CONTACTORS (STANDARD) |
| CUSTOMER SUPPLY & BLUETOOTH | 0 | 24VDC±20% AT MAX.POW.OUTPUT 5W |
| BACKUP SUPPLY & HEATER | 2 | NO BACKUP SUPPLY, HEATER INCLUDED |
| EXTRA SWITCH | 0 | STANDARD - WITHOUT |

| ISSUE | DESCRIPTION | DATE | ISSUE | DESCRIPTION | DATE |
|-------|---------------|----------|-------|-------------|------|
| 1 | FIRTS RELEASE | 29-01-20 | 3 | | |
| 2 | | | 4 | | |

| | | | | | | |
|-----------|------------|-------|--|--|--------|--------------|
| SHEET 1/2 | DATE | SIGN. | TERMINAL PLAN WD CKA-CKRA ATK, MSM, 1PH, PFB1, NOEX2, CTOR, CS24, NOBK-HT, NOEXT | | FORMAT | DRAWING N° |
| MADE BY | 29-01-2020 | JB | | | A4 | A1100020XX-1 |
| CHECKED | 29-01-2020 | JP | | | | |
| APPROVED | 29/01/2020 | JP | | | | |

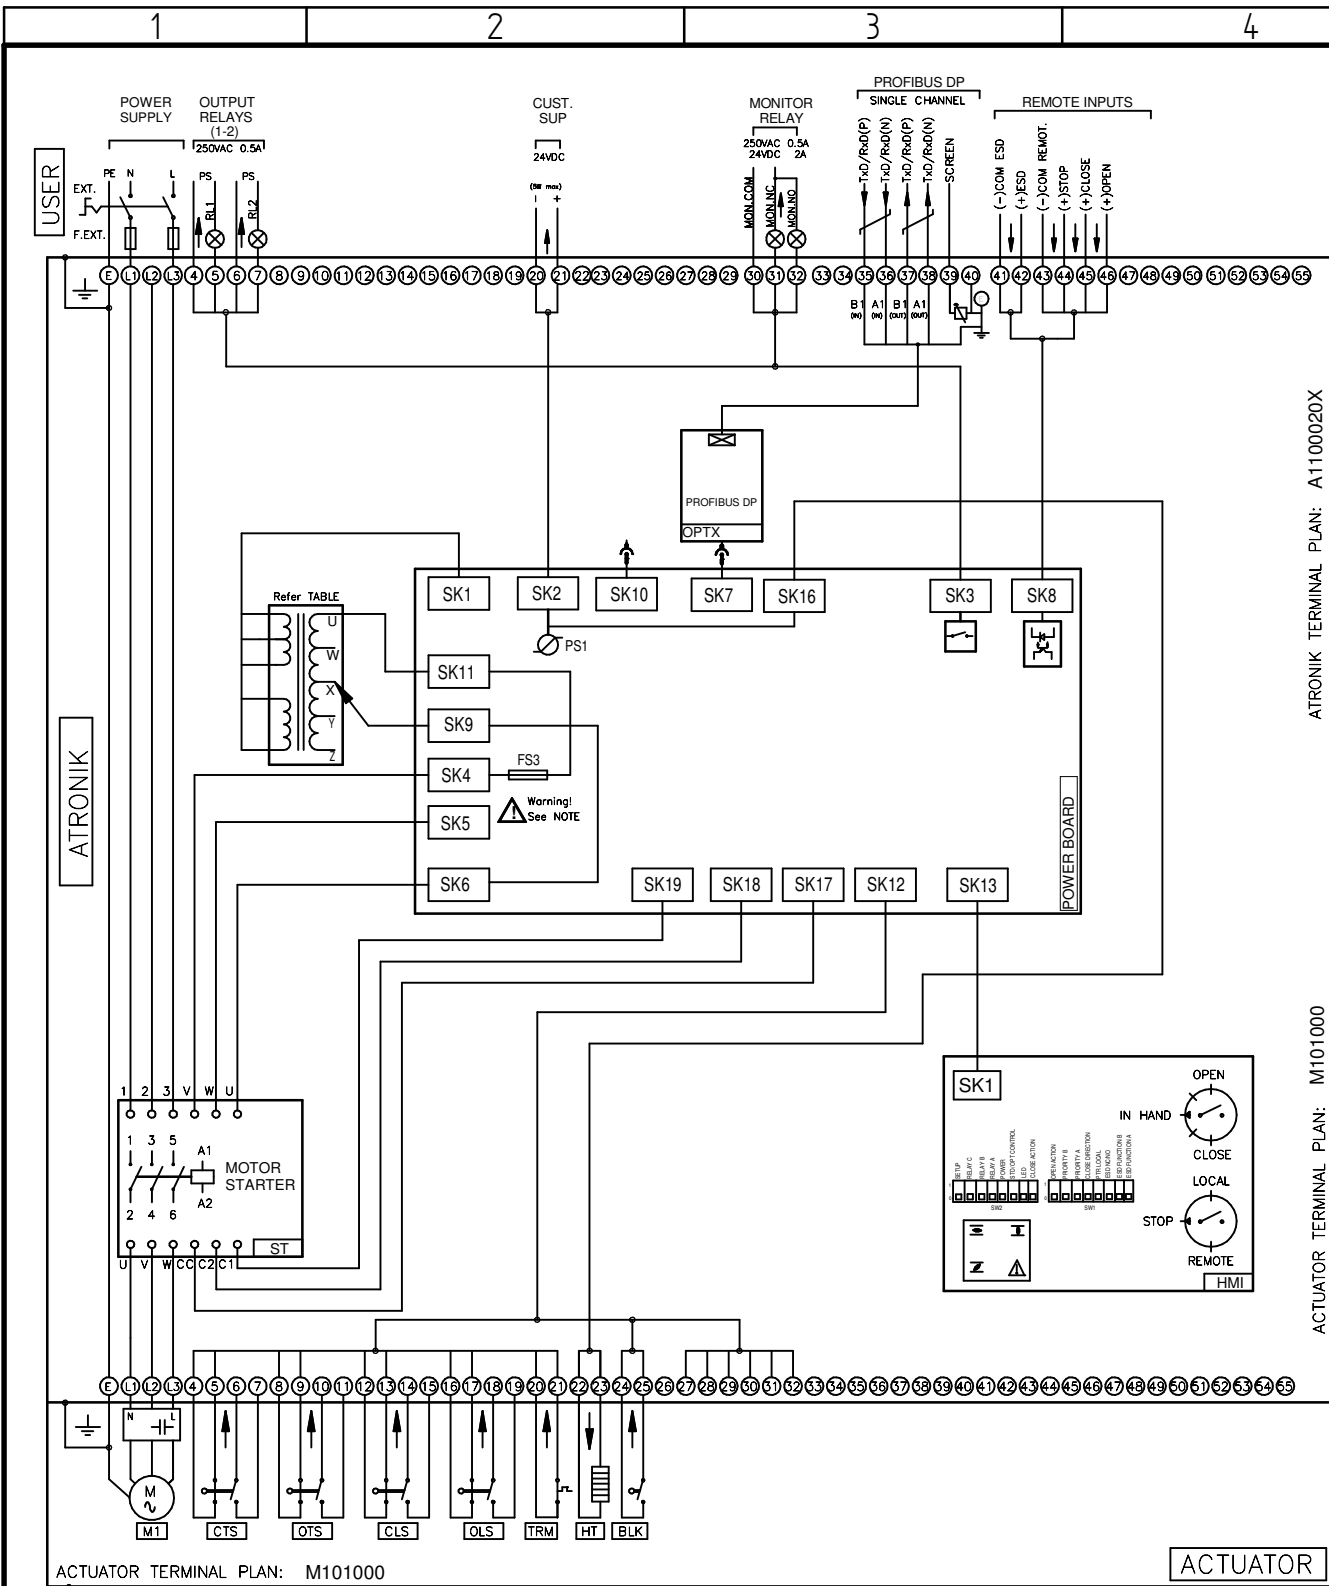

ATRONIK TERMINAL PLAN: A1100020X
 ACTUATOR TERMINAL PLAN: M101000
 FOR ACTUATOR CIRCUIT DIAGRAMS AND REMOTE CONTROL CIRCUITS, REFER TO CK00500 DATASHEET


(M) ⚠ WARNING: REFER TO SAFE USE AND INSTALLATION MANUAL OR CK00550 DATASHEET FOR APPROVED FUSES.
 FS3: SIBA, 70-065-65 1A, 500V, 6.3mmx32mm

- THE TERMINAL PLAN SHOWS THE MULTI-TURN ELECTRIC ACTUATOR IN INTERMEDIATE POSITION, ACTUATOR CLOSES VALVE CLOCKWISE.
- REFER TO SAFE USE AND INSTALLATION MANUAL AND DATASHEETS FOR TECH. DATA, PARAMETERS AND DESCRIPTION OF THE ACTUATOR ELECTRIC AND ELECTRONIC EQUIPMENT.
- ACTUATORS WITH SOLID STATE STARTER (SSS), THE ACTUATOR MUST BE PROTECTED USING SUITABLE RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY
- THE USER MUST CONDUCT A RISK ASSESSMENT, AND IMPLEMENT WHATEVER EXTRA SAFETY MEASURES ARE REQUIRED, TO ENSURE THAT THE RESULTANT SYSTEM COMPLIES WITH THE LOW VOTAGE DIRECTIVE, AND ANY OTHER LEGISLATION IN FORCE AT THE INSTALLATION SITE.
- REFER INSTALLATION MANUAL TO CONFIGURE SW1 AND SW2

TRANSFORMER TAPPING OPTIONS

| PRIMARY TAP NOMINAL VOLTAGE (VAC 50/60 Hz) | | | |
|--|---------|---------|--------|
| TAP | TYPE 1 | TYPE 2 | TYPE 3 |
| W | 110/115 | 380 | 500 |
| X | 208 | 400/415 | 575 |
| Y | 220 | 440 | 600 |
| Z | 230/240 | 460/480 | 690 |

| ISSUE | DESCRIPTION | DATE | ISSUE | DESCRIPTION | DATE |
|-------|-------------|----------|-------|-------------|------|
| 1 | PRE RELEASE | 29-01-20 | 3 | | |
| 2 | | | 4 | | |

| | | | | | | |
|-----------|------------|-------|---|---|--------------|------------|
| SHEET 2/2 | DATE | SIGN. | WIRING DRAWING WD CKA-CKRA ATK, MSM, 1PH, PFB1, NOEX2, CTR, CS24, NOBK-HT, NOEXT | This drawing and the information it contains are property of Rotork Controls Limited, and they will not be reproduced or disclosed, in whole or in part, without the prior written consent of Rotork. | | |
| MADE BY | 29-01-2020 | JB | | | | |
| CHECKED | 29-01-2020 | JP | |  | FORMAT | DRAWING N° |
| APPROVED | 29/01/2020 | JP | | A4 | A1100020XX-1 | |