



-Battery maintains local and remote "S" contact indication only.

-Refer to installation manual for approved replacement battery types.

Circuit Diagram Number 213M2006

-Supply provided on terminals 4 & 5:

-NOT intended for remote control. -Max external load 5VA at 120Vac.