


CIRCUIT DRAWN WITH POWER SUPPLY OFF

FOR TYPICAL REMOTE CONTROL
DETAILS, SEE DOCUMENT
RWS100

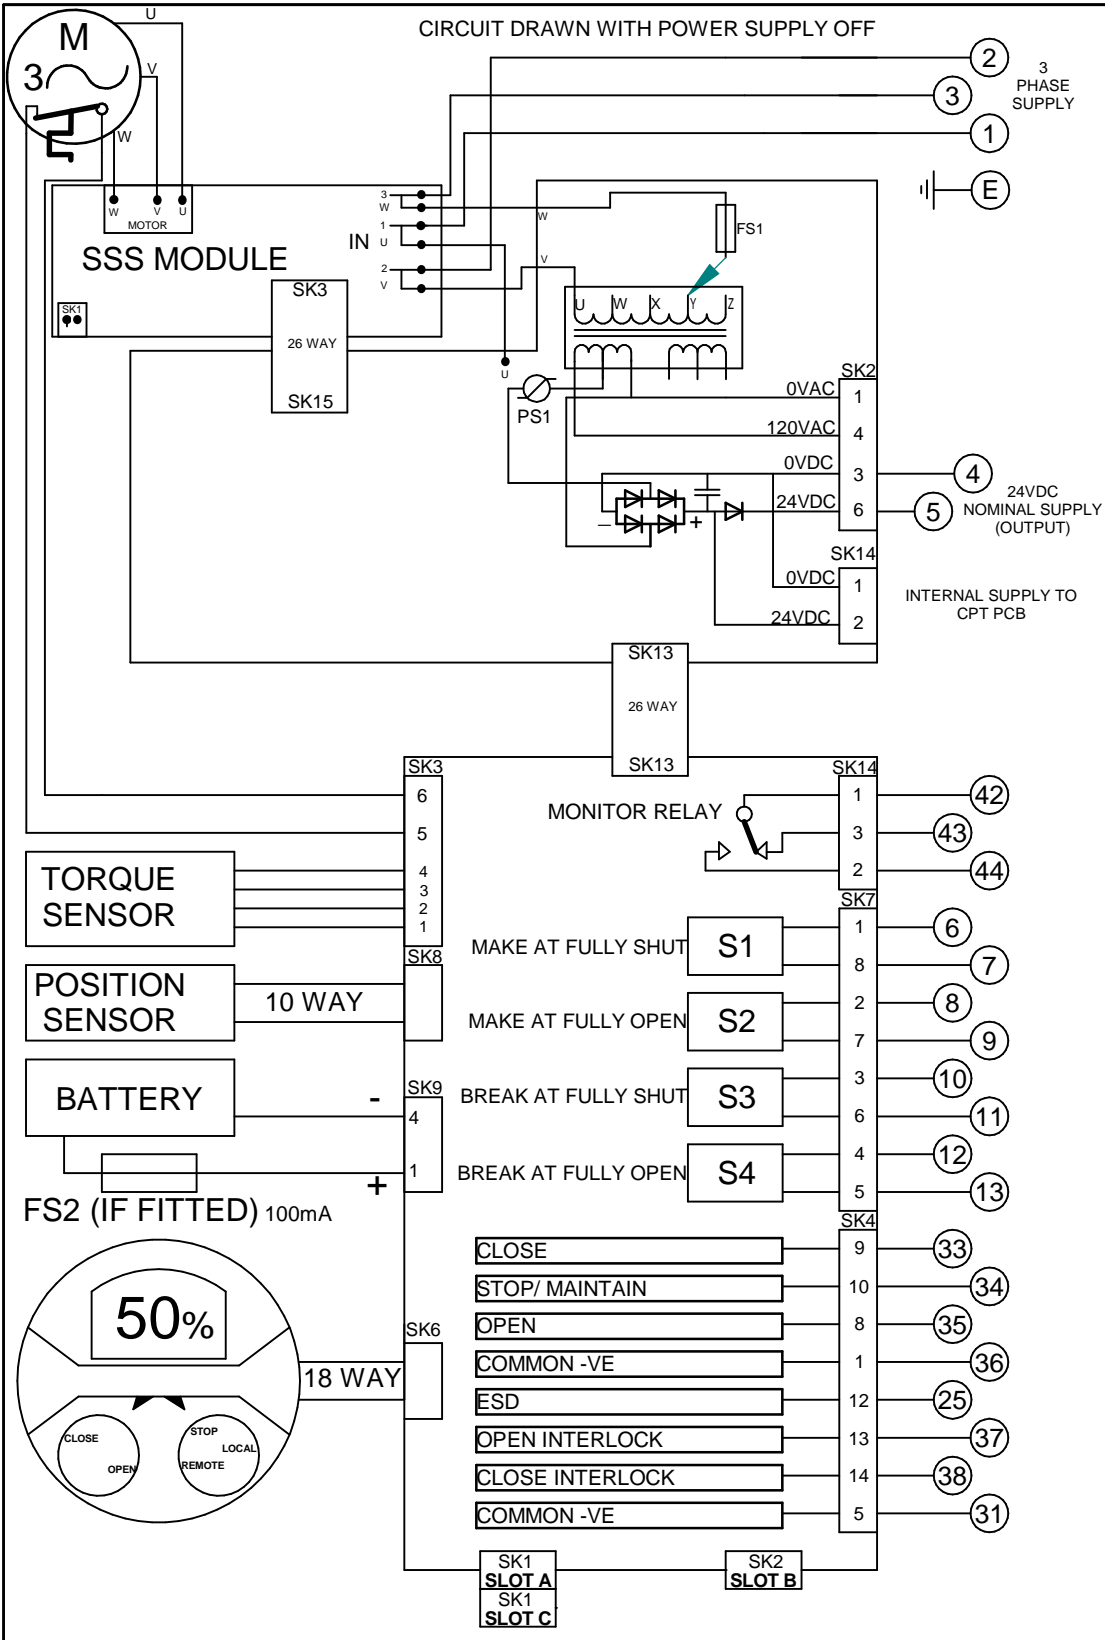

TRANSFORMER TAPPING OPTIC	
Tap	Nominal 50/60
TYPE 1	
W	220/230
X	380/400
Y	400,415/420
Z	440/460
FUSE FS 1=250mA ANTI-SUR	
TYPE 2	
W	346/380
X	480/500
Y	240/240
Z	550/575
FUSE FS 1=250mA ANTI-SUR	

REFER TO SHEET 2 FOR NOTES
& OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE
PROTECTED USING SUITABLY RATED
HIGH SPEED SEMI-CONDUCTOR
FUSES ON THE INCOMING SUPPLY.
SUGGESTED FUSES :-
IQM10-20:10 Amp FERRAZ G330010
IQM25-35:20 Amp FERRAZ K330013
ALTERNATIVES =
IQM10-20:10 Amp SIBA 50-179-06/10A
IQM25-35:20 Amp SIBA 50-179-06/20A
OR EQUIVALENT PROTECTIVE
DEVICE.

Iss	Date	Chkd	Revision Details
1	071021	PJW	First Issue.

www.rotork.com


ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304
---	---

IQM + CPT + PAKSCAN + EXTRA RELAYS S5-S8

Drawn by: PMJ Date : 071021 Base WD: 201K2010 Job No : -- MI No : --	Circuit Diagram Number 201K2010	Issue No 1 Sheet 1 of 2
B1 C1 B2 C2 B1 C1 M1 V1		

SLOT A

CIRCUIT DRAWN WITH POWER SUPPLY OFF

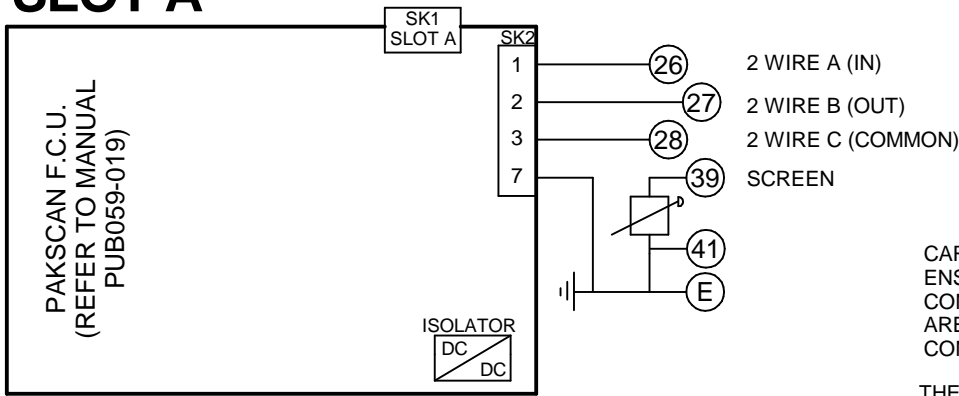


PAKSCAN F.C.U.
(REFER TO MANUAL
PUB059-019)

- 26 2 WIRE A (IN)
- 27 2 WIRE B (OUT)
- 28 2 WIRE C (COMMON)
- 39 SCREEN

CARE SHOULD BE TAKEN TO ENSURE THAT CIRCUITS CONNECTED TO TERMINALS 4 OR 5 ARE NOT DIRECTLY OR INDIRECTLY CONNECTED TO GROUND.

THE SETTING TOOL ENABLES THE PAKSCAN F.C.U BAUD RATE AND ADDRESS TO BE CONFIGURED.

SLOT B

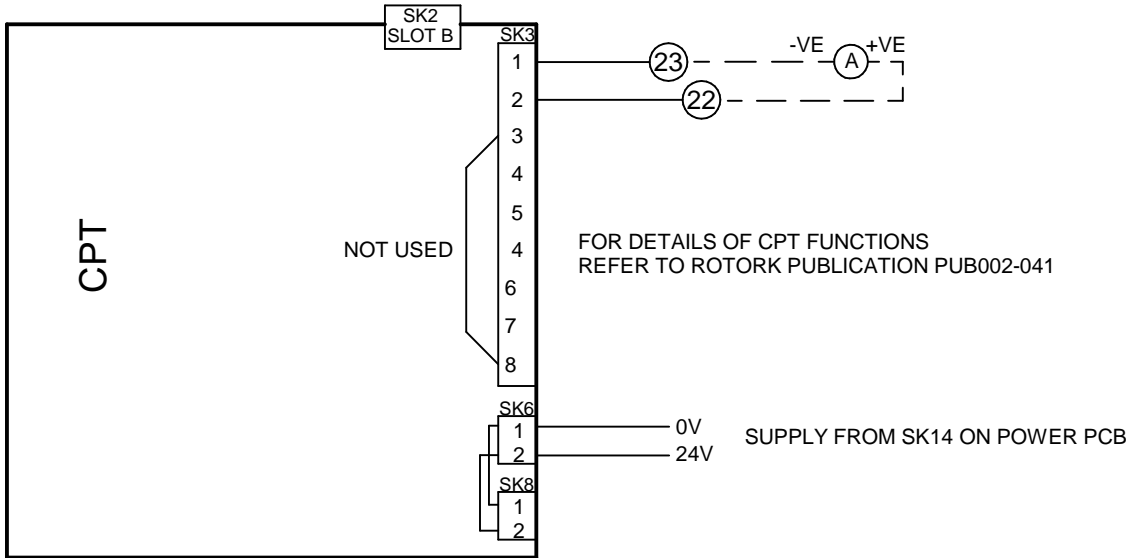


CPT

NOT USED

FOR DETAILS OF CPT FUNCTIONS
REFER TO ROTORK PUBLICATION PUB002-041

SUPPLY FROM SK14 ON POWER PCB

SLOT C

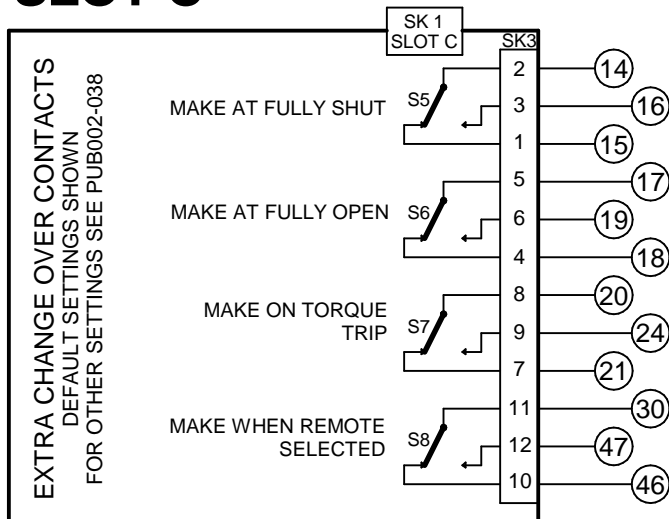

EXTRA CHANGE OVER CONTACTS
DEFAULT SETTINGS SHOWN
FOR OTHER SETTINGS SEE PUB002-038

- MAKE AT FULLY SHUT S5
- MAKE AT FULLY OPEN S6
- MAKE ON TORQUE TRIP S7
- MAKE WHEN REMOTE SELECTED S8

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
- Control signal duration to be 100ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- "S" contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote "S" contact indication only.
- Refer to installation manual for approved replacement battery types.

See Sheet 1 for all Revision details/information

Circuit Diagram Number	Issue No	Sheet
201K2010	1	2 of 2