


FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT **RWS133**



TRANSFORMER TAPPING OPTIONS	
Tap	Nominal 50/60Hz
TYPE 1	
W	220/230
X	380/400
Y	400,415/420
Z	440/460
FUSE FS 1=250mA ANTI-SURGE	
TYPE 2	
W	346/380
X	480/500
Y	240/240
Z	550/575
FUSE FS 1=250mA ANTI-SURGE	
TYPE 3	
X	660/660-690
Y	690/-
FUSE FS 1=150mA ANTI-SURGE	

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

DO NOT CONNECT TO TERMINALS MARKED

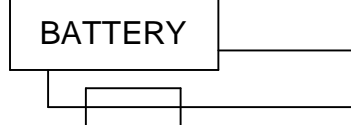

FS2 (IF FITTED) 100mA

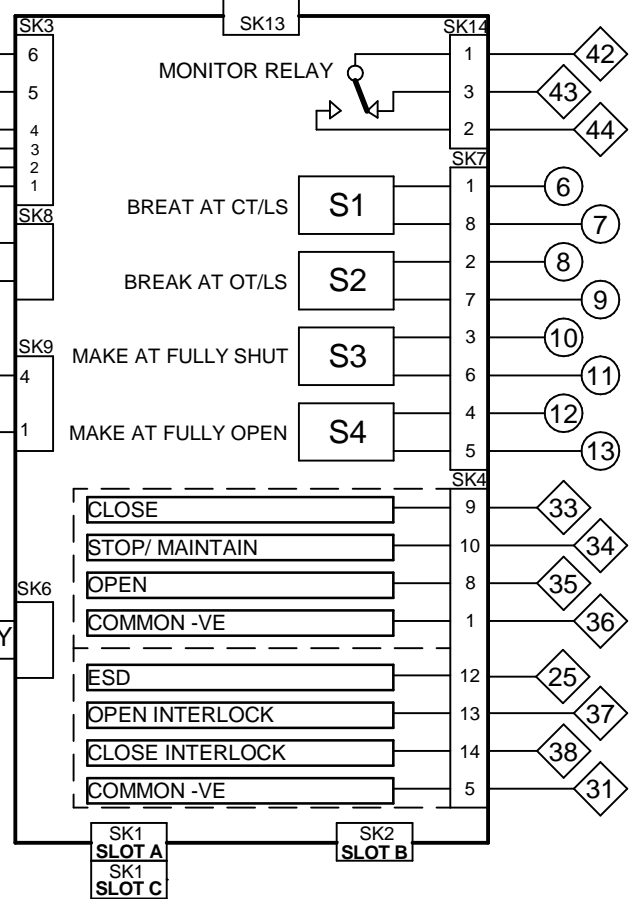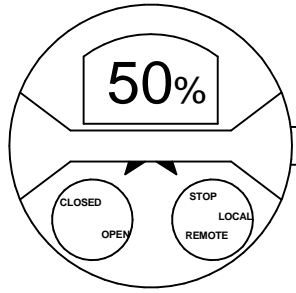

Iss	Date	Chkd	Revision Details
1	Dec-21	SN	First Issue

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-247-2304

IQ SET + AUX POWER + PUSH BUTTON + INDICATION RELAYS S5-S12 (2320-00 / 2340-00)

Drawn by: PMJ
Date : 081221
Base WD: 100S1420
Job No : - -
MI No : - -


Circuit Diagram Number
100S1420

Issue No
1


Sheet
1 of 2

92|94|B1|C1|B2|C2|J1|95|97|U1|Q1|V1


SLOT A

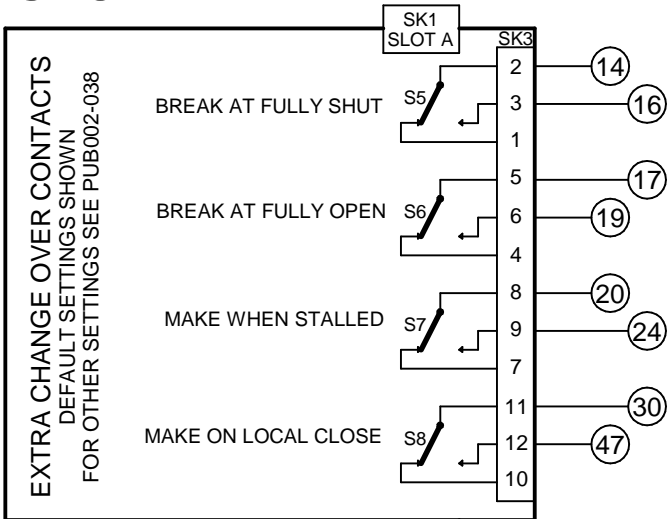

SLOT B

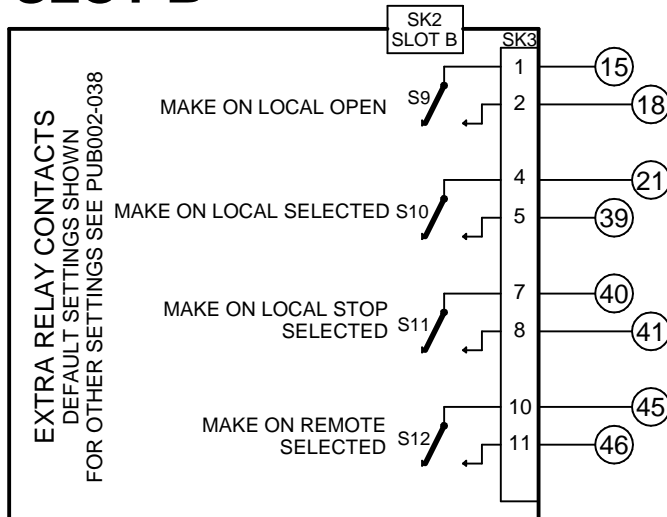

SLOT C

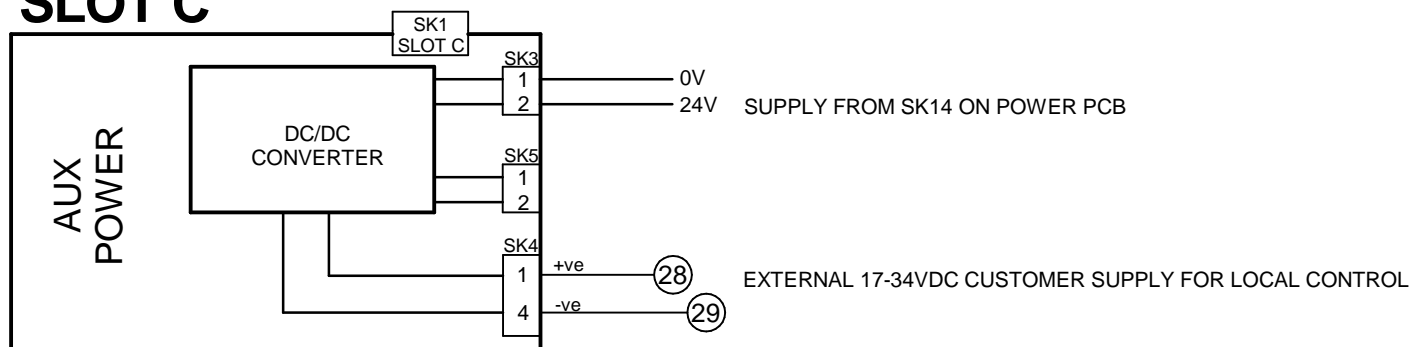

NOTES

- 1.FUSES:**
- PS1 is a self-resetting fuse.
 - Refer to publication PUB002-039 for approved fuses FS1 and FS2.
 - Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.
- 2.CONTROL:**
- Supply provided on terminals 4 & 5 only available when power is applied to the actuator :
 - Max external load 5W at 24Vdc / 5VA at 120Vac
 - Connect motor control contactor coils in series with CT/LS S1(closed) and OT/LS S2(open).
 - Voltage applied to CT/LS & OT/LS must not exceed 120V AC or DC.
 - Maximum individual switching power must not exceed 60W inductive or 150W resistive.

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- “S” contacts are user configurable and are shown in their default setting.
- Voltage applied to indication contacts must not exceed 120V AC or DC
- Maximum individual Switching power must not exceed 60W inductive load or 150W resistive load
- Total switched current for contacts S1 to S4 must not exceed 8A, with maximum individual current of 5A.

4.BATTERY:

- Battery maintains local and remote “S” contact indication only.
- Refer to installation manual for approved replacement battery types.