
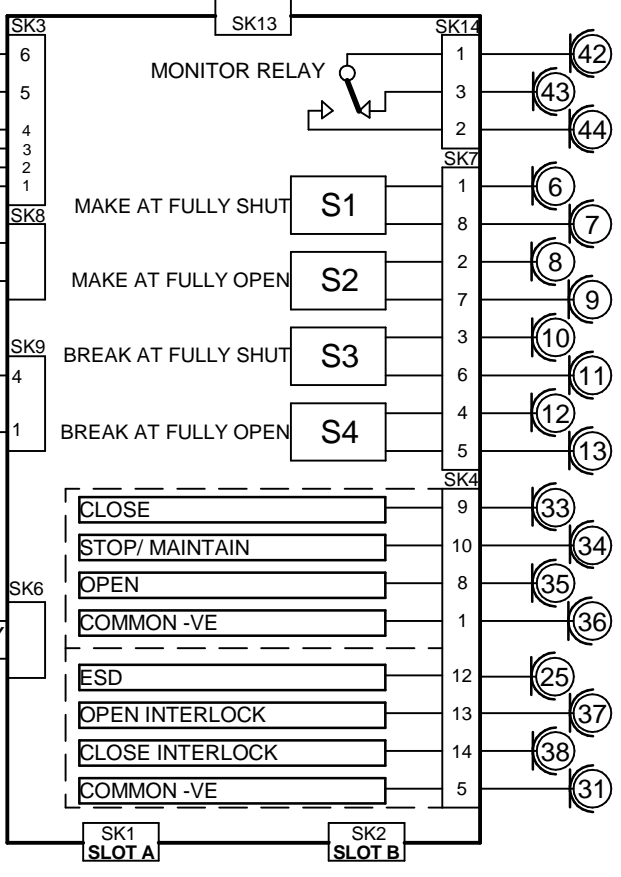


FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT **RWS100**

| TRANSFORMER TAPPING OPTIONS |                 |
|-----------------------------|-----------------|
| Tap                         | Nominal 50/60Hz |
| TYPE 1                      |                 |
| W                           | 220/230         |
| X                           | 380/400         |
| Y                           | 400,415/420     |
| Z                           | 440/460         |
| FUSE FS 1=250mA ANTI-SURGE  |                 |
| TYPE 2                      |                 |
| W                           | 346/380         |
| X                           | 480/500         |
| Y                           | 240/240         |
| Z                           | 550/575         |
| FUSE FS 1=250mA ANTI-SURGE  |                 |
| TYPE 3                      |                 |
| X                           | 660/660-690     |
| Y                           | 690/-           |
| FUSE FS 1=150mA ANTI-SURGE  |                 |

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

⊕ PLUG & SOCKET CONNECTION

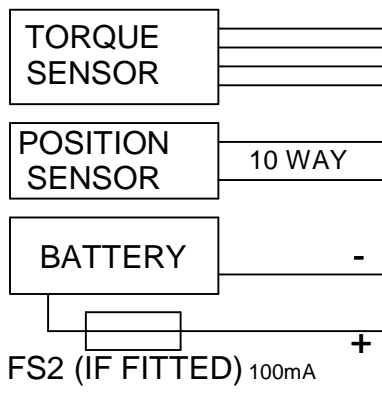

| Iss | Date   | Chkd | Revision Details |
|-----|--------|------|------------------|
| 1   | 200423 | JC1  | First Issue.     |


**www.rotork.com**

ROTORK CONTROLS LTD  
BATH, BA1 3JQ  
ENGLAND  
Tel:01225-733200


ROTORK CONTROLS INC  
ROCHESTER  
NY 14624, USA  
Tel:585-247-2304

|   |    |                        |    |          |          |
|---|----|------------------------|----|----------|----------|
| IQ + CPT + EXTRA INDICATION RELAYS S5-S12 + PLUG & SOCKET |    | Circuit Diagram Number |    | Issue No | Sheet    |
|   |    | <b>101B0022</b>        |    | <b>1</b> | <b>1</b> |
| B1  | C1 | B2                     | C2 | B1       | C1       |
| M1  | V1 | B1                     | C1 | M1       | V1       |


## SLOT A

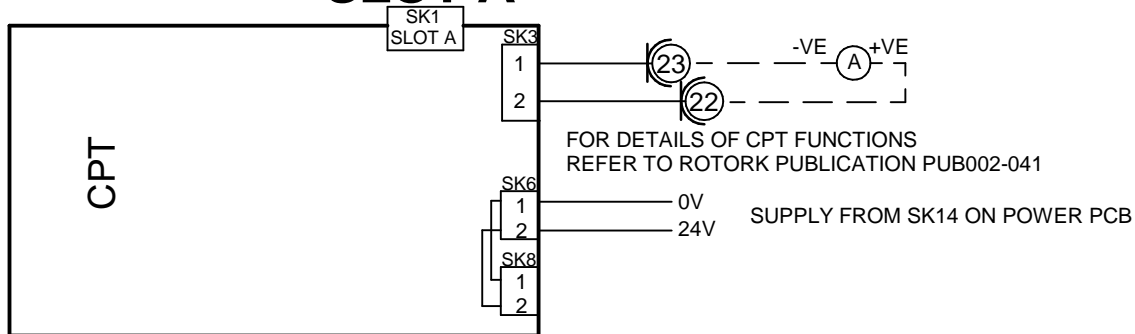

## SLOT B

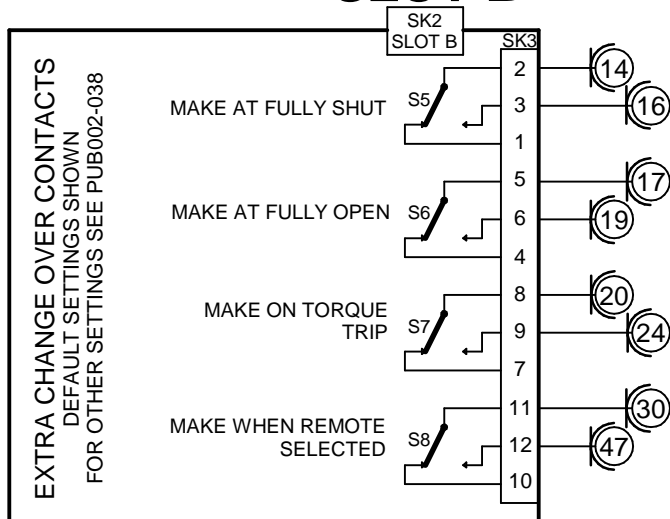

## SLOT C

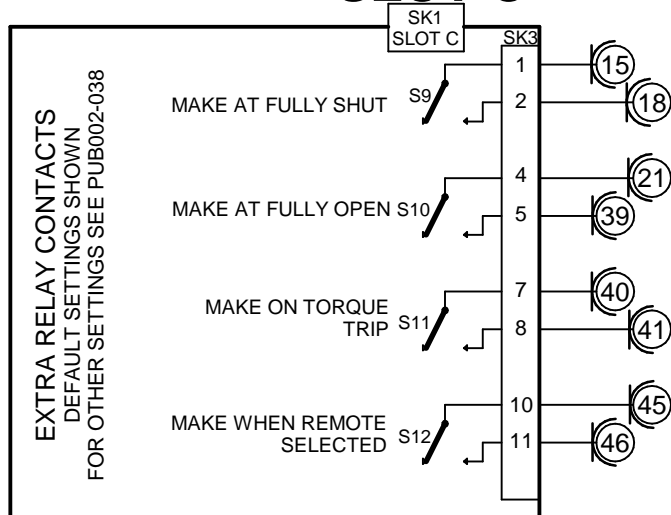

### NOTES

#### 1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

#### 2.REMOTE CONTROL:

- For typical remote control circuits refer to:
  - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
  - DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
  - AC: "on" ≥60Vac / "off" ≤40Vac, max 120Vac.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
  - 8mA at 24Vdc or 12mA at 120Vac.
- Supply provided on terminals 4 & 5:
  - Intended for remote control.
  - Max external load 5W at 24Vdc / 5VA at 120Vac

#### 3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- “S” contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown “unavailable”). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

#### 4.BATTERY:

- Battery maintains local and remote “S” contact indication only.
- Refer to installation manual for approved replacement battery types.