


CIRCUIT DRAWN WITH POWER SUPPLY OFF
 PLUG SELECTED VOLTAGE WIRE INTO TERMINAL "T"
 PLACE TWO REMAINING WIRES INTO POSITIONS "P"
 (ORDER NOT IMPORTANT)





FOR TYPICAL REMOTE CONTROL
 DETAILS, SEE DOCUMENT
RWS100

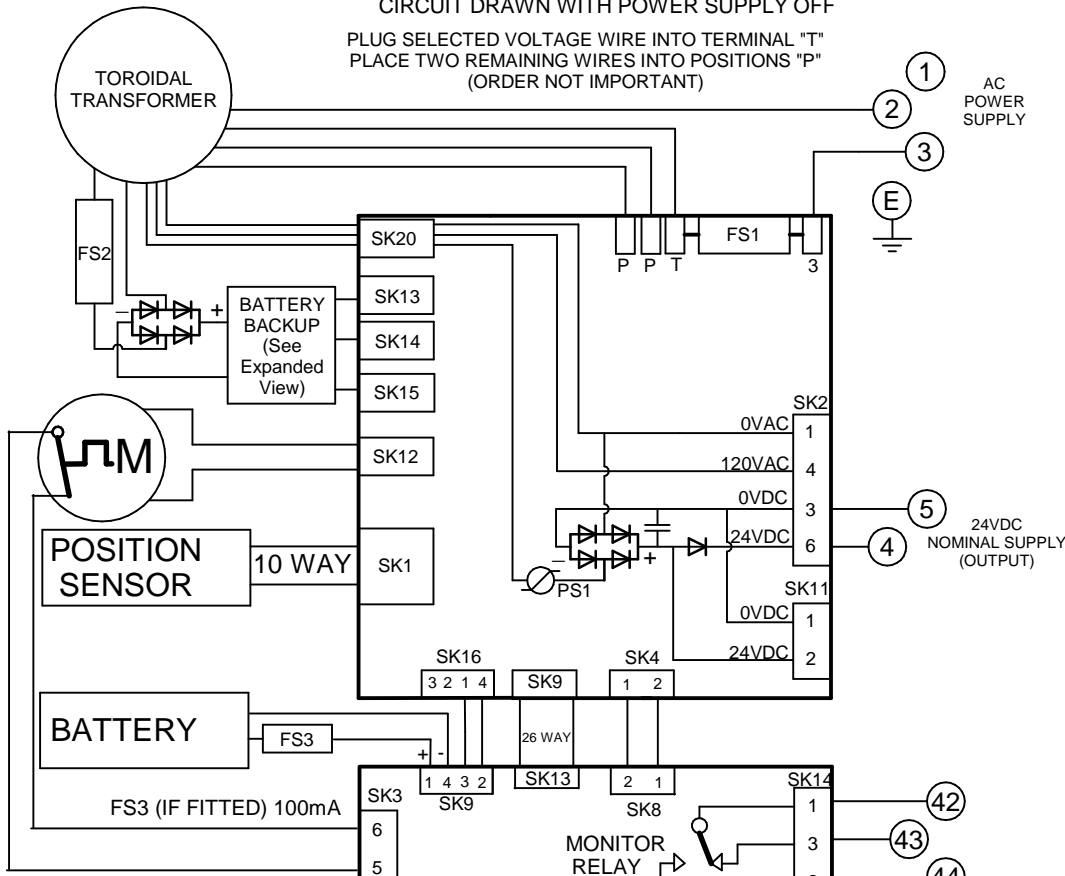

TRANSFORMER VOLTAGE OPTIONS:
 CONNECT CORRESPONDING COLOUR TO "T"

TYPE 1		
GREY	100V	FS1 - 5A ANTISURGE
PURPLE	110V	
BROWN	120V	
TYPE 2		
GREY	200V	FS1 - 2.5A ANTISURGE
PURPLE	230V	
BROWN	270V	
TYPE 3		
GREY	380V	FS1 - 2.0A ANTISURGE
PURPLE	400V	
BROWN	415V	
TYPE 4		
GREY	480V	FS1 - 2.0A ANTISURGE
PURPLE	575V	
BROWN	690V	

FS2 - 20A ATO FAST ACTING ALL TYPES

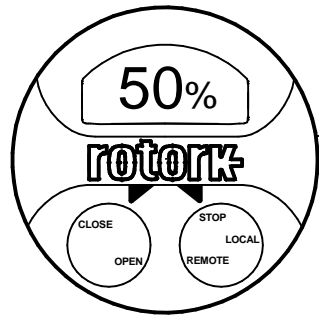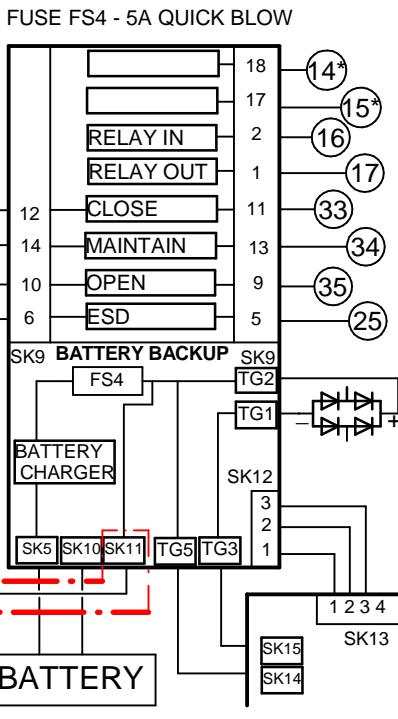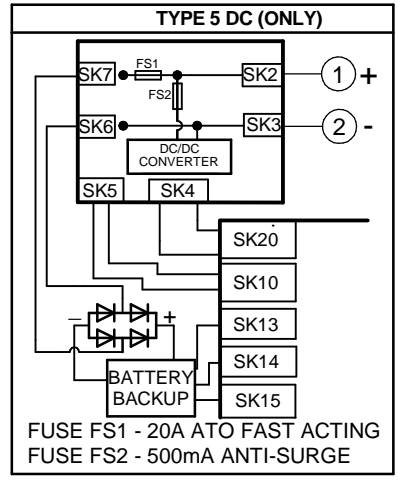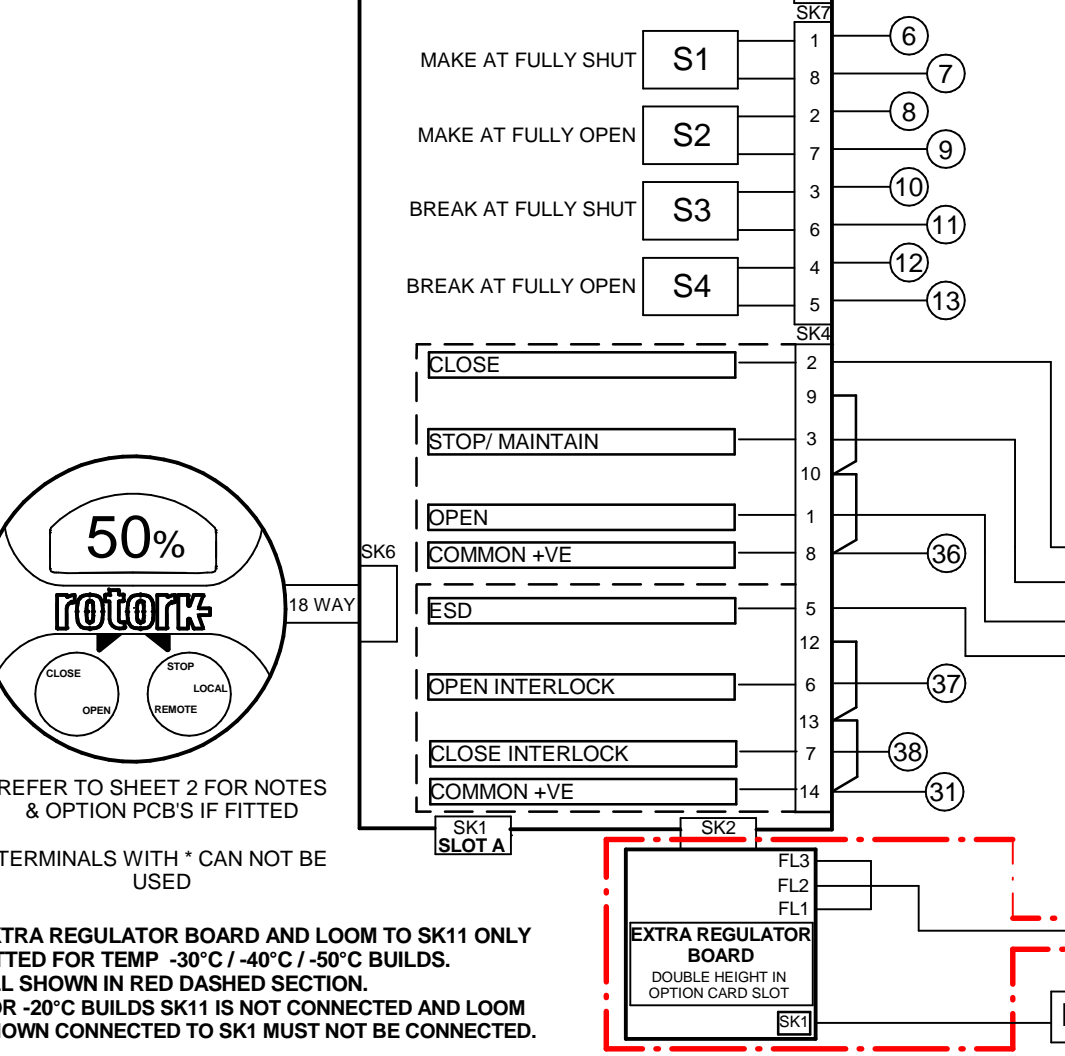

REFER TO SHEET 2 FOR NOTES
 & OPTION PCB'S IF FITTED
 TERMINALS WITH * CAN NOT BE
 USED

EXTRA REGULATOR BOARD AND LOOM TO SK11 ONLY
 FITTED FOR TEMP -30°C / -40°C / -50°C BUILDS.
 ALL SHOWN IN RED DASHED SECTION.
 FOR -20°C BUILDS SK11 IS NOT CONNECTED AND LOOM
 SHOWN CONNECTED TO SK1 MUST NOT BE CONNECTED.

Iss 1 2	Date 171023 280524	Chkd JC1 JC1	Revision Details First Issue Two terminal 4's corrected	www.rotork.com ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304	Drawn by: PJW Date : 171023 Base WD: 370B0100 Job No : -- MI No : --	Circuit Diagram Number 370B0100	Issue No 2	Sheet 1 of 2
B1 C1 B2 C2									

NO OPTIONS FITTED

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-065 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10% applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" $\geq 16\text{Vdc}$ / "off" $\leq 8\text{Vdc}$, max 60Vdc.
 - AC: "on" $\geq 60\text{Vac}$ / "off" $\leq 40\text{Vac}$, max 120Vac.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc or 12mA at 120Vac.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc / 5VA at 120Vac

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- "S" contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote "S" contact indication only.
- Refer to installation manual for approved replacement battery types.