


CIRCUIT DRAWN WITH POWER SUPPLY OFF

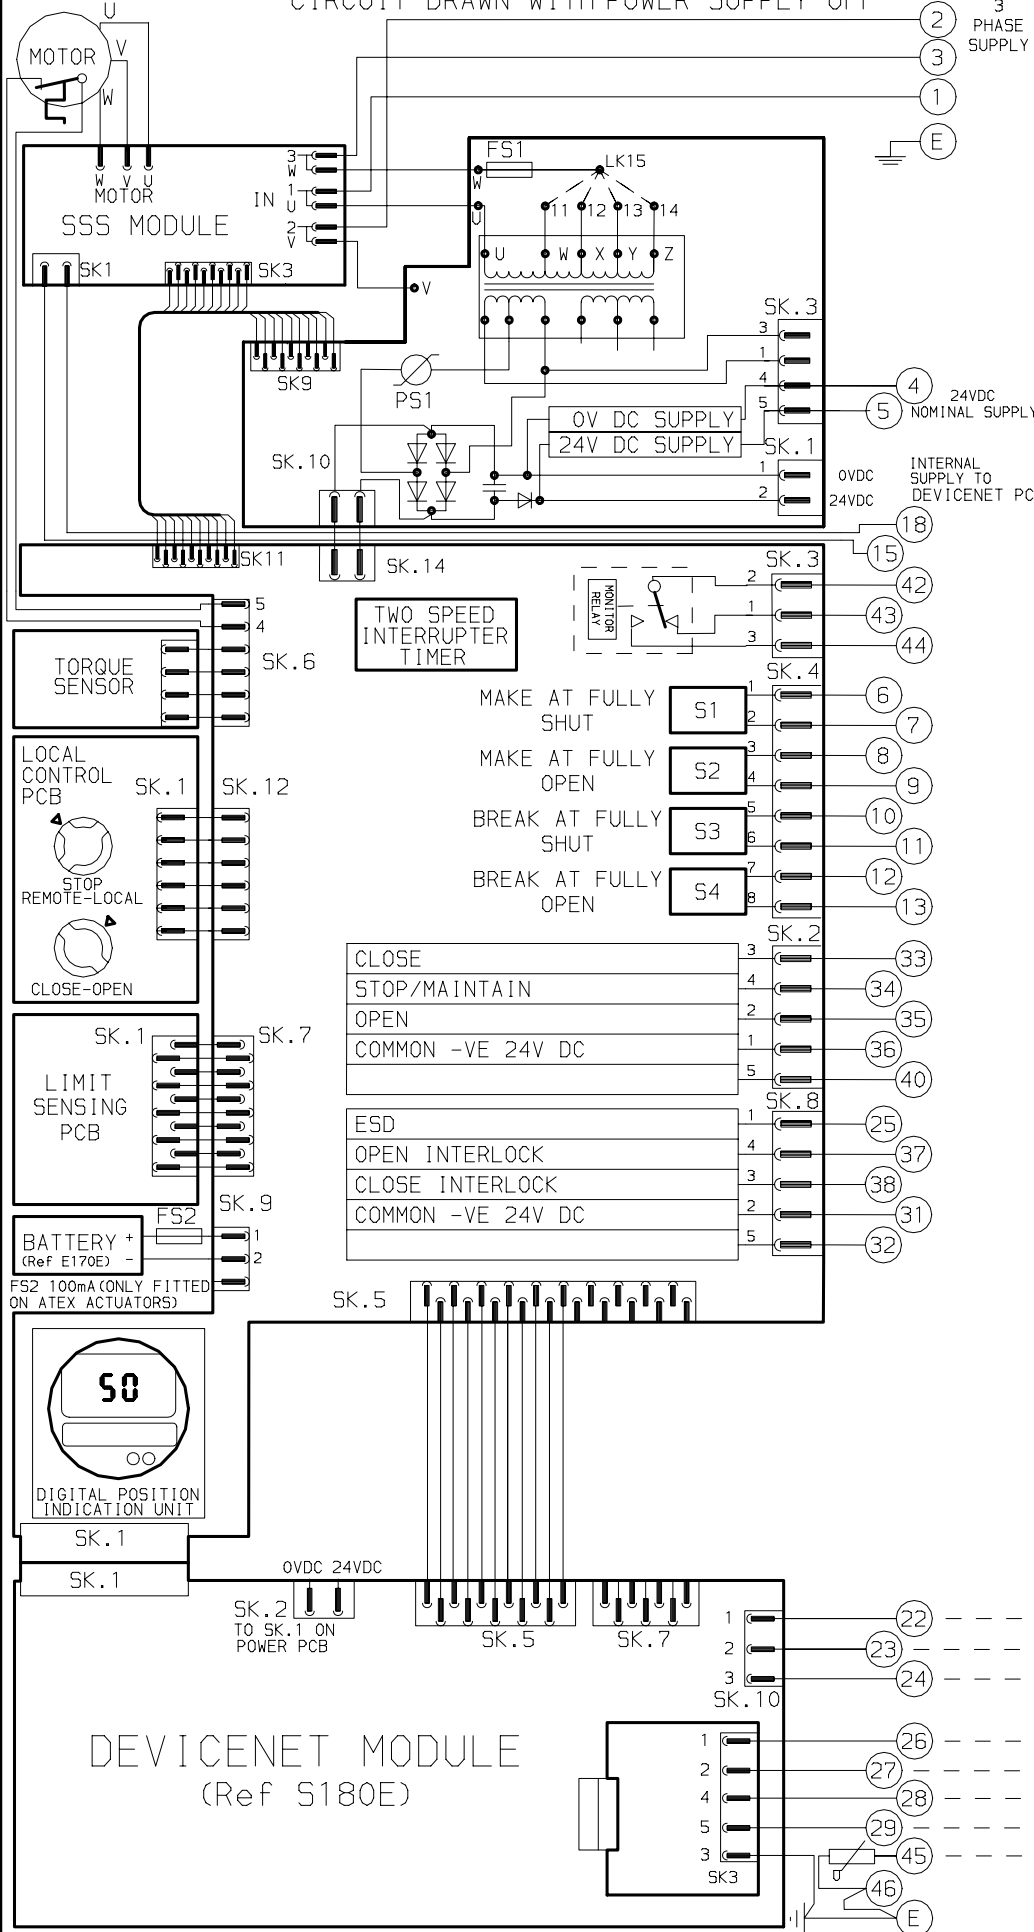

FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
No RWS

TRANSFORMER TAPPING OPTIONS

TYPE 1

TAP	NOM 50/60HZ	50HZ	60HZ
W	220/230	176-242	198-259
X	380/400	304-418	342-446
Y	415/420	332-457	374-487
Z	440/460	352-484	396-517

FUSE FS1 - 250mA ANTI-SURGE

TYPE 2

TAP	NOM 50/60HZ	50HZ	60HZ
W	346/380	285-388	321-419
X	480/500	406-552	432-564
Y	240/240	192-261	216-282
Z	550/575	445-605	501-625

FUSE FS1 - 250mA ANTI-SURGE

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY.

SUGGESTED FUSES:-
I Q10-20:10 Amp Ferraz G330010
I Q25-35:20 Amp Ferraz K330013
or EQUIVALENT PROTECTIVE DEVICE.

ALL TRANSFORMER TYPES - PS1 SELF
RESETTING
FUSE

NOTE

REFER TO PUBLICATION E170E FOR APPROVED FUSES FS1 AND FS2.

FOR TYPICAL REMOTE CONTROL INDICATING, MONITORING AND ALARM CIRCUITS SEE PUBLICATION E420E

MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION TO BE 100mS.

CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC

BRAKE ENABLE
LINK 4 TO 15 & 5 TO 18 TO ENABLE BRAKE

VOLTAGE INPUT (0-5 VOLTS)
+Ve TO 'A', 0 VOLTS TO COMMON
CURRENT INPUT (0-20mA)
LINK A TO B, CURRENT SOURCE BETWEEN A/B AND COMMON.

22 --- + ANALOGUE I/P 'A'
23 --- + ANALOGUE I/P 'B'
24 --- + COMMON

26 --- + +V (24VDC)
27 --- + CAN-H
28 --- + CAN-L
29 --- + CAN OV
45 --- + SCREEN

INDICATION CONTACTS S1-S4 ARE SHOWN IN THEIR DEFAULT CONFIGURATION. CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E170E

No	DATE	REVISION DETAILS
03	250210 PJW	SSS UPDATED TO CELDUC. Checked: JCI EC2680/1

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel: 01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel: 585-328-1550

CONFIG BY PRE
DATE 111004
CHECKED PJW
BASE WD --
JOB No --
M.I.No .

IQ SSS + DEVICENET & TIMER

CIRCUIT DIAGRAM No -REV 102
5000-710-03

B1 C1 B2 C2