


FOR TYPICAL REMOTE CONTROL  
DETAILS, SEE DOCUMENT  
**RWS100**

VOLTAGE OPTIONS	
VOLTAGE	SIZE
110VDC	10,12,18,20,25
48VDC	10,12,18
24VDC	10


REFER TO SHEET 2 FOR NOTES  
& OPTION PCB'S IF FITTED

Iss 1 2	Date 080616 230419	Chkd JC1 PJW	Revision Details FIRST ISSUE DC Note SHT.2 Corrected	<b>www.rotork.com</b>	IQ DC + EXTRA RELAYS S5-S8 + AUX POWER																				
			ROTOROK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTOROK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-247-2304	<table border="1"> <tr> <td>Drawn by: PJW</td> <td>Date : 080616</td> <td>Base WD: 140B1010</td> <td>Job No : --</td> <td>MI No : --</td> </tr> <tr> <td colspan="5" style="text-align: center;">Circuit Diagram Number <b>140B1010</b></td> </tr> <tr> <td colspan="5" style="text-align: center;">Issue No <b>2</b></td> </tr> <tr> <td colspan="5" style="text-align: center;">Sheet <b>1</b> of 2</td> </tr> </table>	Drawn by: PJW	Date : 080616	Base WD: 140B1010	Job No : --	MI No : --	Circuit Diagram Number <b>140B1010</b>					Issue No <b>2</b>					Sheet <b>1</b> of 2				
Drawn by: PJW	Date : 080616	Base WD: 140B1010	Job No : --	MI No : --																					
Circuit Diagram Number <b>140B1010</b>																									
Issue No <b>2</b>																									
Sheet <b>1</b> of 2																									
<table border="1" style="width: 100%;"> <tr> <td>B1</td> <td>C1</td> <td>B2</td> <td>C2</td> <td>B1</td> <td>C1</td> <td>M1</td> <td>V1</td> <td></td> <td></td> </tr> </table>						B1	C1	B2	C2	B1	C1	M1	V1												
B1	C1	B2	C2	B1	C1	M1	V1																		

## SLOT A

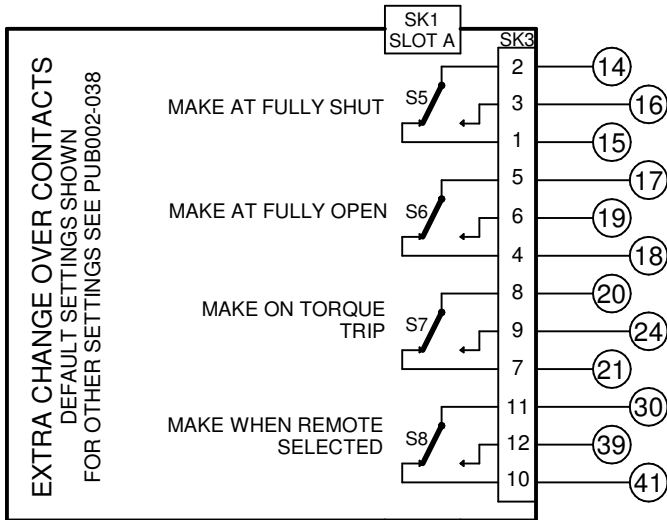

## SLOT B

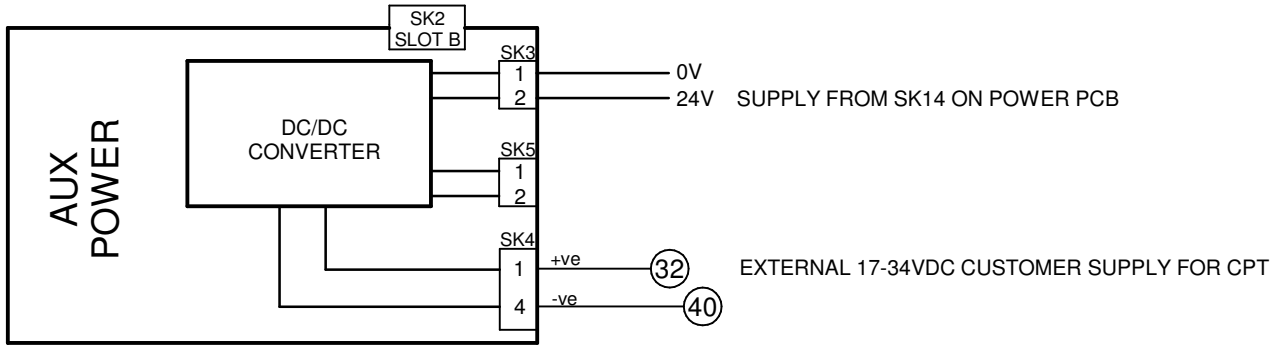

### NOTES

#### 1.FUSES:

- FS1 - 6A anti-surge
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle and speed is not guaranteed.

#### 2.REMOTE CONTROL:

- For typical remote control circuits refer to:
  - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
  - DC: "on"  $\geq 16V_{dc}$  / "off"  $\leq 8V_{dc}$ , max 60Vdc.
  - AC: "on"  $\geq 60V_{ac}$  / "off"  $\leq 40V_{ac}$ , max 120Vdc.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
  - 8mA at 24Vdc or 12mA at 120Vdc.
- Supply provided on terminals 4 & 5:
  - Intended for remote control.
  - Max external load 5W at 24Vdc / 5VA at 120Vdc

#### 5.DC:

- Default for sleep mode is DISABLED.
- Sleep mode can be enabled by moving link LK1 from NORM to SOLAR. (Basic DC solar is 150B0000)
- Actuator will remain powered up at all times while supply is present.
- 24VDC will be lost when in sleep mode.
- If customer supply is needed to wake actuator link LK3 must be moved to CUST for maintained customer supply.

#### 3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- "S" contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vdc
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

#### 4.BATTERY:

- Battery maintains local and remote "S" contact indication only.
- Refer to installation manual for approved replacement battery types.