

Drawn by: PJW

Job No : - -

: 280417

Base WD: 401B0030

Date

MI No

Circuit Diagram Number

B1 C1 B2 C2

ROTORK CONTROLS INC

ROCHESTER

NY 14624, USA

Tel:585-247-2304

ROTORK CONTROLS LTD

BATH, BA1 3JQ

Tel:01225-733200

**ENGLAND** 

IQ3

Issue No


2

Sheet

1

of 2

# SLOT A

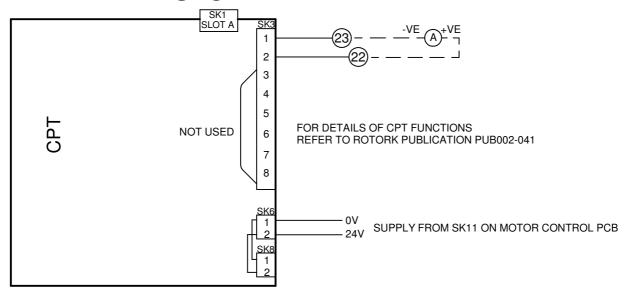

# **NOTES**

- -PS1 is a self-resetting fuse.
- -Refer to publication PUB002-065 for approved fuses FS1 and FS2.
- -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

#### 2.REMOTE CONTROL:

- -For typical remote control circuits refer to: -RWS indicated or PUB002-041.
- -For DC control connect -ve to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:
- -DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
- -Control signal duration to be 100ms minimum.
- -Maximum current drawn from remote control signals is:
- -8mA at 24Vdc
- -Supply provided on terminals 4 & 5:
- -Intended for remote control.
- -Max external load 5W at 24Vdc

## 3.INDICATION:

- -For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default
- setting. -Refer to PUB002-040 for functions and configuration instructions.
- -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions.
- -Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

### 4.BATTERY:

- -Battery maintains local and remote "S" contact indication only.
- -Refer to installation manual for approved replacement battery types.

Circuit Diagram Number 401B0030 2 of 2