

CIRCUIT DRAWN WITH POWER SUPPLY OFF

FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
No RWS

TRANSFORMER TAPPING OPTIONS

TYPE 1

TAP	NOM 50/60HZ	50HZ	60HZ
W	220/230	176-242	198-259
X	380/400	304-418	342-446
Y	415/420	332-457	374-487
Z	440/460	352-484	396-517

FUSE FS1 - 250mA ANTI-SURGE

TYPE 2

TAP	NOM 50/60HZ	50HZ	60HZ
W	346/380	285-388	321-419
X	480/500	406-552	432-564
Y	240/240	192-261	216-282
Z	550/575	445-605	501-625

FUSE FS1 - 250mA ANTI-SURGE

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY.

SUGGESTED FUSES:-
I Q10-20:10 Amp Ferraz G330010
I Q25-35:20 Amp Ferraz K330013
or EQUIVALENT PROTECTIVE DEVICE.
ALL TRANSFORMER TYPES - PS1 SELF
RESETTING
FUSE

NOTE

REFER TO PUBLICATION E170E FOR APPROVED FUSES FS1 AND FS2.

BRAKE ENABLE

LINK 4 TO 15 & 5 TO 18 TO ENABLE BRAKE

MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION TO BE 100ms.


CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC

WIRES ARE IDENTIFIED AT EACH END BY TERMINAL No. OR TAG No.

PAKSCAN ONLY

CARE SHOULD BE TAKEN TO ENSURE THAT CIRCUITS CONNECTED TO TERMINALS 4 OR 5 ARE NOT CONNECTED DIRECTLY OR INDIRECTLY TO GROUND.

INDICATION CONTACTS S1-S4 AND EXTRA INDICATION CONTACTS S5-S8 ARE SHOWN IN THEIR DEFAULT CONFIGURATION. CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E170E

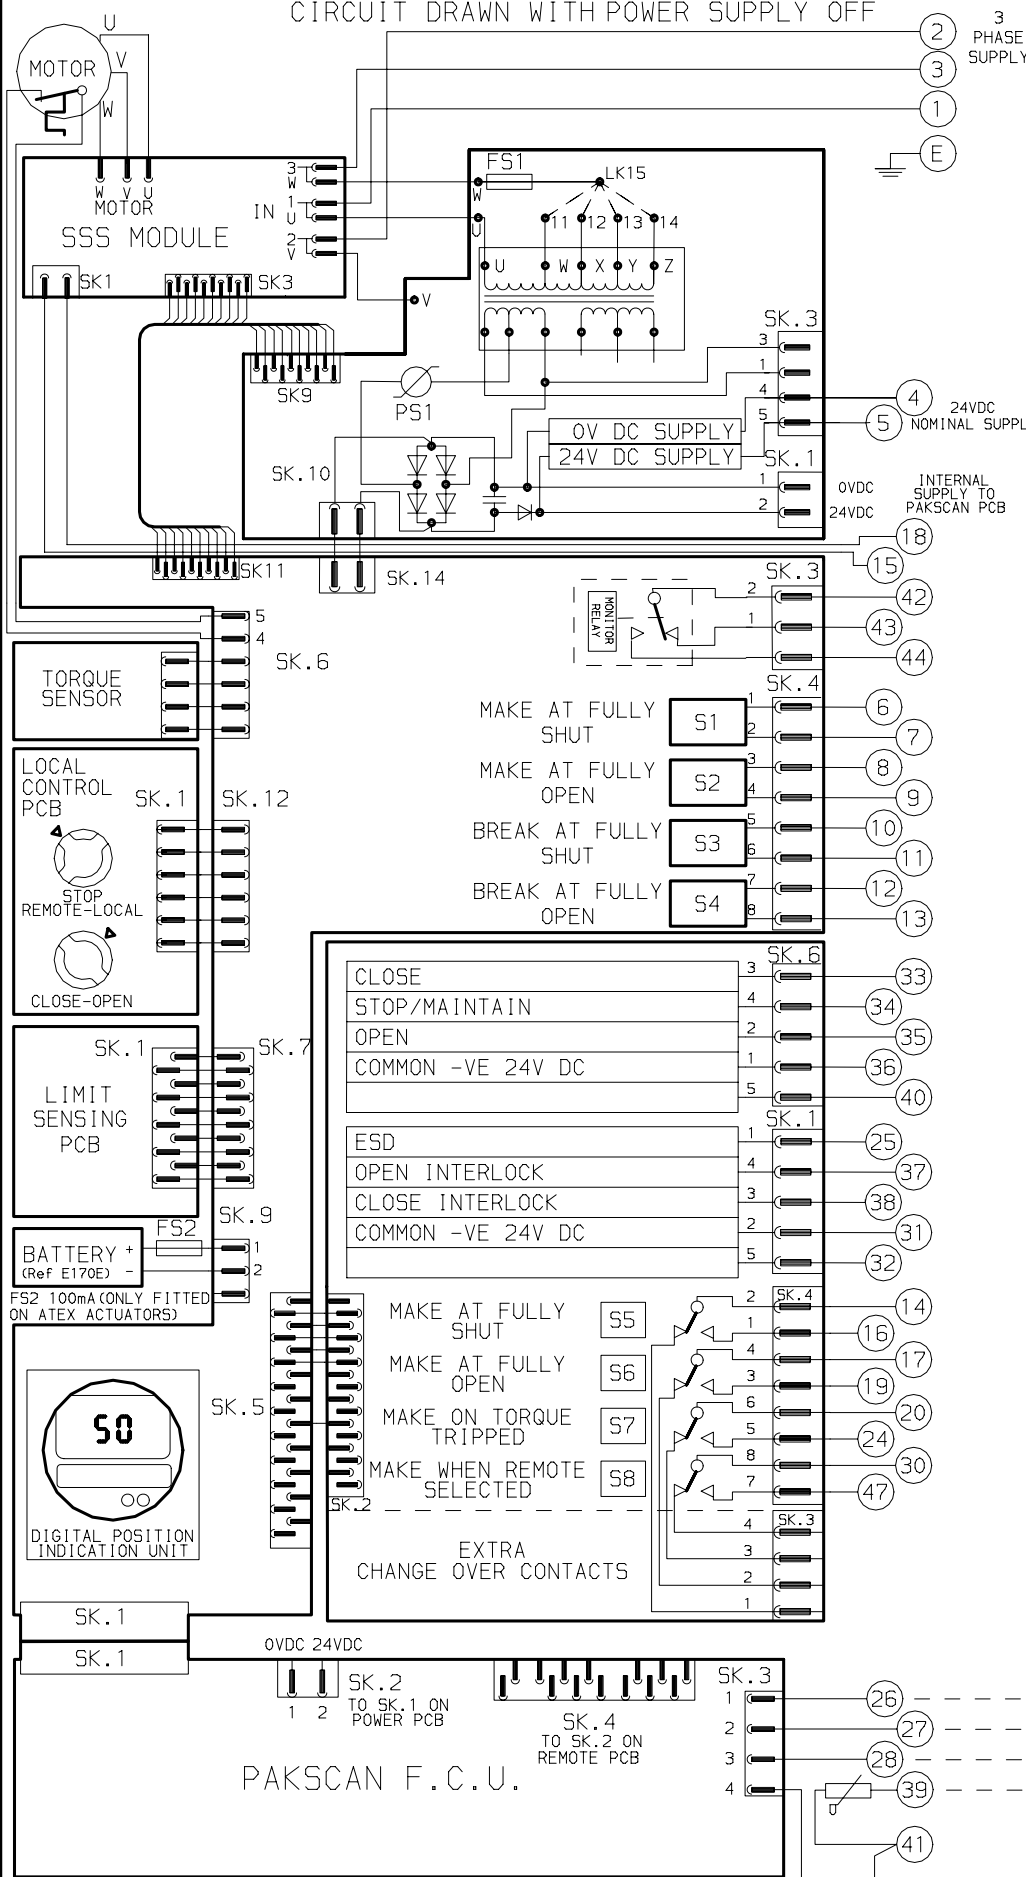

THE INFRA-RED SETTING TOOL ENABLES THE ACTUATOR TO BE CONFIGURED FOR VARIOUS FORMS OF HARDWIRED REMOTE CONTROL CIRCUITS.

THE SETTING TOOL ALSO ENABLES THE PAKSCAN F.C.U. BAUD RATE AND ADDRESS TO BE CONFIGURED.

No 02	DATE 250210 P.J.W	REVISION DETAILS	www.rotork.com	CONFIG BY P.J.W DATE 170808 CHECKED J.C1 BASE WD 5100A200 JOB No -- M.I.No .	IQM+INDICATION RELAYS & PAKSCAN REMOTE INPUTS								
		SSS UPDATED TO CELDUC. Checked: J.C1 EC2680/1											
		ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-328-1550	CIRCUIT DIAGRAM No -REV 5100A200-02									
<table border="1"> <tr> <td>B1</td> <td>C1</td> <td>B2</td> <td>C2</td> <td>B1</td> <td>C1</td> <td>M1</td> <td>V1</td> </tr> </table>						B1	C1	B2	C2	B1	C1	M1	V1
B1	C1	B2	C2	B1	C1	M1	V1						