


CIRCUIT DRAWN WITH
POWER SUPPLY OFF

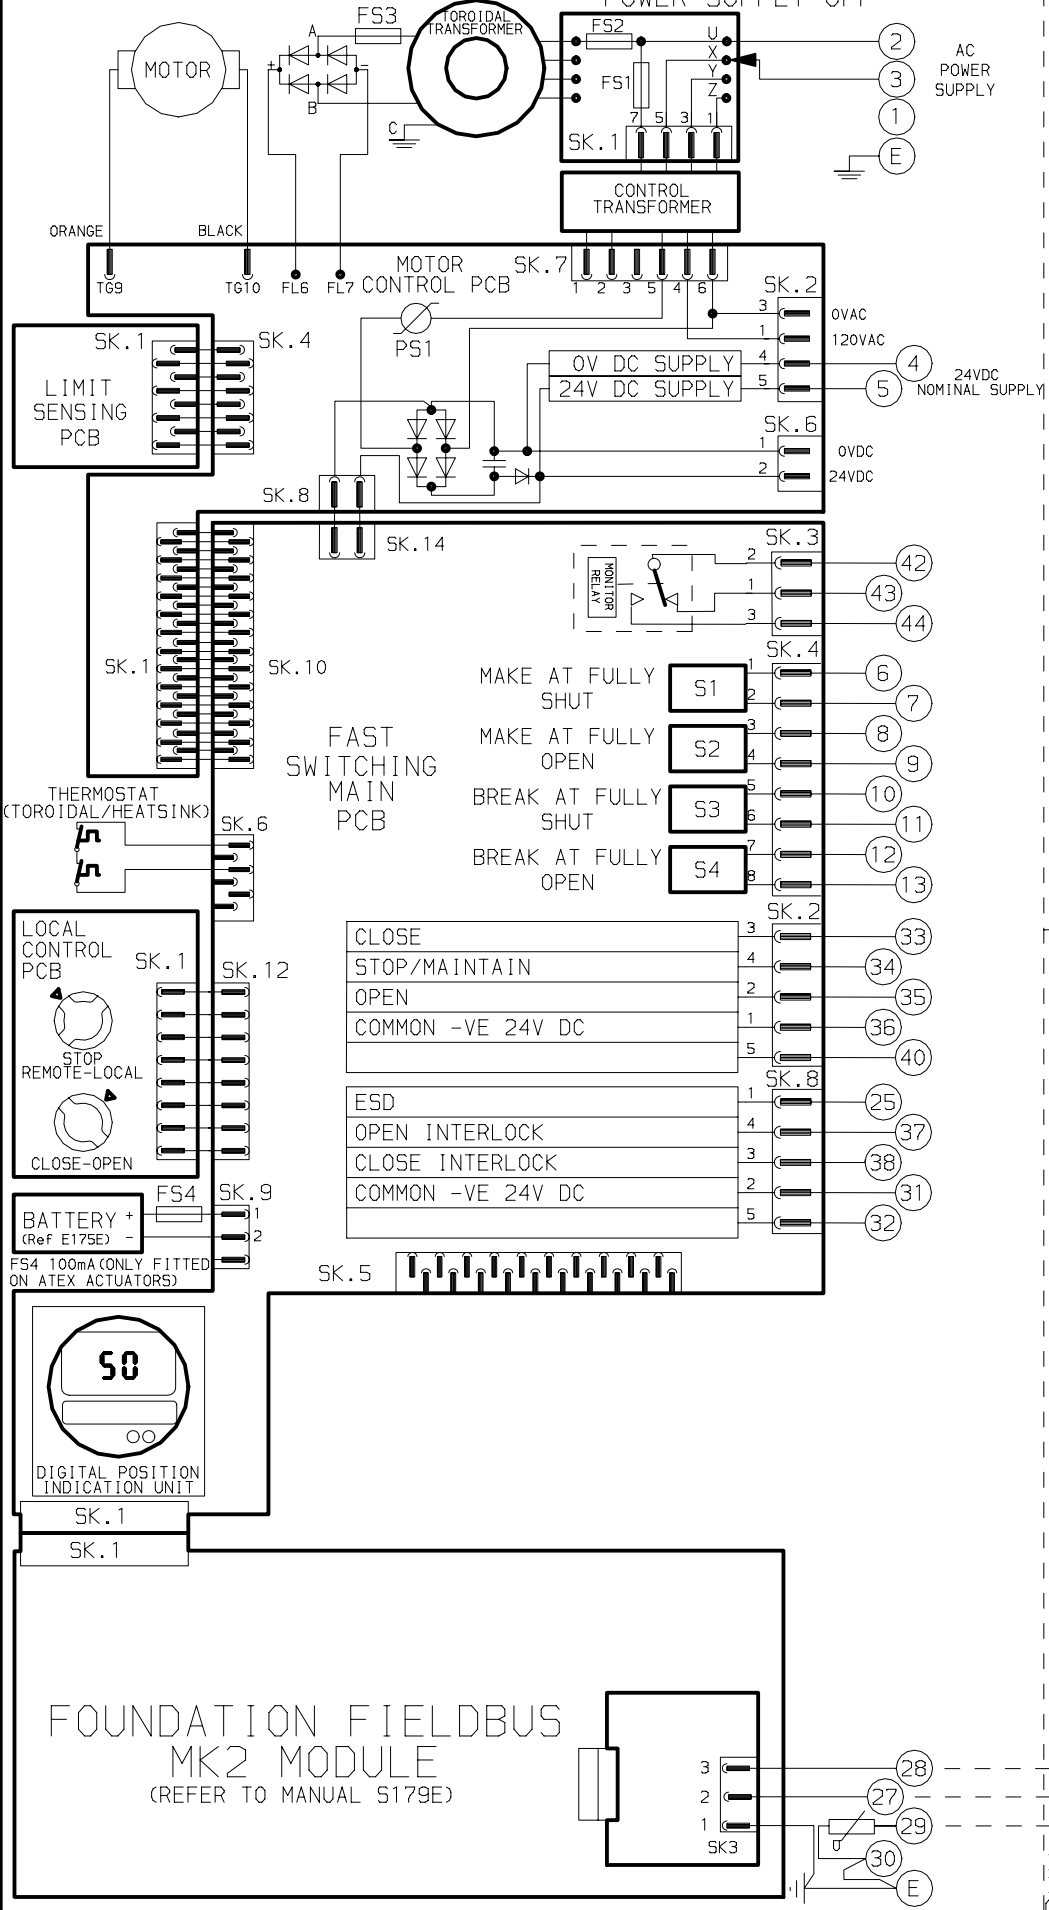

FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
No RWS


TRANSFORMER TAPPING OPTIONS

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 -
FUSE FS3 - 20A ATO FAST ACTING

TYPE 5 24VDC

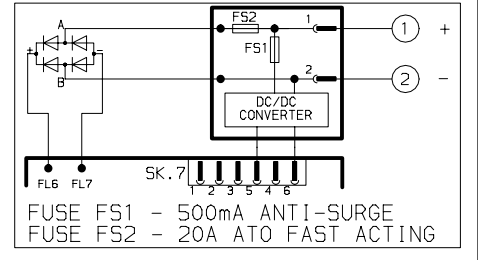

ALL TRANSFORMER TYPES -
PS1 SELF RESETTING FUSE

NOTE
REFER TO PUBLICATION E175E FOR
APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS
4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES
TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION
TO BE 100mS.

CURRENT DRAWN FROM EACH REMOTE
CONTROL SIGNAL IS 5mA ON 24V DC
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END
BY TERMINAL No. OR TAG No.

FOR TYPICAL REMOTE CONTROL
INDICATING, MONITORING AND ALARM
CIRCUITS SEE PUBLICATION E120E

--- 28 --- FIELD CONNECTION '-'
--- 27 --- FIELD CONNECTION '+'
--- 29 --- SCREEN

INDICATION CONTACTS S1-S4 ARE SHOWN
IN THEIR DEFAULT CONFIGURATION.
CONTACTS MAY BE CONFIGURED FOR ANY
OF THE FUNCTIONS DESCRIBED IN E175E

No	DATE	REVISION DETAILS
03	010307	IQPRO FIELDBUS UPDATE EC2197/4

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel: 01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel: 585-328-1550

CONFIG BY PJW
DATE 180204
CHECKED DA
BASE WD 7000-800
JOB No -
M.I.No -

IQTM + FOUNDATION
FIELDBUS

CIRCUIT DIAGRAM No -REV 107
7000-800-03

B1 C1 B2 C2