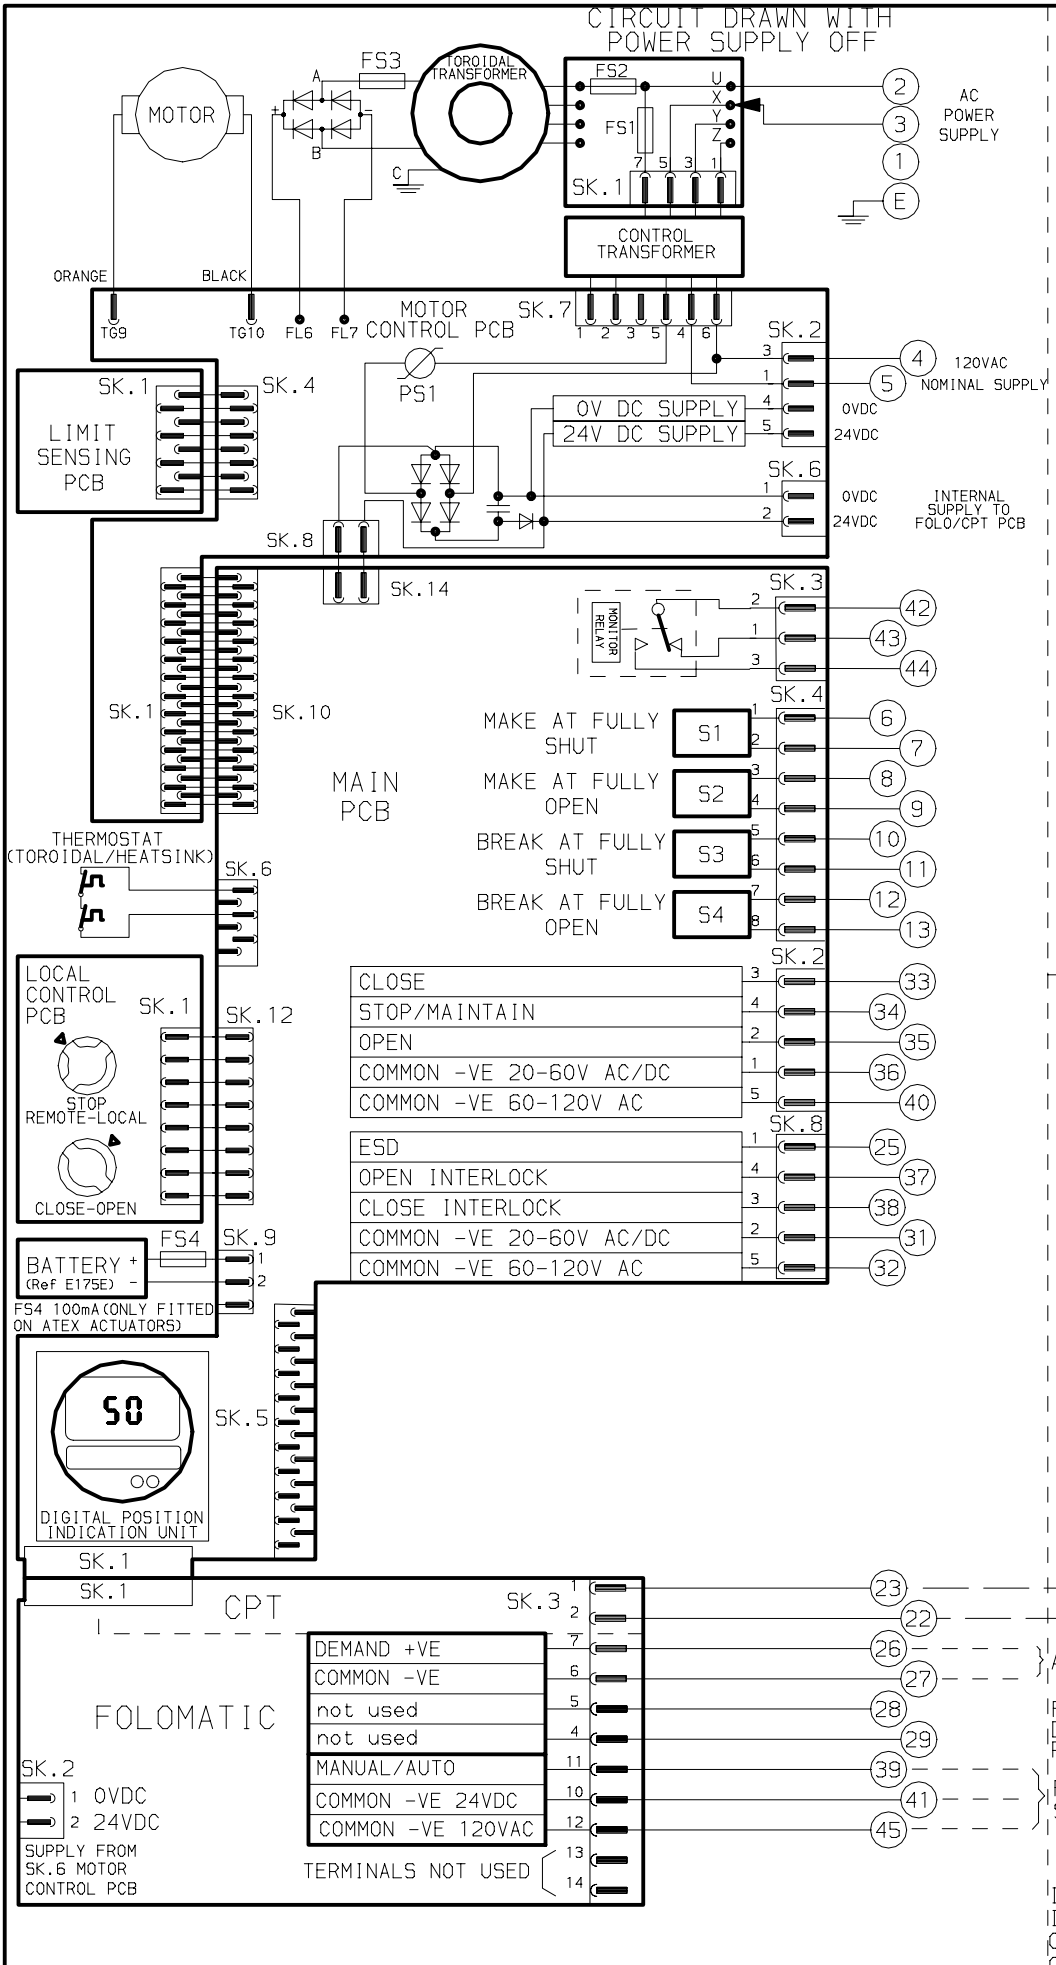

FOR TYPICAL REMOTE CONTROL DETAILS SEE DOCUMENT RWS303

TRANSFORMER TAPPING OPTIONS

TYPE 1

TAP	NOM	RANGE
X	100	80-120
Y	110	88-132
Z	120	96-144
FS1-250mA A/S FS2-5A A/S		

TYPE 2

TAP	NOM	RANGE
X	200	160-240
Y	230	184-276
Z	270	216-324
FS1-150mA A/S FS2-2.5A A/S		

TYPE 3

TAP	NOM	RANGE
X	380	304-456
Y	400	320-480
Z	415	332-498
FS1-100mA A/S FS2-1.5A A/S		

TYPE 4

TAP	NOM	RANGE
X	480	384-576
Y	575	460-690
Z	690	552-828
FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1,2,3 & 4 - FUSE FS3 - 20A ATO FAST ACTING

ALL TRANSFORMER TYPES - PS1 SELF RESETTING FUSE

NOTE

REFER TO PUBLICATION E175E FOR APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 9VA.

CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF'= 3V
MINIMUM CONTROL SIGNAL DURATION TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END BY TERMINAL No. OR TAG No.

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION E120E

FOR MANUAL/AUTO CONFIGURATION SETTINGS, PLEASE REFER TO E175E

INDICATION CONTACTS S1-S4 ARE SHOWN IN THEIR DEFAULT CONFIGURATION. CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E175E

No	DATE	REVISION DETAILS
03	110407	IQ PRO UPDATE. EC2198/1

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-328-1550

CONFIG BY PJW
DATE 060104
CHECKED DA
BASE WD 6010-101
JOB No -
M.I.No -

IQT + FOLOMATIC & CPT & 120VAC ON 4 & 5.

CIRCUIT DIAGRAM No -REV IQT
6010-101-03
B1 C1 B2 C2