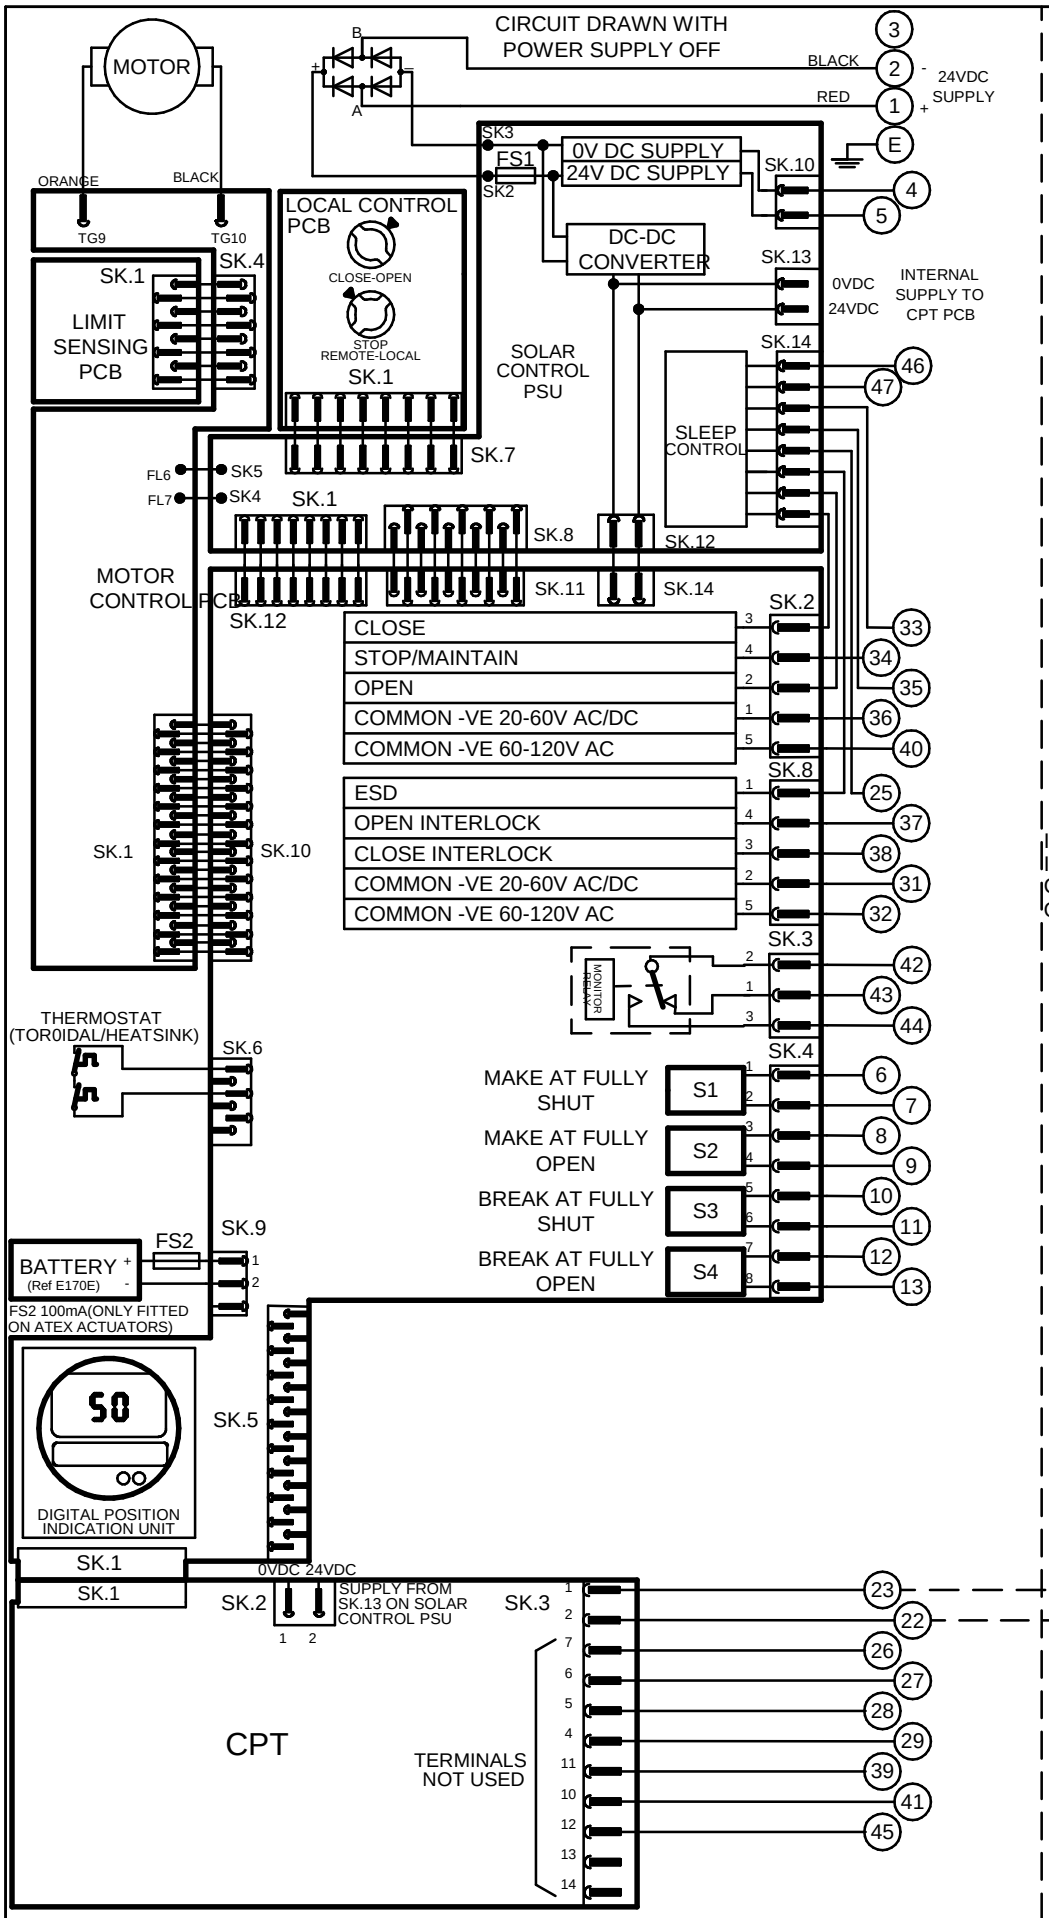

FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT

RWS300

NOTE

DEFAULT FOR SLEEP MODE IS ENABLE TO DISSABLE SLEEP MODE CONNECT 5 TO 46 & 4 TO 47. ACTUATOR WILL REMAIN POWERED UP AT ALL TIMES WHILE SUPPLY IS PRESENT SLEEP MODE CAN ALSO BE DISABLED BY MOVING LINK LK1 FROM SOLAR TO NORM.

MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 5W.

REFER TO PUBLICATION E170E FOR APPROVED FUSES
FUSE FS1 - 6A ANTI-SURGE

CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF'= 3V
MINIMUM CONTROL SIGNAL DURATION TO BE 4 SECOND.

CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END BY TERMINAL No. OR TAG No.

INDICATION CONTACTS S1-S4 ARE SHOWN IN THEIR DEFAULT CONFIGURATION. CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E170E

FOR DETAILS OF CPT FUNCTIONS REFER TO ROTORK PUBLICATION E120E

Iss	Date	Chkd	Revision Details
2	260617	PJW	CPT supply note corrected + converted to SE format.

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-247-2304

IQT DC SOLAR + CPT .

Drawn by: JC1
Date : 050916
Base WD: --
Job No : --
MI No : .

Circuit Diagram No: 6012-000
B1 C1 B2 C2
Issue No: 2