

FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT RWS102


TRANSFOR MER TAPPING OPTIONS						
Тар	Nominal 50/60Hz					
TYPE 1						
W	220/230 380/400					
Х						
Y	400,415/420					
Z	440/460					
FUSE FS1=250mA ANTI-SURGE						
TYPE 2						
W	346/380					
Х	480/500					
Y	240/240 550/575					
Z						
FUSE FS1=250mA ANTI-SURGE						

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY. SUGGESTED FUSES :-IQ10-20:10 Amp FERRAZ G330010 IQ25-35:20 Amp FERRAZ K330013 ALTERNATIVES = IQ10-20:10 Amp SIBA 50-179-06/10A IQ25-35:20 Amp SIBA 50-179-06/20A OR EQUIVALENT PROTECTIVE DEVICE.

lss	Date	Chkd	Revision Details	www. rot	ork.	IQM + FOLOMA	ATIC + CPT + AUX POWER +	EXTR	A
1	140214	JC1	First Issue.	www. I U U		RELAYS S5-S8 & TIMER.			
2	230614		400v added to type 1		RUTURK CUNTRULS INC	Drawn by: PJW Date : 140214	Circuit Diagram Number		Sheet
			tapping Y. Note added to sheet 2 note 1.	,	ROCHESTER NY 14624, USA	Base WD: 203B1011	203B1011	∾ 2	1
3	170616	PW	Updated notes on page 2.	Tel:01225-733200	Tel:585-247-2304	Job No : MI No : MI04522	B1C1B2C2B1C1M1V1	3	of 2

IQ3

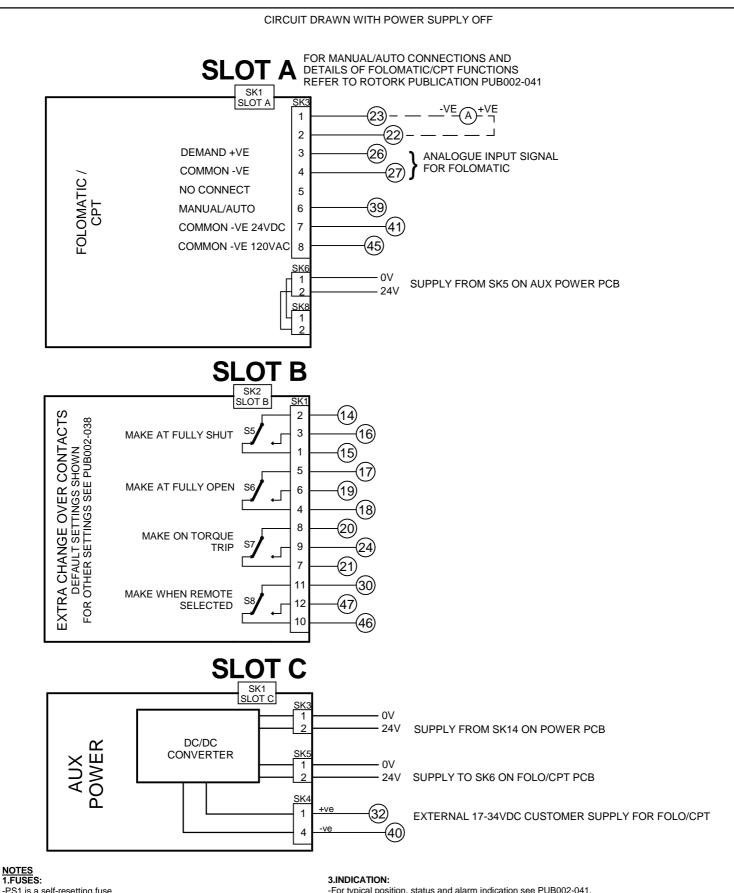

-PS1 is a self-resetting fuse. -Refer to publication PUB002-039 for approved fuses FS1 and FS2. -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed. 2.REMOTE CONTROL: -For typical remote control circuits refer to:

-RWS indicated or PUB002-041.

-For DC and AC control, connect -ve/0V to terminal 36.

-(For negative switch / positive common, refer to RWS indicated). -Control signal threshold voltages:

-DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.

-Control signal duration to be 100ms minimum. -Maximum current drawn from remote control signals is:

-8mA at 24Vdc

-Supply provided on terminals 4 & 5: -Intended for remote control.

-Max external load 5W at 24Vdd

-For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting. -Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions. -Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.

See Sheet 1 for all Revision details/information

3

2 of 2

Circuit Diagram Number

203B1011