


CIRCUIT DRAWN WITH POWER SUPPLY OFF

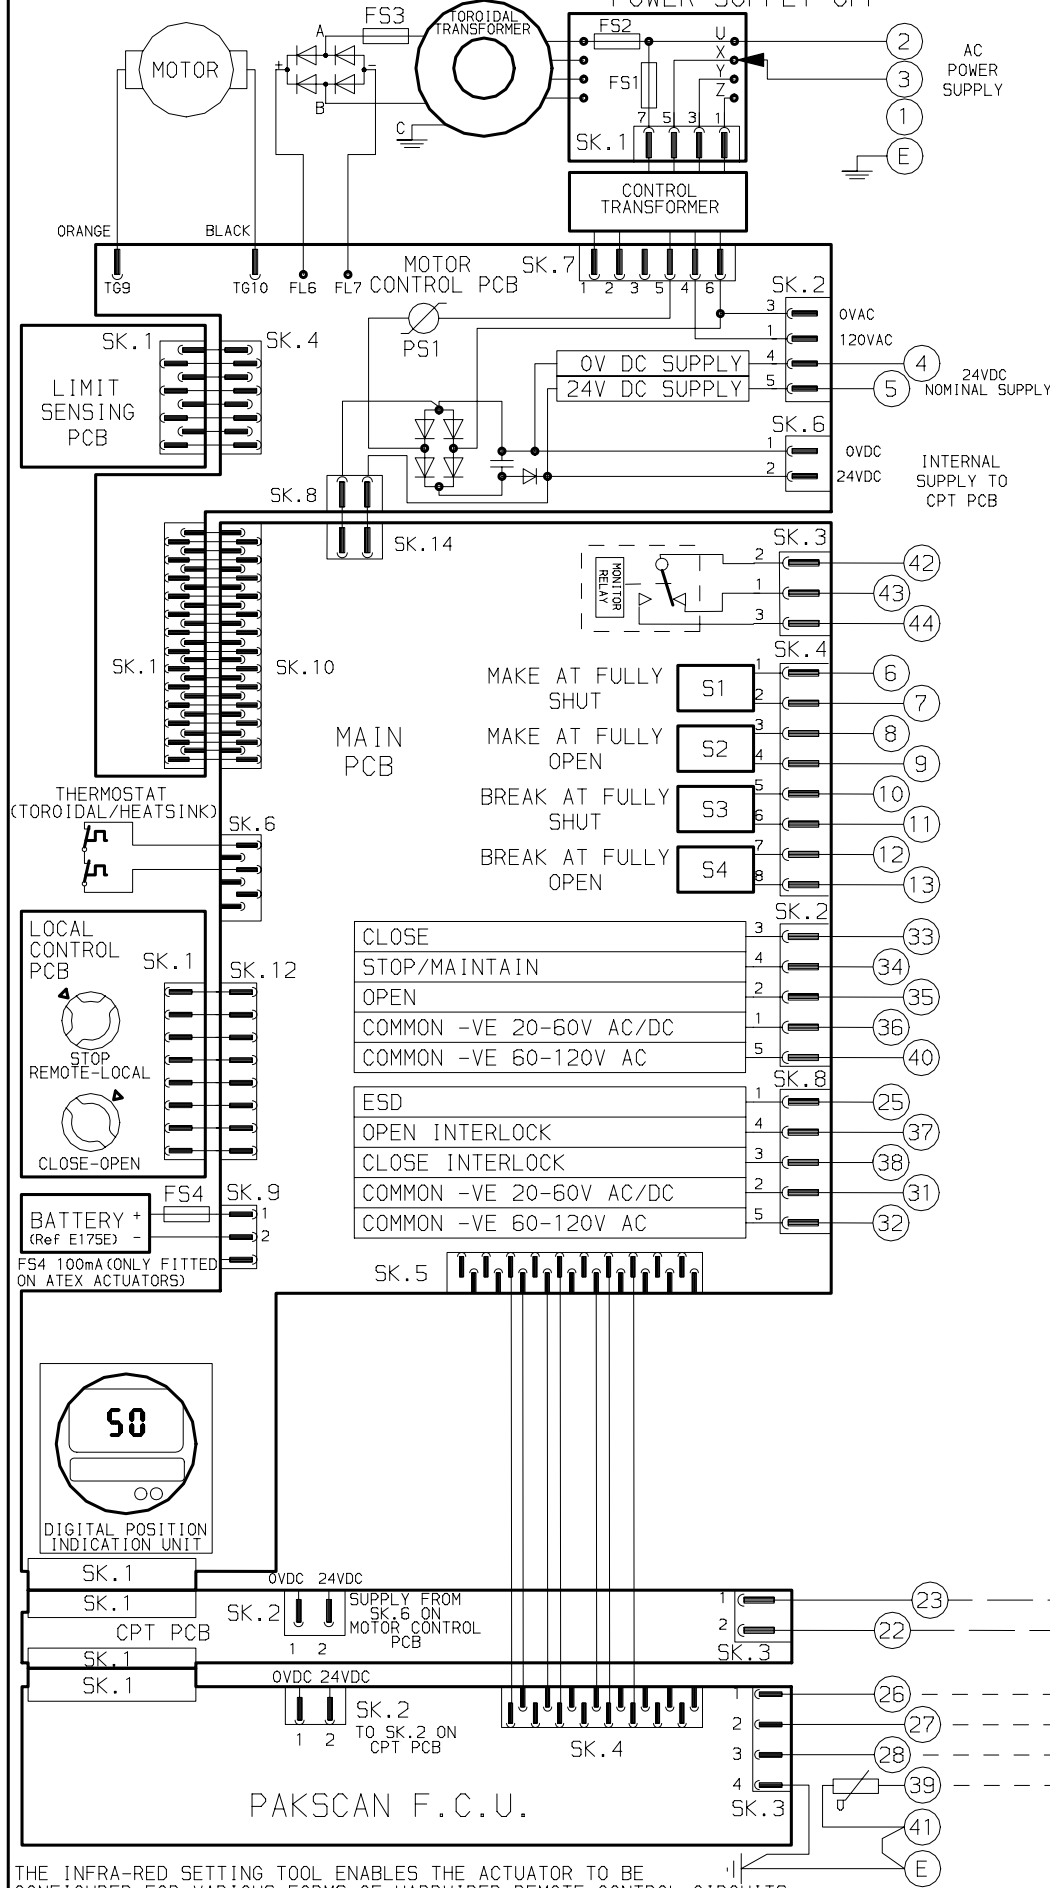

FOR TYPICAL REMOTE CONTROL DETAILS SEE DOCUMENT  
No RWS


TRANSFORMER TAPPING OPTIONS

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

TRANSFORMER TYPES 1, 2, 3 & 4 - FUSE FS3 - 20A ATO FAST ACTING


TYPE 5 24VDC

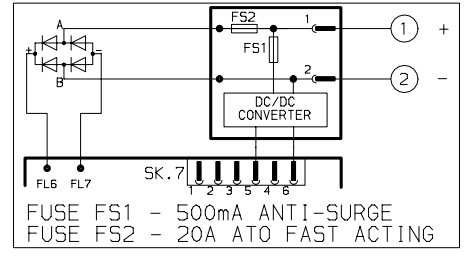

ALL TRANSFORMER TYPES - PS1 SELF RESETTING FUSE

NOTE  
REFER TO PUBLICATION E175E FOR APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 5W.  
CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC  
MAXIMUM 'OFF' = 3V  
MINIMUM CONTROL SIGNAL DURATION TO BE 300MS.  
CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC OR 12mA ON 120V AC  
WIRES ARE IDENTIFIED AT EACH END BY TERMINAL No. OR TAG No.  
INDICATION CONTACTS S1-S4 ARE SHOWN IN THEIR DEFAULT CONFIGURATION.  
CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E175E  
PAKSCAN ONLY  
CARE SHOULD BE TAKEN TO ENSURE THAT CIRCUITS CONNECTED TO TERMINALS 4 OR 5 & 22 OR 23 ARE NOT CONNECTED DIRECTLY OR INDIRECTLY TO GROUND.

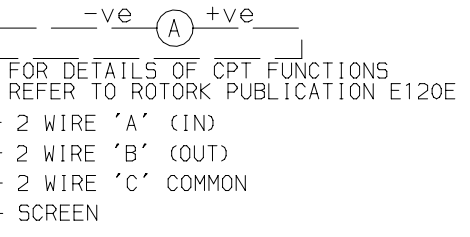

THE INFRA-RED SETTING TOOL ENABLES THE ACTUATOR TO BE CONFIGURED FOR VARIOUS FORMS OF HARDWIRED REMOTE CONTROL CIRCUITS. THE SETTING TOOL ALSO ENABLES THE PAKSCAN F.C.U. BAUD RATE AND ADDRESS TO BE CONFIGURED.

No <b>04</b>	DATE 190808 JCI	REVISION DETAILS PAKSCAN ONLY NOTE REVISED TO INC TERMINALS 22 & 23	<b>www.rotork.com</b>		CONFIG BY PJW	IQT + PAKSCAN + CPT
					DATE 040803	
ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel: 01225-733200			ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel: 585-328-1550		CHECKED TH	CIRCUIT DIAGRAM No -REV <b>6010-200-04</b>
					BASE WD 6010-200	
					JOB No -	B1 C1 B2 C2
					M.I.No -	