


CIRCUIT DRAWN WITH  
POWER SUPPLY OFF

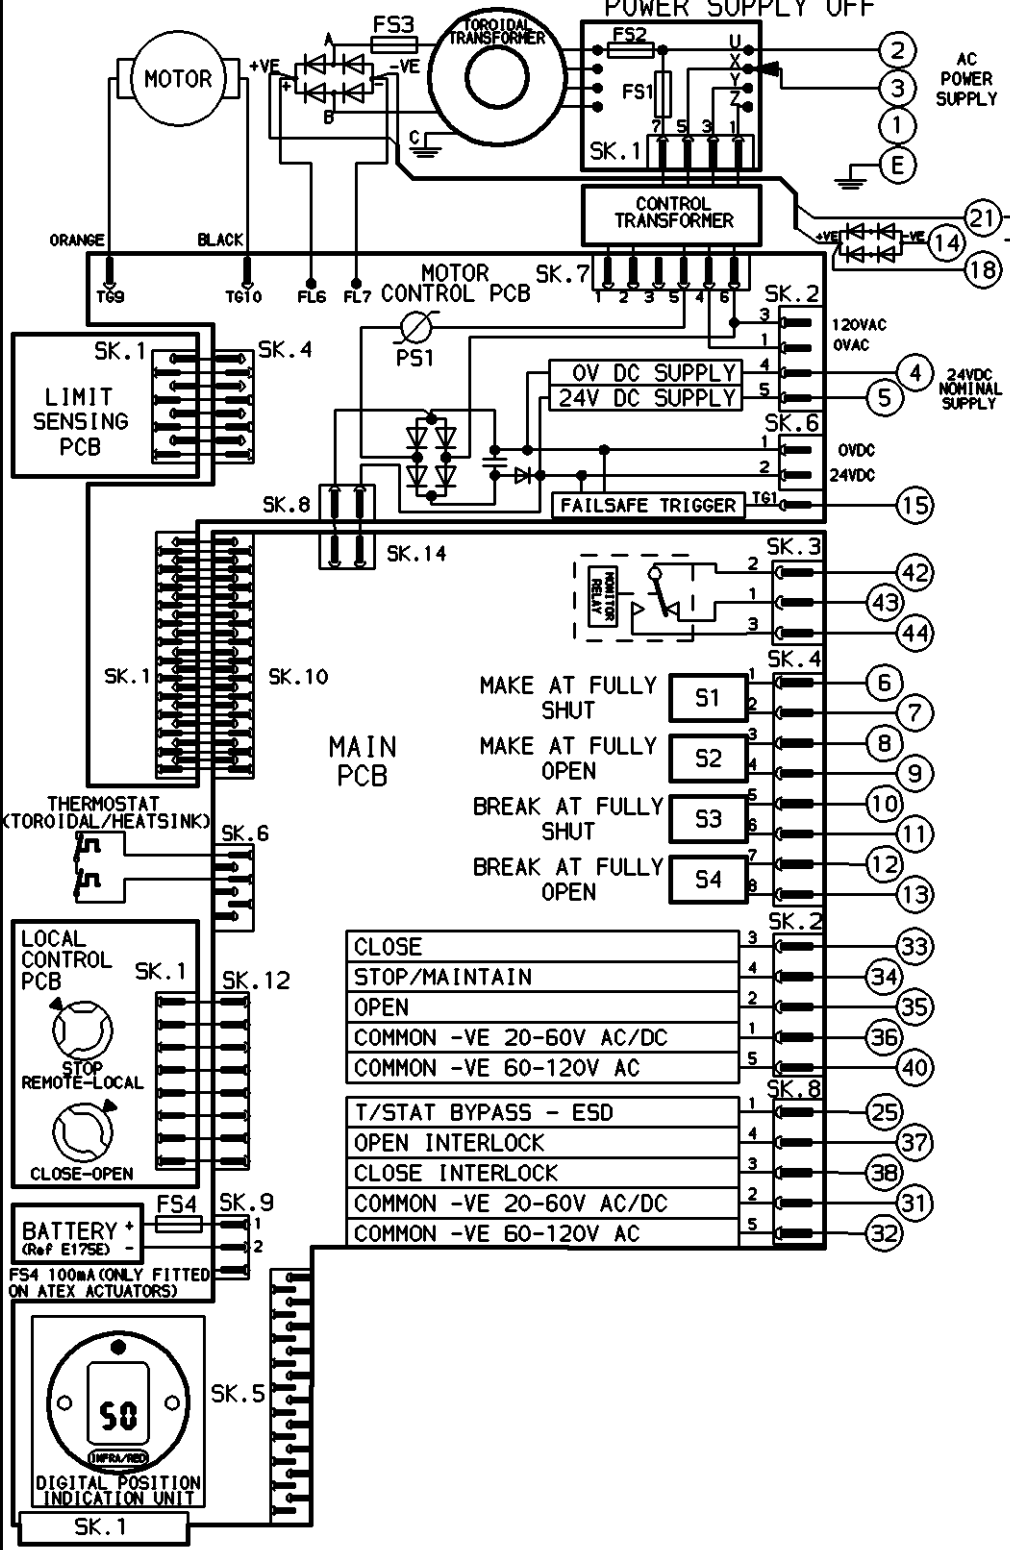

FOR TYPICAL REMOTE CONTROL  
DETAILS SEE DOCUMENT  
**RWS300**

**TRANSFORMER TAPPING OPTIONS**

TYPE 1			TYPE 2		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	100	80-120	X	200	160-240
Y	110	88-132	Y	230	184-276
Z	120	96-144	Z	270	216-324
FS1-250mA A/S FS2-5A A/S			FS1-150mA A/S FS2-2.5A A/S		

TYPE 3			TYPE 4		
TAP	NOM	RANGE	TAP	NOM	RANGE
X	380	304-456	X	480	384-576
Y	400	320-480	Y	575	460-690
Z	415	332-498	Z	690	552-828
FS1-100mA A/S FS2-1.5A A/S			FS1-50mA A/S FS2-1.6A F/A		

ALL TRANSFORMER TYPES -  
FUSE FS3 - 20A ATO FAST ACTING  
PS1 SELF RESETTING FUSE

FAILSAFE OPERATION - ON LOSS OF 3-PHASE,  
CUSTOMER SUPPLY ON 4 & 5 IS ALSO LOST.  
THE LOSS OF CUSTOMER SUPPLY MUST BE  
USED AS THE FAILSAFE TRIGGER  
TERMINAL 15 MUST ONLY BE USED WHEN AN  
INTERNAL FAILSAFE BATTERY PACK IS FITTED  
THE 24VDC EXTERNAL SUPPLY FOR FAILSAFE  
OPERATION MUST BE APPLIED TO TERMINALS  
21 & 14.  
REMOTE INPUTS MUST ALSO USE THIS SUPPLY  
ACTUATOR ESD ACTION(A1) DEFAULT STAY PUT  
ESD CONTACT(A2) DEFAULT N/O MAKE FOR ESD

**NOTE**  
REFER TO PUBLICATION E175E FOR  
APPROVED FUSES FS1, FS2 AND FS3.

MAX EXTERNAL LOAD ON TERMINALS  
4 & 5 TO BE 5W.  
CONTROL SIGNAL THRESHOLD VOLTAGES  
TO BE MINIMUM 'ON' 20V AC/DC  
MAXIMUM 'OFF' = 3V  
MINIMUM CONTROL SIGNAL DURATION  
TO BE 300ms.

CURRENT DRAWN FROM EACH REMOTE  
CONTROL SIGNAL IS 5mA ON 24V DC  
OR 12mA ON 120V AC  
WIRES ARE IDENTIFIED AT EACH END  
BY TERMINAL No. OR TAG No.

INDICATION CONTACTS S1-S4 ARE SHOWN  
IN THEIR DEFAULT CONFIGURATION.  
CONTACTS MAY BE CONFIGURED FOR ANY  
OF THE FUNCTIONS DESCRIBED IN E175E

No	DATE	REVISION DETAILS
01		

**www.rotork.com**

ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-328-1550
---	---

CONF16 BY PJW  
DATE 270104  
CHECKED TH  
BASE WD 6000-000  
JOB No -  
M.I.No -

**IQT + EXTERNAL  
FAILSAFE**

CIRCUIT DIAGRAM No -REV 160  
**6008-000-01**

B1 C1 B2 C2