


FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT **RWS100**

| TRANSFORMER TAPPING OPTIONS | |
|-----------------------------|-----------------|
| Tap | Nominal 50/60Hz |
| TYPE 1 | |
| W | 220/230 |
| X | 380/400 |
| Y | 400,415/420 |
| Z | 440/460 |
| FUSE FS 1=250mA ANTI-SURGE | |
| TYPE 2 | |
| W | 346/380 |
| X | 480/500 |
| Y | 240/240 |
| Z | 550/575 |
| FUSE FS 1=250mA ANTI-SURGE | |
| TYPE 3 | |
| X | 660/660-690 |
| Y | 690/- |
| FUSE FS 1=150mA ANTI-SURGE | |

REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

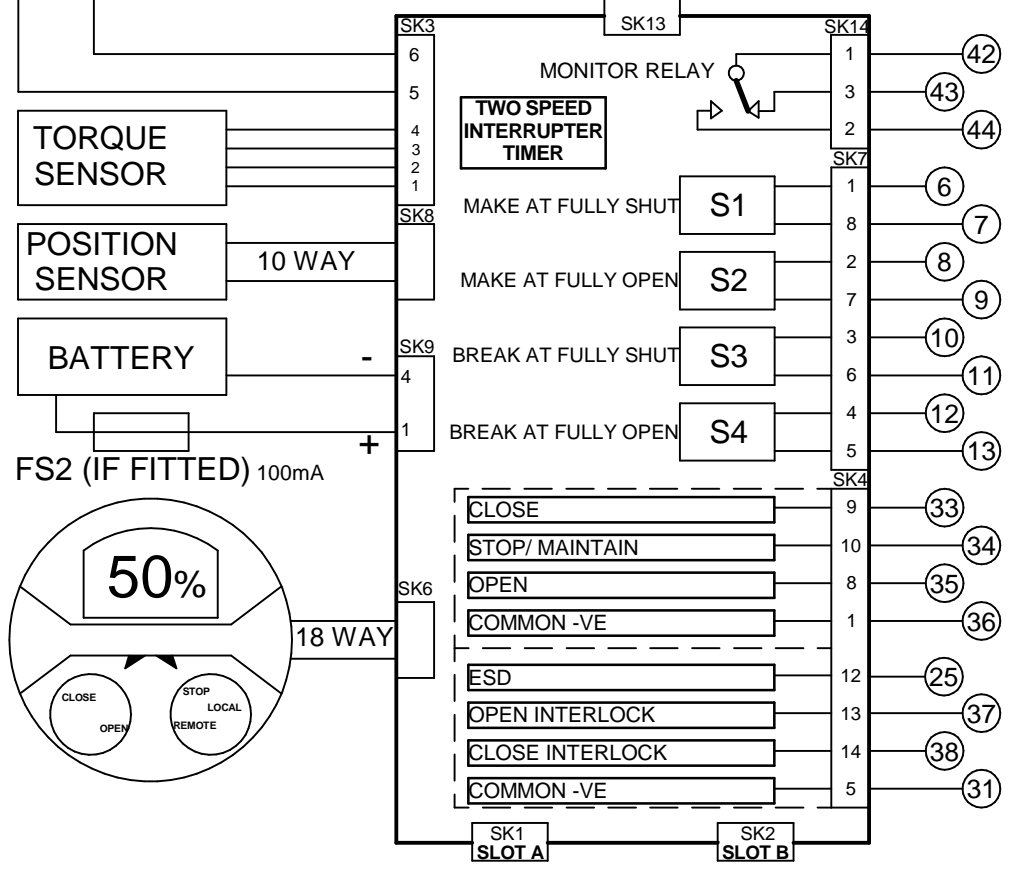

| Iss | Date | Chkd | Revision Details |
|-----|--------|------|------------------|
| 1 | 260418 | JC1 | First Issue. |

www.rotork.com


ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-247-2304

| | | | |
|---------------------------------------|---------------|------------------------|--------------|
| IQ + DUAL MODBUS MODULE + CPT & TIMER | | | |
| Drawn by: PJW | Date : 260418 | Circuit Diagram Number | Issue No |
| Base WD: 100M3001 | Job No : - - | 101M3001 | 1 |
| MI No : - - | | | Sheet 1 of 2 |

| | | | | | | | |
|----|----|----|----|--|--|--|--|
| B1 | C1 | B2 | C2 | | | | |
|----|----|----|----|--|--|--|--|


SLOT A

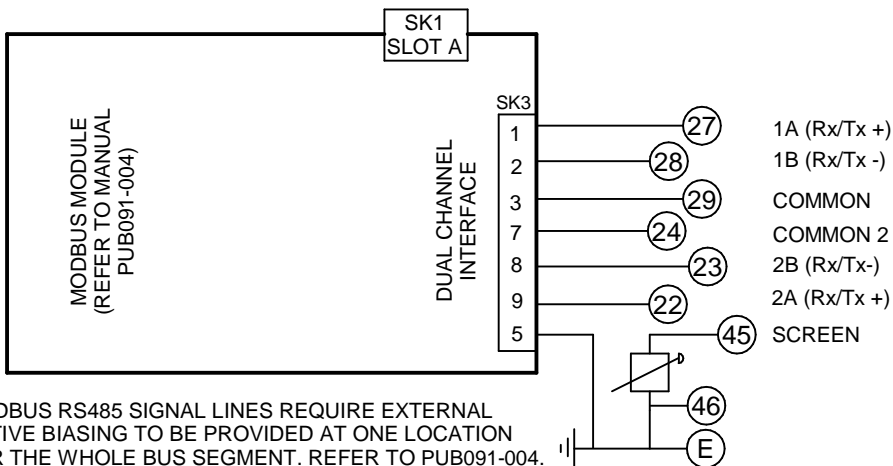

PASSIVE TERMINATION CONTROLLED VIA SETTING IN ACTUATOR CONFIGURATION. REFER TO PUB002-040

MODBUS RS485 SIGNAL LINES REQUIRE EXTERNAL ACTIVE BIASING TO BE PROVIDED AT ONE LOCATION FOR THE WHOLE BUS SEGMENT. REFER TO PUB091-004.

SLOT B

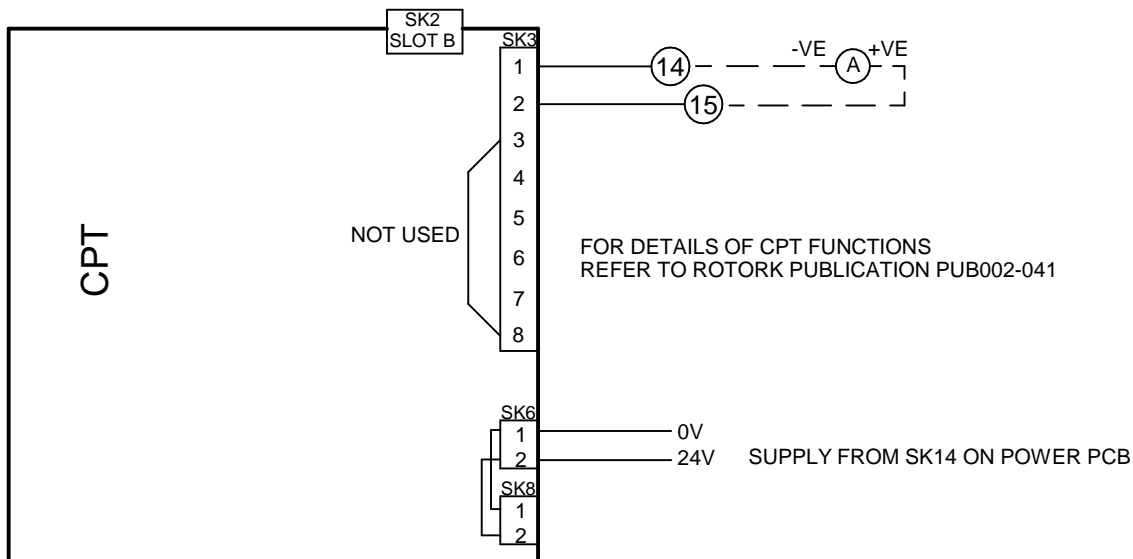

FOR DETAILS OF CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB002-041

NOTES

1.FUSES:

- PS1 is a self-resetting fuse.
- Refer to publication PUB002-039 for approved fuses FS1 and FS2.
- Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:

- For typical remote control circuits refer to:
 - RWS indicated or PUB002-041.
- For DC and AC control, connect -ve/0V to terminal 36.
- (For negative switch / positive common, refer to RWS indicated).
- Control signal threshold voltages:
 - DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.
 - AC: "on" ≥60Vac / "off" ≤40Vac, max 120Vac.
- Control signal duration to be 300ms minimum.
- Maximum current drawn from remote control signals is:
 - 8mA at 24Vdc or 12mA at 120Vac.
- Supply provided on terminals 4 & 5:
 - Intended for remote control.
 - Max external load 5W at 24Vdc / 5VA at 120Vac

3.INDICATION:

- For typical position, status and alarm indication see PUB002-041.
- “S” contacts are user configurable and are shown in their default setting.
- Refer to PUB002-040 for functions and configuration instructions.
- Monitor Relay indicates actuator availability for remote control (shown “unavailable”). It can be configured to exclude local/remote selection.
- Refer to PUB002-040 for monitored functions and configuration instructions.
- Voltage applied to indication contacts must not exceed 150Vac
- Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:

- Battery maintains local and remote “S” contact indication only.
- Refer to installation manual for approved replacement battery types.